我爱LG
大猪赢熊
www.52LG.com

KE850

CE 0168

www.pradaphonebylg.com

P/N : MMBB0222208 (1.1) G

KE850/用户手册

PRADA / LG ELECTRONICS INC.

PRADA

LG

繁體中文
简体中文
ENGLISH

使用手機前, 請務必詳讀本手冊。
並小心保存本手冊, 以備日後參考之用。

繁體中文

KE850 用戶手冊

此手冊中的部份內容可能會因手機軟件或服務供應商而有所不同。

目錄

5 簡介

7 安全與有效使用準則

9 手機部位圖解

9 手機正面

12 顯示資訊

13 屏幕圖標

14 安裝

14 插入智能咭與手機電池

16 為電池充電

16 拔下充電器

17 記憶咭

18 一般功能

18 撥打電話

18 調整音量

18 接聽來電

18 輸入文字

21 選取功能與選項

22 來電功能表

22 通話時

23 會議通話

24 功能表

27 撥號

28 通訊錄

28 搜尋

28 新通訊錄

28 快速撥號

29 群組

29 設定

29 資訊

30 通話記錄

30 所有通話

30 未接來電

30 已撥通話

30 已接來電

30 通話費用

31 數據資訊

32 訊息

32 新文字訊息

32 新多媒體訊息

33 新電郵

34 收件匣

34 電郵郵箱

34 草稿

35 寄件匣

35 已發送

35 留言訊息

35 資訊服務

36 常用範本
36 設定
38 瀏覽器
38 主頁
38 書簽
38 輸入URL
38 設定
40 多媒體
40 我的檔案
40 圖像
41 聲音
41 影片
44 文件
44 其他
45 相機
47 攝錄機
48 語音備忘錄
49 MP3 播放器
49 所有歌曲
50 播放列表
50 設定
51 FM 收音機
52 遊戲及應用功能
52 預設遊戲
52 下載的檔案
52 資訊
52 設定
53 工具
53 鬧鐘
53 計算機
53 世界時間
53 單位轉換器
54 日曆
54 備忘錄
55 設定
55 顯示
55 牆紙
55 背燈
55 時鐘
55 亮度
55 主題
55 網絡名稱
56 情景模式
56 標準
56 靜音
56 震動
56 戶外
56 耳機
57 設定
57 日期及時間
57 省電模式
57 語言

57 通話
58 安全
60 連接
60 飛行模式
61 重設設定
61 記憶體狀態
62 藍芽
62 藍芽開/關
62 裝置列表
62 藍芽設定
62 支援服務
63 智能咭服務
64 配件
65 網絡服務
66 疑難排解
68 技術資料

恭喜您買了 LG 先進輕巧的 Prada 手機,本手機專為利用最新的數碼流動通訊科技而設計。

本用戶手冊內含有關本手機之操作與使用的 重要資訊。請務必仔細詳 讀所有資訊, 以便 能發揮手機的最高性能, 並防止手機遭受任 何損壞或 不當使用。未經本用戶手冊中明確 許可的任何變更或改裝, 將會使您的 產品保養失效。

請閱讀以下簡易的使用準則。 違反這些準則可能會發生危險或觸犯法律。 詳細資料刊於本用戶手冊的正文部份。

警告

- 在飛機內, 應全程關閉手機。
- 駕駛時, 請勿手持手機通話。
- 在加油站、儲油槽、化學工廠或爆破場地附近, 請勿啟動手機。
- 請務必使用指定的電池和充電器, 否則可能會損壞手機。
- 請勿在手濕時操作正在充電的手機。這可能會引致觸電或造成手機嚴重損壞。
- 將手機放在兒童接觸不到的安全地方。 為免小孩誤吞的危險, 請將手機放置於小孩觸摸不到的地方。

注意

- 在醫院內請務必關機: 心律調整器和助聽器等醫療電子裝置可能會受到干擾。
- 緊急撥號可能在某些流動網絡中不能發出。 請勿將手機用作緊急救援的主要通訊工具。
- 請務必使用原裝配件, 以避免對手機造成損害。
- 所有無線電收發器都有可能會對鄰近的電子裝置造成干擾。手機可能會對電視機、收音機、電腦等造成輕微的干擾。
- 耗盡的電池需依法令規定予以處置。
- 請勿自行拆開手機或電池。

無線電波暴露準則

無線電波暴露標準與比吸收率(SAR) 資訊

本手提電話型號KE850 的設計, 已符合暴露在無線電波下使用的安全要求。

此種要求是建基於科學準則, 包括可確保公眾安全的設計標準, 範圍涵蓋各年齡層, 以及他們的各種健康狀況。

- 無線電波暴露準則採用一種測量單位, 即所謂的比吸收率(SAR)。SAR 測試是透過標準方法進行的, 測試當中手機將會在所有操作頻帶中發射最高的認可功率。
- 儘管各LG 型號手機的SAR 值都不一樣, 但是所有產品均符合任何相關的無線電波暴露準則。
- 國際非電離輻射防護委員會(ICNIRP) 建議的SAR 限制為平均每十克組織2瓦特/ 千克。
- 此手機型號透過DASY4測得在耳邊使用時的最高SAR 值是0.838瓦特/千克(10 克)。
- 據電機及電子工程師學會((IEEE) 建議的SAR 限制, 各別國家/ 地區居民適用的SAR 數據為平均每克組織1.6 瓦特/ 千克(例如: 美國、加拿大、澳洲及台灣)。

產品保養與維護

> 警告:
>
> **僅限使用經過審查認可與此特定手機型號配合使用的電池、充電器與配件。使用任何其他類型的配件, 可能會使任何本手機適用的認證或保養失效, 並可能會造成危險。**

- 請勿拆解本手機(請交由合格維修人員為您進行維修)。
- 使用時請遠離電器產品,如電視、收音機或個人電腦。
- 手機應遠離熱源, 如暖爐或爐具。
- 請勿讓手機摔落。
- 請勿使手機遭受機械震動或撞擊。
- 若使用封套或乙烯質護套, 可能會損壞手機表面塗層。
- 使用乾布清潔裝置表面。
  (請勿使用如苯、稀釋劑或酒精等溶劑。)
- 請勿讓手機置於煙霧濃濁或灰塵污染嚴重的環境中。
- 請勿讓手機靠近信用咭或電子車票; 否則會影響磁帶內的資訊。
- 請勿用尖銳物品碰觸屏幕, 否則會損壞手機。
- 請勿讓手機接觸液體或暴露在潮濕的環境中。
- 審慎使用耳機等配件。如非必要, 請勿觸及天線。

有效使用手機

電子裝置

所有手機都可能會因爲受到干擾而影響性能。

- 請勿在未得到批准下在醫療儀器附近使用您的手機。避免將手機放置在起搏器上, 即您的胸口袋。
- 手機可能影響到某些助聽器。
- 輕微干擾可影響電視、收音機、個人電腦等。

道路安全

請檢查當地對行車時使用手提電話的法律規定。

- 駕駛時請勿使用手提電話。
- 請專心駕駛。
- 如果可以的話, 請使用免提聽筒。
- 請按駕駛狀況需要, 撥打或接聽電話前請將汽車停靠路邊。
- 射頻(RF) 能量可能會影響某些汽車電子系統, 例如: 汽車音響、安全設備。
- 如果您的汽車配有氣囊, 切勿讓已安裝的無線設備或手提無線設備阻擋氣囊。有可能因使用不當而失靈或造成嚴重損傷。

爆破區域

爆破作業進行當中, 請勿使用手機。請查明禁止告示並遵守任何規章條例。

具有潛在爆炸危險的環境

- 請勿在加油站使用手機。請勿在汽油及化學品附近使用手機。
- 車上攜有流動電話與配件時, 請勿運載或儲存可燃氣體、液體或爆炸物在車廂內。

飛機上

在飛機上, 無線裝置可能會造成干擾。

- 登機前請先關閉手提電話。
- 未經空中服務人員許可, 在地面停駐時也請勿使用手機。

兒童

將手機放在兒童接觸不到的安全地方。 手機包含微細零件, 如果拆開, 可能造成哽咽危險。

緊急撥號

緊急撥號可能在某些電話網絡不能發出。因此, 您不應該只倚賴手機發出緊急撥號。請向您本地的服務供應商查詢。

電池使用與保養

- 電池充電前, 無須完全放電。與其他系統不同, 本手機所用電池的性能不會受到記憶效應的影響。
- 僅限使用LG 電池和充電器。LG 充電器是經過特別設計, 能增加電池壽命至最大極限。
- 請勿拆解或讓電池發生短路。
- 電池的金屬接點應保持清潔。
- 更換性能不再令人滿意的電池。充電數百次後, 才需要更換電池。
- 已長期未使用的電池, 請先進行充電以取得最大的性能。
- 請勿使電池充電器直接曝曬在陽光下, 或在浴室等濕度高的場所中使用。
- 請勿把電池留置在過熱或過冷的地方, 否則會降低電池性能。
- 若使用類型不當的電池,則有發生爆炸的危險。
- 請根據製造商的指示來處理廢棄電池。 盡量回收利用。 請勿作為家庭廢棄物處理。

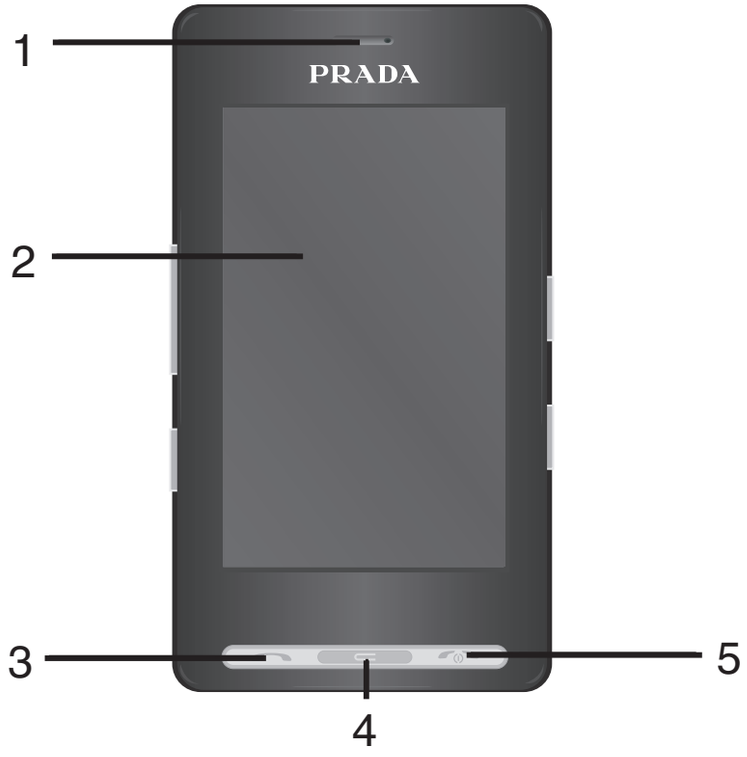

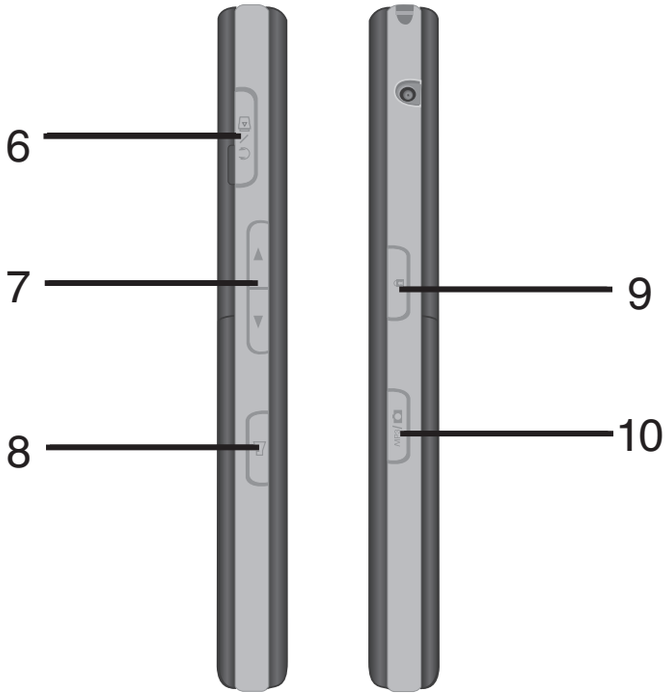

手機正面

1. 耳機
2. 主屏幕
   - 上方: 訊號強度、電池電量和其他功能
   - 下方: 功能表/撥號/訊息/通訊錄指示。
3. 發送鍵
   - 撥打電號碼及接聽來電。
4. 清除鍵
   - 每按一下刪除一個字元。
   - 用此鍵可返回前一個畫面。
5. 結束/電源鍵
   - 結束或拒接通話。
   - 開啟/關閉手機。
6. 充電器/纜線/免提接頭
7. 側邊按鍵
   - 在備用畫面中: 按鍵音量
   - 在功能表中: 上下捲動
   - 在通話中: 耳機音量
8. 情景模式鍵
   - 長按可啟用/停用震動模式。
   - 快按此鍵可直接進入情景模式功能表。
   - 在按鍵被鎖定時長按此鍵可解鎖鍵盤。
9. 鍵盤的鎖定/解鎖按鍵
10. MP3/相機鍵
    - 快按此鍵可進入 MP3 功能表。
    - 按住此鍵可啟動相機。

手機背面

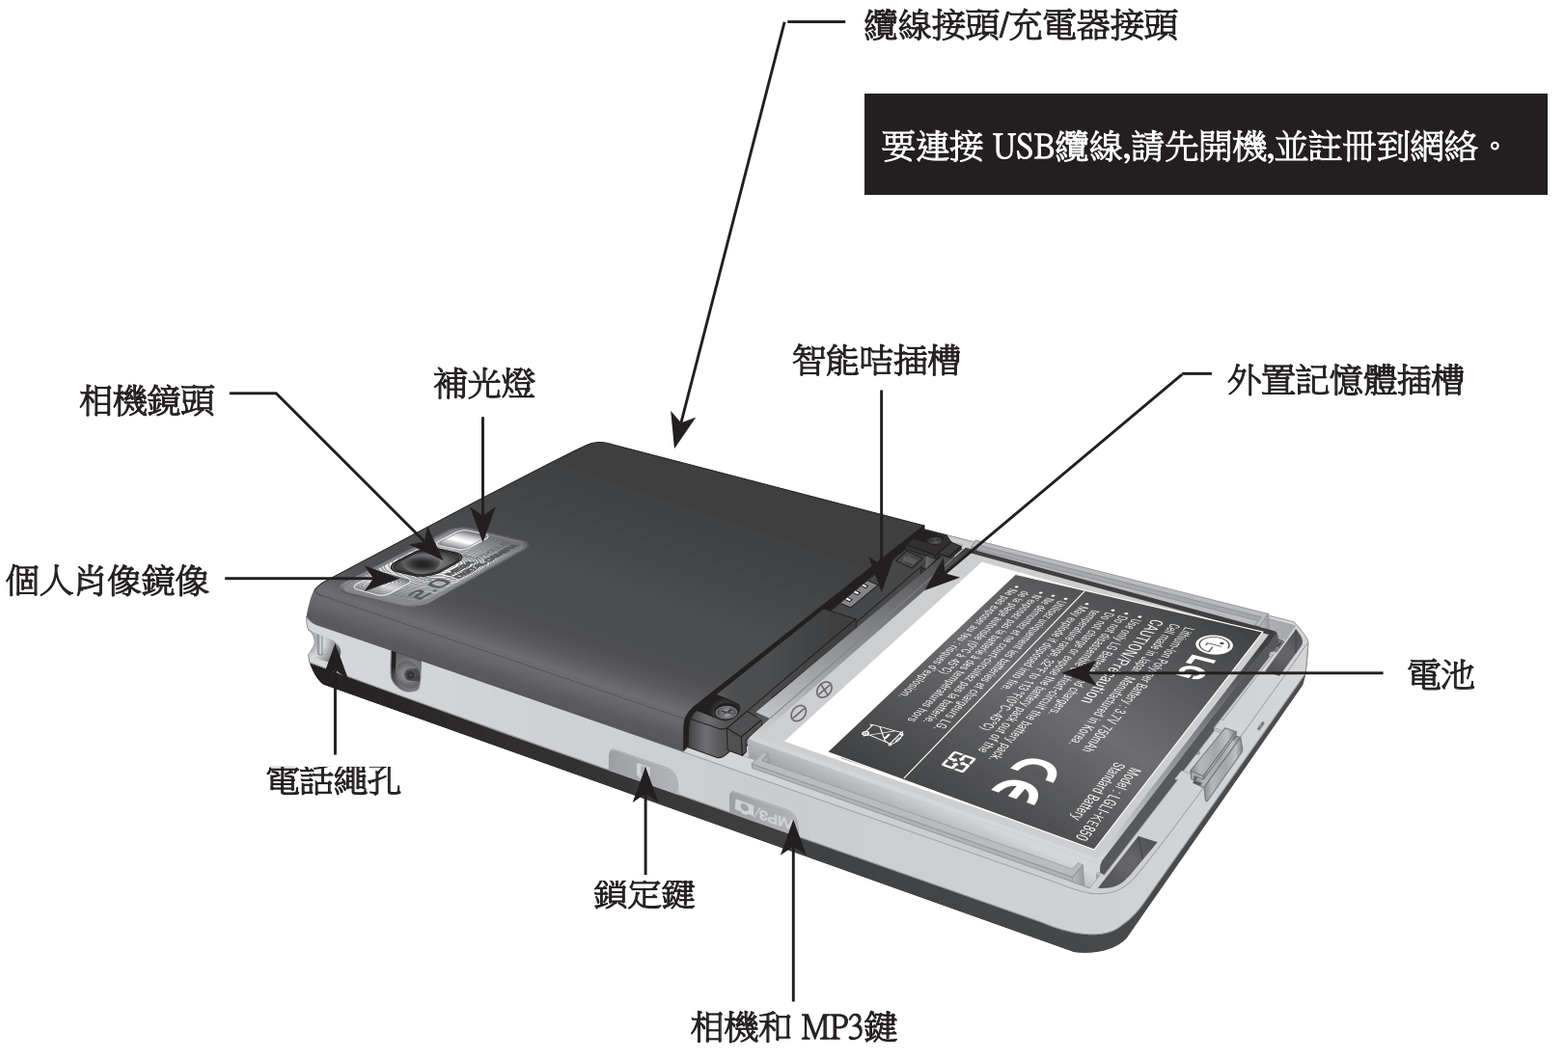
纜線接頭/充電器接頭
要連接 USB纜線,請先開機,並註冊到網絡。
相機鏡頭
補光燈
智能咭插槽
外置記憶體插槽
個人肖像鏡像
電池
電話繩孔
鎖定鍵
相機和 MP3鍵

- 本手機 LCD 畫面上的按鍵均為觸控鍵。
- 使用手機前,務必認真閱讀「觸控鍵注意事項」。

觸控鍵注意事項

1. 確保雙手潔淨、乾爽。
   - 在潮濕環境中,請抹乾雙手或觸控鍵表面上的濕氣。

2. 無需用力按下觸控鍵亦可正常運作。
   避免產品受到嚴重撞擊,以防觸控鍵的感應器受損。
3. 使用指尖準確按在所需觸控鍵上,注意不要錯按其他功能的按鍵。
4. 當桌面及觸控鍵燈都關閉時,按下觸控鍵不會開啟桌面燈。 按 鍵,桌面燈就會開啟 (觸控鍵燈關閉時,觸控鍵不會運作)。
5. 若手機套或膠套蓋著觸控鍵,觸控鍵可能無法正常運作。 同時,戴著手套使用手機時,觸控鍵亦可能無法正常工作。
6. 請保持觸控鍵表面遠離金屬及其他導電物料,以防因接觸這些物料而產生故障。
7. 本手機不可用原子筆或觸控筆來選擇功能表。 若使用原子筆或觸控筆來選擇功能表,則功能表將不能正常啟用。 僅能用手指進行操控。
8. 在悶熱而潮濕的環境中,觸控鍵無法正常啟用。

顯示資訊

點按一下牆紙「類比時鐘」,便可設定鬧鐘。 類比時鐘將設為預設模式。

圖示	說 明
	用於直接進入功能表。
	用於撥打號碼或發送文字/多媒體訊息。
	用於發送文字/多媒體訊息和檢視收件匣中的訊息。 您可以啟用與訊息相關的各種功能。
	用於存取通訊錄列表。

屏幕上將會顯示多種圖標, 如下所示:

屏幕圖標

圖示/ 指示器	說 明
	顯示網絡訊號的強度。*
	您正在使用 GPRS 。
	表示您正在使用 EDGE 服務。
	顯示您不在服務區域內。
	表示您正在使用漫遊服務。
	鬧鐘已設, 並已啟動。
(空) (已滿)	顯示電池的狀態。
	顯示您接收到一則文字訊息。
	顯示您接收到一則語音訊息。
	顯示訊息匣已滿。

圖示/ 指示器	說 明
	情景模式設定為震動。
	情景模式設定為標準。
	情景模式設定為戶外。
	情景模式設定為靜音。
	情景模式設定為耳機。
	顯示您已轉接一個來電。
	顯示手機正在存取 WAP。
	顯示您已啟用飛行模式。
	顯示您已啟用藍芽。

*** 通話素質將因網絡涵蓋範圍而有所變化。當訊號強度低於兩格, 可能會出現靜音、斷線或音質不佳等情況。請將網絡訊號強度視為通話素質指示器。當訊號強度為零時, 代表已超出網絡範圍之外, 在此情況下, 您將無法存取任何網絡服務(包括通話、訊息等)。**

插入智能咭與手機電池

取出電池前, 請先確定電源已經關閉。

1. 取下電池蓋。

壓下電池釋放閂,從手機底部提起電池蓋。

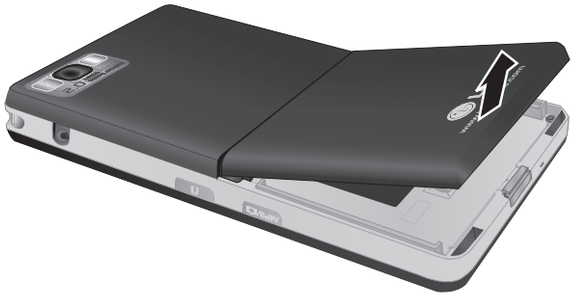

在電源開啟時取出手機電池可能會導致手機發生故障。

2. 取出電池。

握住電池上方邊緣, 將電池拿出電池盒外。

3. 安裝智能咭。

將智能咭滑入智能咭固定座。 請確保智能咭已正確插入,且咭上的金屬接觸點面向下方。 要取出智能咭,請在輕壓後向反方向拉出。

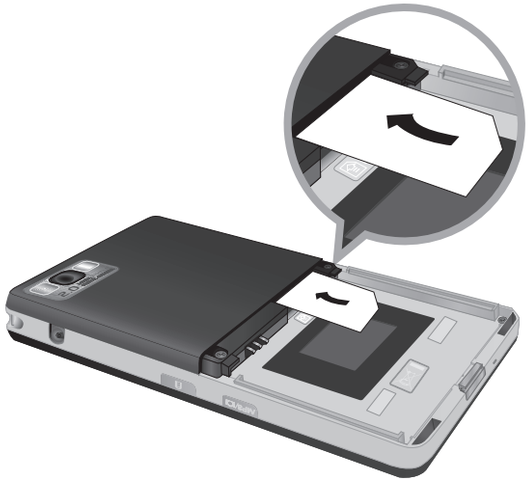

插入智能咭

取出智能咭

智能咭金屬接點容易因刮傷而損壞。拿取智能咭時請特別注意。請依照智能咭所附之說明書進行安裝。

4. 安裝電池。

先將電池底部插入電池盒下方邊緣。 請確保電池觸點對準手機觸點。 將電池上半部壓入定位。 切勿強行壓入電池。

5. 裝回電池蓋。

將電池蓋放到手機之上,按下直至釋放閂發出卡嗒聲。

為電池充電

連接充電器到手機前,應先查看是否裝有電池。

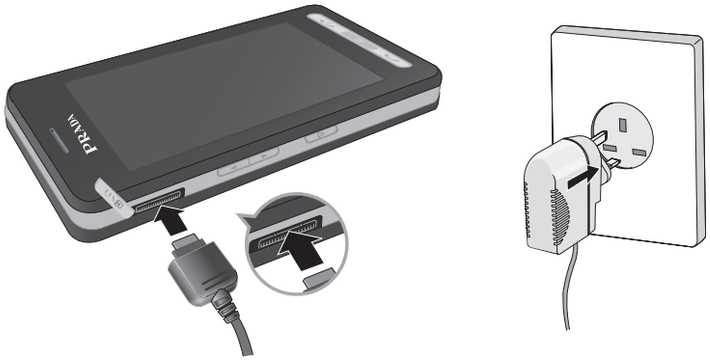

1. 在第一次使用手機前, 請確保電池完全充電。
2. 讓插頭上的箭咀朝下,然後將充電器的插頭插入手機側面的插孔。
3. 將充電器的另一端連接至電源插座。 只可使用手機隨附的充電器。
4. 充電完畢後, 電池圖標的移動式指示列將會停止動作。

- 請勿強力推進接頭,這樣可能會損壞手機及/或旅行充電器。
- 若您是在其他國家/地區使用電池充電器,請使用符合當地規格的轉接頭配件。
- 在充電期間, 請勿移除您的電池或智能咭。
- 如更換使用不正確類型的電池則有爆炸的危險。請依據指令予以處置舊電池。

- 如遇上雷暴,請從電源和手機上拔除充電器,以防觸電或失火。
- 請勿讓動物牙齒、指甲等尖銳物接觸電池。這可能會有失火的危險。

拔下充電器

根據圖示把充電器從手機拔出。 拔下充電器時,確保握住插頭,而非電源線。

記憶咭

如下圖所示方式,將記憶咭滑入插槽,直至完全插入為止:

安裝記憶咭

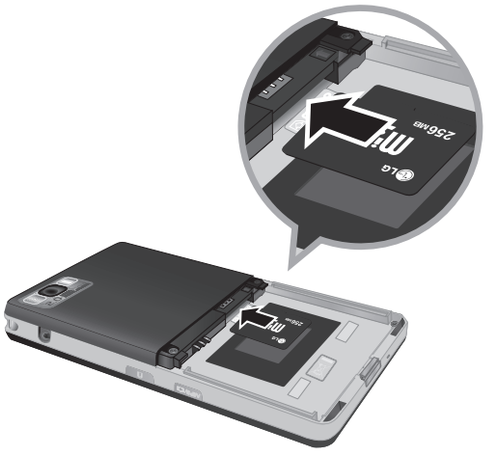

將金屬觸片朝下且滑入記憶咭。

取出記憶咭

1. 用指尖將記憶咭推入插槽, 以啟動彈出機械裝置。
2. 小心地從插槽抽出記憶咭。

取出記憶咭

- 僅在有需要時才可取出或插入記憶咭, 因為取出/插入記憶咭可能會引致故障。
- 插入外置記憶咭時, 如果出現紅色圖示, 請取出並再次插入記憶咭。(如果圖示在再次插入後仍然顯示為紅色, 記憶咭很可能已損毀, 須更換另一張。)
- 使用外置記憶咭時 (儲存、複製、移除、初始化、播放等等) 取出記憶咭或關閉手機可能會清除或初始化已儲存的檔案, 這樣有可能會令記憶咭嚴重受損或引致手機故障。
- 建議在手機內初始化記憶咭。 記憶咭可提供部份用於外置記憶檔案的系統空間, 所以某些容量可能在記憶咭初始化後仍然存在。
- 建議為儲存於記憶咭內的資料進行備份。
- 一些記憶咭與手機不相容,詳情請諮詢製造商。

撥打電話

1. 確定手機已經開啟。
2. 在備用模式中,點按 圖示。
3. 輸入電話號碼, 包括區碼。要在屏幕上編輯號碼, 按 。
   - 按 鍵或點按 ,您可以返回到前一個功能表。
4. 按 鍵或點按 可進行撥號。
5. 要結束通話時, 按 鍵。

撥打國際電話

1. 按住 鍵可輸入國際地區號碼。 “+” 鍵可取代國際撥號前碼。
2. 輸入國碼、區碼和電話號碼。
3. 按 鍵或點按 可進行撥號。

結束通話

要結束通話請按 鍵。

透過通訊錄撥打電話

您可以將經常撥打的姓名與電話號碼儲存在智能咭和手機記憶體中, 即通訊錄。您可以透過查看通訊錄中的名稱進行撥號。有關通訊錄的詳細資訊, 請參閱第28頁。

調整音量

通話過程中,可使用手機側面上/下鍵來調節音量。

接聽來電

接聽來電時,手機會發出鈴聲且動畫手機圖示會顯示在畫面上。 如果手機可以識別來電者,則會顯示來電者的電話號碼(或名稱/圖片,若已儲存到通訊錄列表中)。

1. 按 鍵或左軟鍵可接聽來電。
2. 要結束通話, 請按 鍵。

鎖定觸控畫面和按鍵

按 鍵後,可啟用按鍵鎖定模式。

訊號強度

如您身處建築物內, 靠近窗邊將可改善接收情況。查看手機屏幕上的訊號指示 ( ), 便可得知訊號強度。

輸入文字

使用觸控畫面的按鍵,您可輸入英數字元。 例如,在通訊錄中儲存名稱、編寫訊息和在日曆中排程事件,都需要輸入文字。 本手機提供以下文字輸入法。

部份欄位只可使用一種文字輸入模式 (例如通訊錄欄位中的電話號碼)。

T9 模式

使用此模式時, 每個字母只要按一下按鍵即可輸入單字。鍵盤上每個按鍵都代表一個以上的字母。T9 模式會自動將您按下的按鍵與內建語文字典進行校對, 然後決定正確的單字, 因此按鍵次數較傳統ABC 模式少。手機預設為T9 關閉模式。

要進入 T9 模式,請點按 ,然後選擇 T9,T9 即開啟。

ABC 模式

使用此模式時, 按下標示所需字母的按鍵一次、兩次、三次或四次, 直至顯示所需字母便成。

123 模式 (數字模式)

只要按一次按鍵即可輸入一個數字。要把文字輸入欄的輸入模式變更為 123 模式,請按 鍵直到 123 模式顯示在畫面的右上角。

您可以透過長按 返回到前一個字母模式。

符號模式

此模式讓您可以輸入特殊字元。

變更文字輸入模式

1. 進入允許輸入字元的欄位後, 在屏幕右上角可看到文字輸入模式指示器。
2. 如果您想變更模式,點按 可瀏覽可用模式。

您可以透過長按 返回到前一個字母模式。

使用 T9 模式

T9 預測文字輸入模式讓您可以使用最少的按鍵次數輕鬆輸入單字。當您按每個按鍵時, 手機會開始根據內建字典顯示手機認為您要鍵入的字元。新增字母後, 單字會隨之變更以顯示字典中最相近的候選字。

您可以從功能表選項 中選擇不同的 T9 語言。手機預設T9 關閉模式。

1. 在 T9 預測文字輸入模式中,點按按鍵 2 至 9 開始輸入文字。

- 單字會隨著鍵入的字母變更, 在完成輸入前, 請勿理會屏幕顯示的文字。

例如: 按 4 6 6 3 可鍵入 Good。

- 如果單字選擇列表中沒有所需的單字, 請使用ABC 模式新增單字。

2. 在編輯或刪除任何按鍵輸入之前, 輸入整個單字。
3. 按 0+ 鍵可在每個單字後加入空格。

要刪除字母, 請按 。按住 可連續清除字母。

要不儲存輸入內容即結束文字輸入模式, 請按 。手機將會回到備用畫面。

使用 ABC 模式

使用 2 至 9 鍵輸入您的文字。
1. 點按標有所需字母的按鍵:
- 按一次選擇第一個字母。
- 按兩次選擇第二個字母,如此類推。

2. 要插入空格,請點按一下 0+ 鍵。 要刪除字母,請按 鍵。 按住 可連續清除字母。

如果在編寫訊息時,選擇「附加」功能表,您可以附加符號、圖像、聲音、文字範本和通訊錄。

使用 123 (數字) 模式

您可以使用 123 模式在文字訊息中輸入數字 (例如,電話號碼)。
在手動切換回適當的文字輸入模式之前,點按對應於所需數字的按鍵。

您亦可透過按住所需按鍵在字母模式下插入數字。

使用符號模式

您可以使用符號模式輸入符號或特殊字元。
要輸入符號, 請按 鍵。

觸控畫面由以下功能表組成:

標題頂部的功能表圖示會視乎主題而有所不同。(預設模式為「PRADA主題」。)

標題功能表

圖示	說明
	通話功能表
	多媒體功能表
	工具功能表
	設定功能表

本手機提供一些通話時可以使用的控制功能。要在通話時存取這些功能, 請按左軟鍵 [選項]。

啓動按鍵鎖定後,您可選擇靜音鍵。

通話時

通話時手機屏幕上顯示的功能表, 與備用屏幕上顯示的預設主功能表不同,其選項如下。

揚聲器

通話過程中,按「鎖定」鍵,然後按 鍵即可啟動揚聲器功能。

撥打第二個電話(取決於網絡)

您可以從通訊錄中選取所需的號碼,撥打第二個電話。 通話過程中,如果按情景模式鍵,您可以啟動撥號盤。

在兩個通話之間切換

要在兩個電話間轉換,請在按 鍵或 後選取「切換」。

接聽來電

要在手機響鈴時接聽來電,只需按 鍵。 通話過程中,手機也可以提示您其他的來電。 耳機中會響起提示音,而且畫面上也會顯示有來電在等候。
此功能,即所謂的來電等候,僅當受網絡支援時可用。
若已開啟「來電等候」功能,按左軟鍵可保留第一個通話並接聽第二個通話。

拒接來電

直接按 鍵即可不用接聽而拒接來電。
通話中按 鍵即可拒接來電。

將麥克風靜音

通話過程中,按底端右側的 [靜音] 鍵可將麥克風靜音。 按 [取消靜音] 可取消手機靜音。 手機被靜音時, 來電者無法聽到您的聲音, 不過您仍可聽到他們的聲音。

通話中的 DTMF 音頻

要在通話中啟用 DTMF 音頻 (例如:透過自動交換機使用手機),請先點按 [選項] 然後選取 [發送 DTMF] – [DTMF 開啟]。 選擇DTMF 關閉來停用DTMF 音頻。DTMF 音頻正常為開啟。

如果在通話過程沒有按任何按鍵,幾秒鐘後屏幕和鍵盤上的背燈即會關閉。 要開啟背光,您只需按任何鍵。 背燈關閉後不會傳送 DTMF。

按側面的 ,可在通話中啟動按鍵。

會議通話

若您的網絡服務供應商能支援會議通話或會議服務, 此功能使您可同時與超過一位來電者通話。要啟動會議通話, 您必須至少有一個電話正在通話中以及一個電話保留中, 同時這兩個電話都已被接聽。啟動會議通話之後, 啟動者可加入、結束或抽出(即從會議通話中抽出, 但仍與您連線) 任何一個電話。這些選項都包含在通話中目錄內。一組會議通話可容許最多5 位通話者。通話開始之後, 您將擁有此會議通話的控制權, 只有您可加入其他通話者到這組會議通話。

撥打第二個電話

您可以在通話時撥打第二個電話,請輸入其電話號碼後按 . 當第二個電話接通後,第一個電話將會自動保留,且可透過 在兩個電話之間切換。

按側面的 ,可在通話中啟動按鍵。

啟動會議通話

要建立會議通話, 將一個電話保留且接聽目前電話時, 按左軟鍵後選取會議通話的加入功能表。

啟動保留中的會議通話

要啟用保留會議通話,請按 鍵。 或按左軟鍵 [選項] 後選取會議/保留通話。 其他保留中的使用者仍會保持連線。 要返回會議通話模式,請點按 [選項] 後選取 「會議」。

將另一個電話加入會議通話

要將某個通話新增到現有的會議通話中,請點按左軟鍵,然後選取「會議」中的「加入」。

在會議通話中進行私人通話

要與會議通話中的某個來電者進行私人通話,請先使其號碼顯示在畫面上,然後點按左軟鍵。 選取會議通話的私人通話功能表來保留所有其他來電。

結束會議通話

透過按 鍵,可中斷會議通話中目前顯示的來電者。

此圖示表示與來電、訊息和瀏覽器相關的功能表。

撥號

通訊錄

1 搜尋
2 新通訊錄
3 快速撥號
4 群組
5 設定
6 資訊

通話記錄

1 所有通話
2 未接來電
3 已撥通話
4 已接來電
5 通話費用
6 數據資訊

訊息

1 新文字訊息
2 新多媒體訊息
3 新電郵
4 收件匣
5 電郵郵箱
6 草稿
7 寄件匣
8 已發送
9 留言訊息
10 資訊服務
11 常用範本
12 設定

瀏覽器

1 主頁
2 書簽
3 輸入URL
4 設定

此圖示表示與 MP3、相機、視像攝錄機及 FM 收音機等多媒體功能相關的功能表。

我的檔案

1 圖像
2 聲音
3 影片
4 文件
5 其他

相機

攝錄機

語音備忘錄

MP3 播放器

1 所有歌曲
2 設定

FM 收音機

遊戲及應用功能

1 預設遊戲
2 下載的檔案
3 資訊
4 設定

此圖示表示與使用工具相關的功能表。

鬧鐘

計算機

世界時間

單位轉換器

1 貨幣
2 面積
3 長度
4 重量
5 溫度
6 體積
7 速度

日曆

備忘錄

此圖示表示與裝置設定相關的功能表。

顯示

1 牆紙
2 背燈
3 時鐘
4 亮度
5 主題
6 網絡名稱

情景模式

1 標準
2 靜音
3 震動
4 戶外
5 耳機

設定

1 日期及時間
2 省電模式
3 語言
4 通話
5 安全
6 連接
7 飛行模式
8 重設設定
9 記憶體狀態

藍芽

1 藍芽開/關

2 裝置列表

3 藍芽設定

4 支援服務

智能咭服務

此功能表會按智能咭和網絡服務而異。

撥號 (功能表 1)

此圖示表示與通話相關的功能表。 如果選擇此圖示,可撥打電話和發送訊息。
您可以在備用模式下,透過按相應的圖示直接進入撥號、訊息和通訊錄功能表。
要撥打電話或接聽來電,請確保手機已開啟。

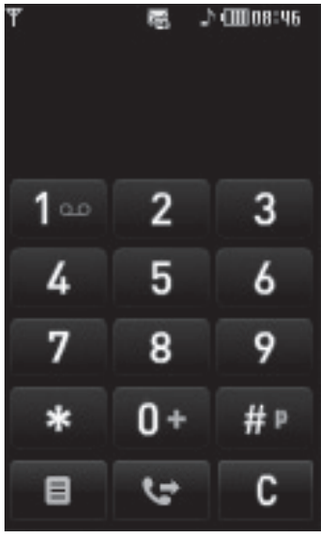

開啟手機並輸入 PIN 碼後(是否需要輸入,取決於 要求輸入PIN碼設定),手機會自動搜尋智能咭註冊的網絡。
要撥打電話,請點按 圖示,然後進入撥號功能表。
當按鍵顯示在畫面上後,請輸入電話號碼。

通訊錄 (功能表 2)

1. 在備用模式下,點按 圖示或功能表圖示。
2. 選擇通訊錄功能表。

搜尋 (功能表 2.1)

1. 在通訊錄功能表中,按「搜尋」。
2. 您可以檢視儲存的通訊錄列表。
3. 如果要編輯、刪除或複製某個項目,請選擇 圖示。 以下功能表將會出現。

- **新訊息:** 找到所需號碼後,您即可向選定號碼發送文字/多媒體訊息或電子郵件。
- **刪除:** 您可刪除一項記錄。
- **編輯:** 您可以使用導覽鍵編輯姓名、號碼、群組、特徵及圖片 。
- **通訊錄:** 您可以新增項目。
- **傳送方式:** 您可以發送通訊錄的數據到其他兼容藍芽的裝置中。 您也可透過文本模板/多媒體/電郵/藍芽發送儲存於通訊錄中的項目。
- **複製至智能咭/手機:** 您可以從智能咭或手機記憶體中複製項目。
- **多重刪除:** 您可以同時刪除多個項目。

新通訊錄 (功能表 2.2)

您可利用此功能加入新的通訊錄記錄。手機記憶庫最多可容納1000 項記錄。 智能咭記憶體容量視不同智能咭而異。 字元數量因智能咭而異。

1. 選擇新通訊錄。
2. 選取要儲存的記憶體: **智能咭**或**手機**。
   a. 選擇空名稱欄輸入名稱後,點按 [確定]。
   b. 輸入號碼,然後按 [儲存]。

名稱長度限制與號碼長度限制均取決於智能咭類型。

   c. 您可以透過捲動列設定項目群組。
   d. 您可以選擇一種鈴聲。
   e. 透過捲動列,可為項目設定字元和圖片 。

步驟 c, d, e 只能在號碼儲存在手機記憶體時使用。

快速撥號 (功能表 2.3)

您可以指定數字鍵 2 至 9 的任何一鍵作為姓名列表內的一項記錄。 之後透過按住此鍵直接撥打電話。將號碼指定為快速撥號後,您可變更及刪除項目。 您也可以發送訊息到此號碼。

1. 選擇快速撥號。
2. 如果您要加入快速撥號, 請選擇(空)。然後, 您可以在通訊錄中搜尋姓名。
3. 選擇底行中間的 [確定]。

群組 (功能表 2.4)

您可以依據每個群組列出成員。 您總共可建立7 個群組。

- **設定群組鈴聲:** 您可以按照群組設定來電鈴聲。
- **設定群組圖示:** 您可以設定每個群組的圖示。
- **新增成員:** 您可以新增成員到所選群組中。
- **刪除成員:** 可讓您從群組中移除成員。
- **重新命名:** 您可以更改群組名稱。
- **刪除全部:** 可讓您移除群組中的所有成員。

設定 (功能表 2.5)

1. 選擇設定。

- **複製全部**

  您可以將智能咭的項目複製至手機記憶體,相反亦然。

2. 選擇複製全部
   - **智能咭至手機:** 可以將智能咭的所有項目複製至手機記憶體中。
   - **手機至智能咭:** 可以將手機記憶體中的所有項目複製至智能咭中。

- **刪除全部**

  您可刪除智能咭或手機中的所有項目。 此功能需要安全密碼。

資訊 (功能表 2.6)

- **服務撥號號碼**

  使用此功能存取網絡商提供的特定服務列表 (如果受智能咭支援)。

- **本手機號碼**

  您可以檢視自己的號碼。 若使用其他智能咭,您可透過 <新增> 來儲存新號碼。

- **記憶體狀態**

  您可查看智能咭或手機記憶體的狀態。

- **名片**

  您可製作名片。 如果選擇「編輯」,您可建立新的名片。

通話記錄 (功能表 3)

如果網絡支援服務區域內的來電線路識別 (CLI),則您可以查看未接聽、已接聽和撥出的通話。
號碼與名稱 (如果有的話) 會和來電的日期與時間一起顯示。您也可以查看通話時間。

所有通話 (功能表 3.1)

您可檢視所有撥出電話或來電的列表。

未接來電 (功能表 3.2)

使用此選項可以查看最近40 個未接聽電話。您也可以:

- 查看號碼(如果有的話) 及撥打該號碼, 或將其儲存在通訊錄中。
- 為該號碼輸入新的名稱並將兩者同時儲存在通訊錄中。
- 使用此號碼傳送訊息。
- 從列表中刪除此個電話。

已撥通話 (功能表 3.3)

使用此選項可以查看最近 40 個撥出電話 (已撥出或嘗試撥出)。您也可以:

- 查看號碼 (如果有的話) 及撥打該號碼, 或將其儲存在通訊錄中。
- 為該號碼輸入新的名稱並將兩者同時儲存在通訊錄中。
- 使用此號碼傳送訊息。
- 從列表中刪除此個電話。

已接來電 (功能表 3.4)

使用此選項可以查看最近 40 個來電。您也可以:

- 查看號碼 (如果有的話) 及撥打該號碼, 或將其儲存在通訊錄中。
- 為該號碼輸入新的名稱並將兩者同時儲存在通訊錄中。
- 使用此號碼傳送訊息。
- 從列表中刪除此個電話。

通話費用 (功能表 3.5)

通話時間

您可以查看來電與已撥電話的通話時間。您也可以重設通話計時器。
可以使用的計時器如下:

- **最後通話:** 上次通話時間。
- **所有通話:** 從上次重設計時器算起, 所有撥打或接聽來電的總通話時間。
- **已撥通話:** 已撥通話的通話時間。
- **已接來電:** 已接來電的通話時間。

通話費用

讓您查詢最後通話及所有通話所需的費用。

設定

在此功能表中,輸入 PIN2 碼後,您可變更設定。

- **設定限額:** 這項網絡服務可讓您按照選取的計費單位來限制您的通話費用。

- **設定收費率:** 您可以設定貨幣類型及單位價格。請聯絡您的服務供應商以取得計費的單位價格。如要在本功能表中選擇貨幣或單位, 您必須有PIN2碼。
- **自動顯示:** 這項網絡服務可讓您自動查看您最後通話的費用。如果您在自動顯示功能表中選擇開啟, 您可以在通話結束時查看最新的費用記錄。

數據資訊 (功能表 3.6)

您可查詢已在GPRS 網絡傳送的數據量。而且, 您亦可查看網上連接時間。

數據時間 (功能表 3.6.1)

您可以查看上一節段及所有節段的時間。您也可以重新設定節段計時器。

數據用量 (功能表 3.6.2)

查看已發送、已接收、全部及重設設定。

訊息 (功能表 4)

本功能表中包含與 SMS (短訊服務)、MMS (多媒體訊息服務)、電郵、語音信箱,以及網絡服務訊息等相關功能。

新文字訊息 (功能表 4.1)

輸入及編輯文字訊息、查看訊息頁數。

1. 進入「訊息」功能表。
2. 如要編寫新訊息,請選取「新文字訊息」。
3. 要更方便輸入文字, 請使用T9 語言輸入法。
4. 若點按 圖示,您可檢視以下子功能表:

- **附加:** 您可插入符號、圖像、聲音、文字範本、通訊錄項目或名片 。
- **T9:** 您可開啟或關閉 T9 模式。
- **編寫語言:** 您可選擇語言。
- **新 T9 文字:** 使用 T9 模式可新增文字。
- **儲存至草稿:** 您可將訊息儲存在草稿中。
- **清除文本:** 您可刪除所有文字。
- **退出:** 若在編寫訊息時選擇「結束」,您即可在完成訊息後返回訊息功能表。 您輸入的訊息將不會被儲存。

此手機支援 EMS 第 5 版,可以發送彩色圖片、聲音、文字造型等。 如果對方的手機不支援此類選項,則無法接收您以正確方式傳送的圖片、聲音或文字造型。

新多媒體訊息 (功能表 4.2)

輸入並編輯多媒體訊息、查看訊息大小。

1. 進入「訊息」功能表。
2. 如要編寫新訊息,請選取「新多媒體訊息」。
3. 您可建立新訊息或選擇已建立的多媒體訊息範本。

可附加到多媒體訊息中的最大可用檔案大小為 300 kb。

「發給」標籤中的選項功能表

- **發送:** 您可將多媒體訊息發送到多個收件人、排列訊息的優先順序或稍後發送。
- **儲存:** 您可以儲存多媒體訊息至草稿或作為範本。
- **通訊錄:** 您可將通訊錄附加到訊息中。
- **最近傳送訊息號碼:** 您可使用最近傳送訊息號碼。
- **設定:** 您可配置設定,以發送訊息。
- **退出:** 返回訊息功能表。

所有訊息都會自動儲存到寄件匣資料夾內,即使在傳送失敗時也不例外。

「主題」標籤中的選項功能表

- **發送:** 您可將多媒體訊息發送到多個收件人、排列訊息的優先順序或稍後發送。
- **儲存:** 您可以儲存多媒體訊息至草稿或作為範本。
- **退出:** 返回訊息功能表。

「投影片」標籤中的選項功能表

- **附加:** 您可往訊息中插入符號、圖像、影片、聲音、範本和其他內容。
- **預覽:** 預覽已輸入的多媒體訊息。
- **儲存:** 您可以儲存多媒體訊息至草稿或作為範本。
- **編輯標題:** 修改選定的多媒體訊息。
- **投影片播放時間:** 您可為投影片設定計時器。
- **退出:** 返回訊息功能表。

如果在編寫多媒體訊息時選擇了圖片 (50K),則約需 5 秒鐘的載入時間。 在載入期間您不可進行任何按鍵操作。 載入完成後,您方可編寫多媒體訊息。

新電郵 (功能表 4.3)

若要發送/接收電郵,您必須建立一個電郵帳戶。

1. 您可以在「收件人」與「副本」中輸入多達 20 個電郵地址。
   要訣: 要輸入「@」,點按 並選擇「@」。
2. 輸入電郵主題並點按「確定」。

帳戶 (功能表 4.3.1)

您可以透過選擇「新帳戶」建立電郵帳戶。 用 可設定下列值。

- **設為預設:** 您可以選擇一個電郵帳戶為預設值。
- **編輯**
  - **帳戶名稱:** 您可編輯電郵帳戶名稱。
  - **電郵地址:** 輸入由服務供應商提供給您的電郵地址。
  - **我的名稱:** 輸入用戶名稱。
  - **內送郵件伺服器:** 輸入接收電郵的 POP3 或 IMAP4 位址。
  - **用戶名稱:** 輸入您的電郵 ID。
  - **密碼:** 輸入您的電郵密碼。
  - **外寄郵件伺服器:** 輸入傳送電郵之電腦的 SMTP 位址及連接埠號碼。

儲存: 您可儲存電郵設定。

進階設定

- **協定類型:** 選擇您的協定類型。(POP3/IMAP4)
- **接收大小上限:** 設定可接收的檔案大小上限 (100KB/200KB/300KB)。
- **儲存至伺服器:** 選擇「開啟」可將檔案儲存到伺服器。
- **附加名片:** 選擇「開啟」可將名片加入到您的電郵訊息。
- **回覆電郵地址:** 可設定回覆電郵地址。
- **內送埠號碼:** 輸入接收電郵的 POP3 或 IMAP4 連接埠號碼。
- **外寄埠號碼:** 輸入傳送電郵之電腦的 SMTP 位址及連接埠號碼。
- **外寄郵件核證:** 傳送郵件時,您可以選擇是否設定核證。
- **外寄伺服器 ID:** 輸入您的電郵 ID。
- **外寄伺服器密碼:** 輸入您的電郵密碼。

網絡設定 (功能表 4.3.2)

網絡設定是用於連接至互聯網的網絡資訊。
一些網絡商在手機記憶體內已儲存預設的設定檔。

名片 (功能表 4.3.3)

您可以自訂個人名片 。

- 每個電郵帳戶最多可儲存 20 封郵件 (五個帳戶共 100 封郵件)。 收件匣資料夾最多可儲存 20 封郵件,草稿及寄件匣最多 5 封郵件,已傳送郵件資料夾中最多 10 封郵件。如果「草稿」、「寄件匣」或「已發送」資料夾已滿,而您嘗試將新郵件存入其中一個資料夾,手機將自動刪除最先儲存的郵件。
- 發出的郵件連附件在內最大大小為 100 kb,接收的郵件最大大小為 300 kb。如果收到的郵件有 5 個以上的附件,只有當中的 5 個會被接收。部份附件可能無法正確顯示。

收件匣 (功能表 4.4)

在您收到訊息時會得到提示。訊息將儲存在收件匣中。

在收件匣中, 您可以根據圖標識別每則訊息。

如果手機顯示「無足夠空間儲存智能咭訊息」,您必須從「收件匣」中刪除部份訊息。如果手機顯示「無足夠空間儲存訊息」,您可刪除訊息、媒體內容和應用程式以便在各個資料庫中讓出空間。

*** 智能咭訊息**

智能咭訊息指專門儲存在智能咭中的訊息。 您可以把訊息移至手機。

對於已接收通知的多媒體訊息, 您必須在下載與處理完成後方能閱讀。

要讀取訊息,請按「檢視」選擇一則訊息。

- **回覆:** 您可給寄件者發送回覆。
- **轉寄:** 您可將所選訊息轉寄給他人。
- **回覆通話:** 您可回覆電話給寄件者。
- **刪除:** 刪除選取的訊息。
- **資訊:** 您可檢視已接收訊息的相關資訊、發件人地址、主題(僅適用於多媒體訊息)、訊息日期和時間、訊息類型、訊息大小。
- **多重刪除:** 在選取想移除的訊息後,您即可刪除所選訊息。
- **刪除全部已讀訊息:** 可刪除所有已讀訊息。
- **刪除全部:** 您可以刪除全部訊息。

電郵郵箱 (功能表 4.5)

使用此功能表時,您可連線至遠端郵箱以提取新電郵;或檢視之前提取的電郵,而無需登入電郵伺服器。您可查看已儲存的電郵、草稿、寄件匣與已發送的電郵。 收件匣最多可儲存 20 封電郵。

草稿 (功能表 4.6)

使用此功能表,您可以預設最多五個常用的多媒體訊息。 此功能表會顯示預設的多媒體訊息列表。

可以使用的選項如下。

- **編輯:** 修改選定訊息。
- **資訊:** 檢視訊息的資訊。
- **刪除:** 刪除選定訊息。
- **多重刪除:** 選取想移除的訊息後, 按「已完成」即可刪除所選訊息。

- **刪除全部:** 刪除資料夾中所有訊息。

寄件匣 (功能表 4.7)

此功能表讓您可以查看將要發送或已發送失敗的訊息。在成功發送訊息後,
訊息將會移到已發送功能表。

- **重新發送 :** 可重新發送訊息。 發送訊息後,訊息會移到已發送資料夾中。
- **轉寄:** 可修改選定訊息。
- **資訊:** 您可以檢視每個訊息的資訊。
- **刪除:** 您可以刪除該訊息。
- **多重刪除:** 選取想移除的訊息後,按「已完成」即可刪除所選訊息。
- **刪除全部:** 您可以刪除寄件匣內的所有訊息。

已發送 (功能表 4.8)

此功能表可檢視已發送的訊息。您可以查看訊息的時間與內容。

留言訊息 (功能表 4.9)

選擇此功能表後,只需點按「確定」即可收聽語音郵件。 您可以在通話模式中點按 1 鍵以聽取留言訊息。

接到留言訊息時, 手機會顯示圖標, 而且您會聽到提示音。請向您的網絡商洽詢服務內容的詳細資料, 並據此正確設定手機。

資訊服務 (功能表 4.0)

(須視網絡及申請的服務能否支援而定)

資訊服務訊息為網絡發送給手機的文字訊息。 這些訊息提供一般資訊,如天氣報告、交通消息、的士、藥劑及股市行情。 每種資訊都有一個號碼。因此,只要輸入所需資訊的相關號碼即可聯絡相關服務供應商。 收到資訊服務訊息時,您會看到快顯訊息,顯示您已收到一則訊息或直接顯示該資訊服務訊息。 要再次或不在備份模式下檢視訊息,請依從以下步驟:

讀取 (功能表 4.0.1)

1. 如果收到資訊服務訊息並選取讀取以查看訊息, 則訊息會顯示在屏幕上。 您可透過捲軸方式檢視其他訊息 。
2. 此訊息將一直保留, 直至收到其他訊息。

主題 (功能表 4.0.2)

(取決於網絡和您所申請的服務而定)

- **新增:** 您可新增資訊服務訊息號碼連同其主題至手機記憶體中。
- **檢視列表:** 若您選擇本功能表, 您可以查看您加入手機記憶的資訊服務類別。 如點按 ■ 便可以編輯及刪除您已新增的資訊服務訊息。
- **目前列表:** 您可以在啟用列表中選擇資訊服務訊息號碼。 若啟用了某個資訊服務訊息號碼,您便可收到由該號碼發送的訊息。

常用範本 (功能表 4.11)

文字範本 (功能表 4.11.1)

列表中有6 個預設文字範本;

- **請回電給我**
- **我遲到了, 我會立刻到達。**
- **您在哪裡?**
- **我已在路上**
- **緊急! 請聯絡。**
- **我愛你**

多媒體範本 (功能表 4.11.2)

如果範本列表為空,則點按「新增」可新增範本。
如果存在範本,可檢視以下子功能表:

- **編輯:** 編輯多媒體訊息範本。
- **發送:** 您可以透過多媒體範本發送訊息。
- **刪除:** 刪除多媒體訊息範本。
- **新增範本:** 您可新增多媒體訊息。
- **刪除全部:** 您可以刪除全部多媒體訊息範本。

設定 (功能表 4.12)

文字訊息 (功能表 4.12.1)

選定此功能表後,您可點按下列子功能表。

- **服務中心號碼:** 如果您想發送文字訊息,可透過此功能表接收 SMS 中心的地址。
- **發送報告:** 設定為「開啟」後,您可查看訊息是否發送成功。
- **有效期:** 這項網絡服務可讓您設定訊息儲存在訊息中心的期限。
- **經同一訊息中心回覆:** 訊息發送後,系統允許收件人回覆時將回覆成本納入您的通話帳單中。 該服務取決於服務供應商。
- **訊息類型:**
  文字、語音、傳真、傳呼、X.400、電郵、ERMES。
  通常訊息類型會被設定為文字。您可以將您的文字轉換為接收設備適用的 其他格式。請洽詢您的服務供應商以瞭解您是否可使用此功能。

多媒體訊息 (功能表 4.12.2)

選定此功能表後,您可點按各列中的子功能表。

- **投影片播放時間:** 您可設定每個投影片的播放時間。
- **重要性:** 您可以設定所選訊息的重要性。
- **有效期:** 此網絡服務可讓您設定文字訊息儲存在訊息中心的期限。
- **發送報告:** 如果在此功能表中設定為是, 可以查看訊息是否已成功發出。
- **讀取報告:** 如果在此功能表中設定為「是」, 您可得知接收者有否讀取訊息。
- **自動下載:** 如選擇「開啟」, 您可以自動接收多媒體訊息。如果選擇「關閉」, 您只會在收件匣收到通知訊息,並在此處檢查通知。 如選擇「僅限本 地網絡」, 您會視乎本地網絡提供的服務而收到多媒體訊息。
- **網絡設定:** 如果選擇多媒體訊息伺服器,可以設定多媒體訊息伺服器 URL。
- **允許訊息類型**
  個人: 個人訊息。
  廣告: 商業訊息。
  資訊: 必要資訊。

電郵 (功能表 4.12.3)

此功能表可讓您編輯、刪除或新增電郵帳戶。

- **帳戶**
  您可以透過選擇「新帳戶」建立電郵帳戶。 使用「編輯」功能表, 您可以編輯設定值。 有關詳情,請參閱第 33 頁。
- **網絡設定**
  您可以啟用儲存為預設的網絡設定。
- **名片**
  您可以自訂個人名片 。

留言信箱號碼 (功能表 4.12.4)

如果您的網絡服務供應商可支援這項功能, 您就可以聽取留言訊息。當您收 到新的留言訊息時, 屏幕上將會顯示一個符號。
請向您的網絡服務供應商瞭解他們的服務詳情, 以適當地設定手機。

Push 訊息 (功能表 4.12.5)

您可以設定選項是否接收Push 訊息。

資訊廣播 (功能表 4.12.6)

- **接收**

  開啟: 選擇此功能表後,手機會收到資訊服務訊息。

  關閉: 選擇此功能表後,手機將不會接收資訊服務訊息。

- **提示**

  開啟: 若您選擇本功能表, 您的手機在收到資訊廣播訊息時將會發出一聲嗶 聲。

  關閉: 若您選擇本功能表, 您的手機在收到資訊廣播訊息時將不會發出一聲 嗶聲。

- **語言**

  您可選擇所需語言。 然後,資訊服務訊息將以您選定的語言顯示。

瀏覽器 (功能表 5)

您可以存取各種WAP(無線應用協定) 服務, 例如銀行業務、新聞、天氣報 導與航機班次等資訊。這些服務是專為流動電話而設計的, 並由WAP 服務 供應商支援。請向提供服務的網絡供應商與/ 或服務供應商查詢您可以使用 的WAP 服務、價格與收費表。服務供應商也會提供如何使用服務的說明。

要開啟互聯網帳戶, 請洽詢您的網絡供應商。要使用網絡瀏覽器, 您必須利 用本機號碼功能表選項顯示您的電話號碼。連線後即會顯示主頁。主頁內容因服務供應商而異。輸入URL 位址即可存取任何網頁。任何時候要結束瀏 覽器, 請按 ( ) 鍵。手機將會回到備用模式。

使用 WAP 瀏覽器瀏覽

使用手機按鍵或 WAP 流動瀏覽器功能表即可上網。

使用 WAP 瀏覽器功能表

流動上網時可以使用各種功能表選項。

WAP 瀏覽器功能表將視瀏覽器版本而異。

主頁 (功能表 5.1)

連線到主頁。主頁是目前啟用之網絡設定中定義的網站。如果您還未在已啟 用的網絡設定中定義主頁。服務供應商將為您定義一個主頁。

書簽 (功能表 5.2)

您可以在此功能表中, 將喜愛網頁的網址儲存起來, 方便日後存取。手機已 預載許多書簽。這些預載書簽無法刪除。

建立書簽

1. 選擇 圖示。
2. 選擇「新增」。
3. 輸入所需的 網址 和名稱後,點按「儲存」。

選定所需的書簽後,便可以使用下列選項。

- **檢視:** 您可查看儲存為書簽的名稱和網址。
- **編輯:** 編輯選擇之書簽內容。
- **新增:** 選此建立新書簽。
- **刪除:** 從書簽列表中刪除選取的書簽。
- **傳送URL:** 您可發送儲存為書簽的網址。
- **刪除全部:** 刪除全部書簽。

輸入URL (功能表 5.3)

您可直接移至您想要瀏覽的網站。 輸入特定的 網址後,點按「連接」。

設定 (功能表 5.4)

您可設定與網絡服務相關的網絡設定、暫存記憶、cookies 和安全性。

網絡設定 (功能表 5.4.1)

WAP 網絡設定即用來連接互聯網的網絡資訊。手機記憶體內儲存了一些系統業者的預設網絡設定。 無法將預設WAP 網絡 設定重新命名。

每個WAP 網絡設定的功能表如下:

- **檢視:** 您可以檢視選定的網絡設定。
- **編輯:** 您可變更所選的網絡設定。
- **新網絡設定:** 您可以新增網絡設定。
- **重設全部:** 從列表中刪除所選的網絡設定。

暫存記憶 (功能表 5.4.2)

您已存取的資訊或服務會儲存在手機的快取記憶體中。

- **清除暫存記憶:** 移除所有儲存在快取記憶體中的文字。
- **允許暫存記憶:** 如果您選擇「開啟」,可使用快取記憶體暫時儲存特定內容。

安全認證 (功能表 5.4.3)

在此功能表下將顯示一列現有的安全認證標準。

資訊 (功能表 5.4.4)

您可以檢視 WAP 瀏覽器版本。

多媒體

點按「多媒體」圖示後,您可進入與多媒體相關的功能表,如相機、視像攝錄機、語音備忘錄、MP3、收音機和 Java 遊戲。

切勿變更預設資料夾名稱,否則不能正確運作。

我的檔案 (功能表 1)

圖像 (功能表 1.1)

顯示預設圖像或下載的檔案中的 JPG/BMP/GIF/PNG 檔案列表。 您可以透過WAP檢視已拍攝的圖像或下載的檔案。如果你在縮圖/列表檢視中點按圖像,則可檢視正常模式圖像。

您可以透過連接 USB 驅動程式建立新資料夾。

記憶體

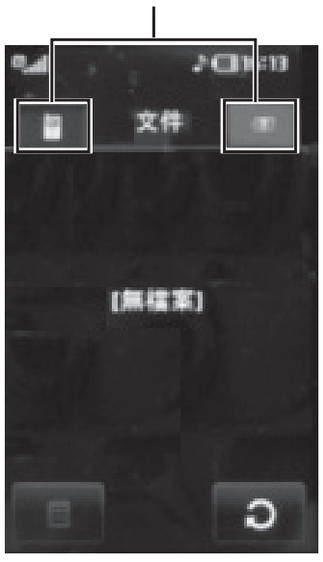

點按 JPG/BMP/GIF/PNG 列表中的圖示後,您可檢視以下子功能表 (以縮圖檢視)。

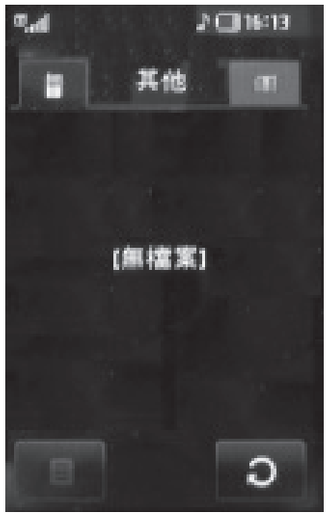

- **發送方式:** 您可透過 多媒體訊息 /電郵/藍芽發送圖像。
- **設為牆紙:** 可將圖像設為牆紙。 此牆紙受全屏幕/調較屏幕/原始模式支援。
- **刪除:** 您可刪除所選圖像。
- **檔案:**
  - **旋轉圖像:** 您可以 90˚/180˚/270˚ 旋轉圖像。
  - **重新命名:** 可以變更檔案名稱。
  - **移動/複製:** 您可在內置記憶體和外置記憶體之間移動或複製圖像。
  - **資訊:** 顯示檔案資訊。
- **透過藍芽列印:** 經由藍芽將所選檔案在其他裝置上打印。
- **以幻燈片 方式檢視:** 您可以幻燈片 放映形式檢視 JPG/BMP /GIF/PNG 檔案。
- **多重刪除:** 您可同時刪除多個檔案。
- **刪除全部:** 刪除列表中所有檔案。
- **列表檢視:** 您可以列表方式檢視 JPG/BMP/GIF/PNG 檔案。

點按 JPG/BMP/GIF/PNG 列表中的 圖示後,您可檢視以下子功能表 (以列表檢視):

- **發送方式:** 您可透過 多媒體訊息 /電郵/藍芽發送圖像。
- **設為牆紙:** 您可以把圖像設定為牆紙。 (僅適用於 JPG/BMP/PNG)
- **刪除:** 您可刪除所選圖像。
- **檔案:**
  - **旋轉圖像:** 您可以 90˚/180˚/270˚ 旋轉圖像。
  - **重新命名:** 可以變更檔案名稱。
  - **移動/複製:** 您可在內置記憶體和外置記憶體之間移動或複製圖像。
  - **資訊:** 顯示檔案資訊。
- **透過藍芽列印:** 經由藍芽將所選檔案在其他裝置上打印。
- **以幻燈片 方式檢視:** 以幻燈片放映的形式檢視 JPG 檔案。.
- **多重刪除:** 可同時刪除多個檔案。
- **刪除全部:** 您可以刪除全部檔案。
- **縮圖檢視/列表檢視:** 您可以縮圖/列表圖像的形式檢視 JPG/ BMP/GIF/PNG 檔案。

- 您可將手機或記憶咭中的 .JPG (.JPEG) 檔案儲存在相片資料夾中。 在手機和外置記憶體的圖像資料夾中,您可儲存 JPG、BMP、PNG、GIF、WBMP 和其他圖像格式檔案。
- 如要將「相片」資料夾中的 JPG/BMP/GIF/PNG 檔案設為牆紙,請前往 [功能表-多媒體-相簿],然後在「選項」功能表中選擇「設為牆紙」。
- 您無法將 GIF、Ani GIF、動畫 GIF、透明 GIF 和逐行 JPG 檔案設定為牆紙。

聲音 (功能表 1.2)

在預設聲音、下載的檔案、語音備忘錄和 MP3 資料夾處顯示 MP3、AAC、WMA、I-MELODY、WAVE、MIDI、AMR、MMF、M4A 檔案列表。
若點按列表中的 圖示,可檢視以下功能表:

- **發送方式:** 您可編寫訊息時發送聲音檔案。
- **設為鈴聲:** 您可以設定聲音為鈴聲。
- **檔案:** 您可檢視檔案和 DRM 資訊。
- **刪除:** 刪除檔案。
- **多重刪除:** 您可同時刪除多個檔案。
- **刪除全部:** 刪除列表中所有檔案。

影片 (功能表 1.3)

顯示下載的檔案資料夾中的 MP4 檔案列表。

下載的檔案為預設設定。 您無法編輯或刪除預設資料夾。 您可將網絡上下載的檔案儲存到此資料夾中。

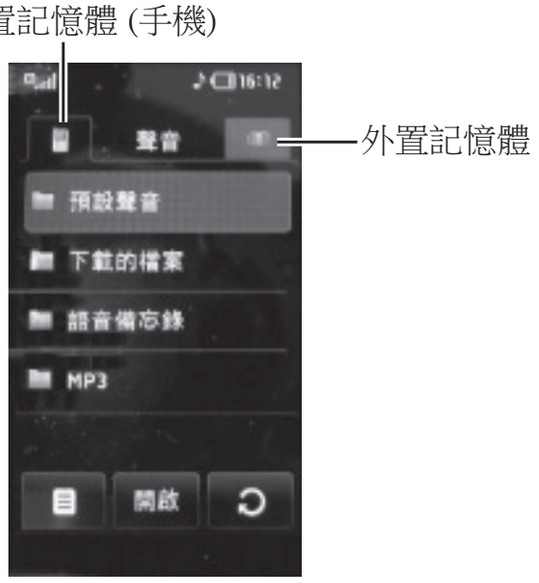

若沒有在手機中插入外置記憶體,則手機上會顯示警告訊息「未插入外置記憶體」。

若點按列表中的 圖示,可檢視以下子功能表 (以縮圖檢視):

- **發送方式:** 透過 多媒體訊息、電郵或藍芽將選定檔案傳送至其他裝置。

不可使用下列字元:\ / : * ? “ < > |

- **刪除:** 刪除檔案。
- **檔案:**
  - **重新命名:** 可以變更檔案名稱。
  - **移動/複製:** 您可在內置記憶體和外置記憶體之間移動或複製圖像。
  - **資訊:** 顯示檔案資訊。
- **刪除全部:** 刪除列表中所有檔案。
- **多重刪除:** 您可同時刪除多個檔案。 若在點按畫面後在核取方塊上標記 v,則可刪除所選檔案或取消操作。
- **縮圖檢視/列表檢視:** 您可以縮圖 / 列表方式檢視檔案。

如果資料夾中的影片檔案超過 9 個,則上/下移動和上/下翻頁圖示會顯示在畫面的右側。

能附加到 多媒體訊息中的最大可用檔案大小為 300 kb。 如您附加的檔案超過300kb,將會顯示警告訊息”過大的”,亦同時自動取消操作。

開啟資料夾中的影片檔案後,可使用以下功能:
影片播放器支援:

- 影片編碼: MPEG4,H.263
- 音訊編碼: AAC,AMR
- 解像度: 128X96,176X144,320X240,352X288,400X240, 176x120,240x176,320x176,368x208,384x160,400x192,416x176,480x160
- 副檔名: .3gp, .mp4

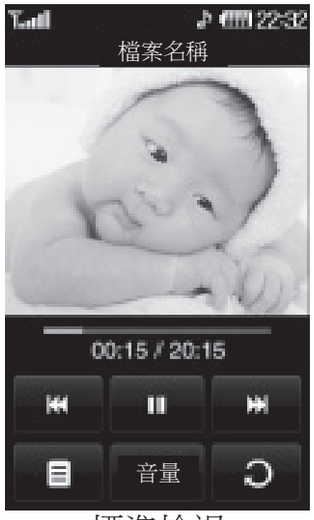

音量設定

標準檢視

- **點按音量,可設定影片檔案的音量。**

若將畫面轉換為闊畫面版本,則可使用以下功能。

圖示	說明
	顯示影片檔案的播放進度。 點按進度列可轉動指示位置。
	透過多媒體訊息發送影片檔案
	觸控鎖鍵
	控制音量
	全屏幕檢視
	倒回
	暫停或播放
	快進
	轉換為標準視圖。

播放影片檔案時,您無法透過藍芽耳機收聽聲音。

選定選項中的「風景」功能表,畫面將變為水平闊螢幕。 預設模式為闊屏幕。(400X240)

整個圖像

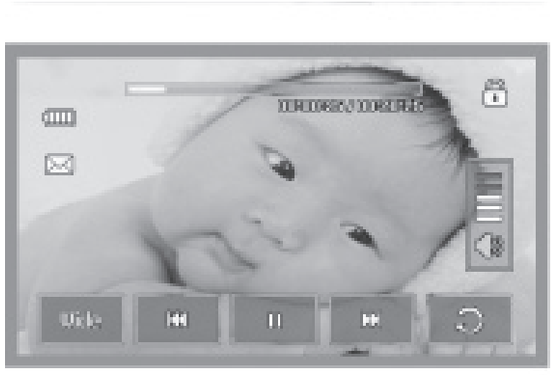

全屏幕

闊屏幕

您可以設定影片檔案為牆紙:
- JPG: 不支援 “Greay scale format, Progressive format”
- BMP: 最高為24bit
- PNG: 沒有限制

文件 (功能表 1.4)

顯示智能咭或手機記憶體中的文字文件。 開啟檔案後,點按 ■ 圖示,可檢視子功能表。

- **風景:** 您可在風景模式中讀取文字內容。
- **進入頁面:** 您可直接轉到所選頁面,而無需搜尋。
- **設定放大:** 點按該圖示後,您可放大畫面內容。
- **檢視設定:** 使用「螢幕等高」和「與螢幕等闊」功能表,設定文字內容的大小。
- **書簽設定:** 若選擇「開啟」,則可直接返回上次開啟的頁面。 可將多達 100 個文件儲存為書簽。

- 如果檔案多於300行,將可能不會正常開啟。
- 您可以開啟檔案的最大大小為10MB。
- 如果檔案大於最大大小,載入時的顯示屏幕可能會停止。

其他 (功能表 1.5)

顯示多媒體記憶體「我的媒體/其他」中的檔案列表。

- **發送方式:** 經由電郵或藍芽將所選檔案傳送到其他裝置。
- **刪除:** 刪除檔案。
- **檔案:** 您可編輯檔案名稱。 您也可複製和移動檔案。
- **多重刪除:** 您可同時刪除多個檔案。
- **刪除全部:** 刪除列表中所有檔案。

DRM (數位版權管理)
若是經互聯網或多媒體訊息下載一些可能有技術保護的媒體檔案內容, “購買版權” 功能表可能需要來存取它們。你們可能需要經一些擁有版權的網頁獲得授權。

相機 (功能表 2)

執行以下操作之一,即可顯示相機拍攝畫面:

1. 按 鍵至少兩秒鐘,可直接進入相機拍攝模式。 或者,點按多媒體圖示,然後選擇相機功能表。
2. 對準目標的影像, 然後按 。
3. 您可自動儲存圖片 。

拍照前,您可檢視以下功能表:

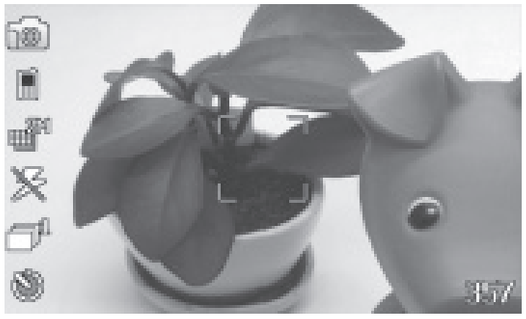

功能表	圖示	說 明
模式		准許您拍攝相片 。
		准許您拍攝影像。
縮放		准許您設定縮放值。
補光燈 開啟/關閉		您可昏暗的拍攝環境中開啟補光燈。
解像度		320X240, 640X480, 1280X960, 1600X1200

功能表	圖示	說 明
測光		全部、中心
濾鏡		關閉、底片、灰色、深褐色
質量		正常、細緻、特細緻
自動對焦 開啟/關閉	AF	按下按鈕即可自動調整焦距,拍出清晰細膩的相片 。
連環拍照		可讓您進行連環拍攝。 - QVGA (1,3,6) - VGA (1,3) - ONE_MEGA (1) - TWO_MEGA (1)
檢視		4:3, 16:9
儲存體		可選擇儲存位置: 手機或外置記憶體。
計時器		您可以選擇延遲時間:(關閉、3 秒、5 秒及 10 秒)。 手機會在指定時間後拍攝相片 。
快門音效		快門聲1、快門聲2、快門聲3
白平衡	WB	自動、鎢絲光、日光燈、日光、陰天

點按畫面後,您可檢視以下功能表:

功能表	圖示	說 明
設定		可變更設定。
模式		您可將模式從相機變為攝錄機。
資料夾		您可將圖片移動到每個資料夾。
取消		您可返回到前一個功能表。

拍照後,您可查看以下功能表..

功能表	圖示	說 明
選項		若在拍照後點按此圖示,您可將其設定為牆紙或透過 多媒體訊息 和電郵方式傳送訊息。
刪除	刪除	如果不想儲存該圖片,可將其刪除。
相機		您可拍攝相片 。

攝錄機 (功能表 3)

1. 選擇「攝錄機」功能表。
設定顯示在畫面上後,您可透過觸摸圖示捲動設定。
捲動到要變更的設定後,點按畫面即可顯示設定值。
捲動到首選選項。
2. 按 ● 可開始錄像。 錄像一開始,計時器即會顯示。

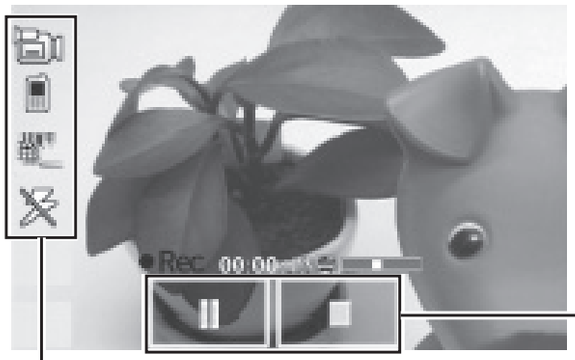

除「拍攝時間」不同外,其餘與相機設定完全相同。
有關詳情,請參閱第 45 頁。

功能表	圖示	說 明
拍攝時間		在此功能表中,可查看錄製時間長度。 (多媒體訊息/無限制)

3. 按 ● 結束錄影並立即進行儲存。

錄影完成後,您可查看以下功能表:

功能表	圖示	說 明
選項		若在拍照後點按此圖示,您可將其透過多媒體訊息和電郵方式傳送訊息。
刪除	刪除	如果不想儲存該影片,可將其刪除。
攝錄機		您可進行錄影。

語音備忘錄 (功能表 4)

您可以在語音備忘錄功能表中錄製語音備忘錄。

如果您選擇 ■ 且無語音檔案,則可檢視以下子功能表:

- **我的檔案:** 您可直接進入「聲音」錄製功能表。
- **儲存體:** 您可選擇儲存體,將語音儲存到手機或外置記憶體中。
- **錄製模式:** 您可根據需要選擇「無限制」與「多媒體訊息」模式。

在「無限制」模式中,您可以 MP3 的形式錄製語音。 但如果在通話中或多媒體訊息模式下錄製語音,則語音將錄製為 AMR。

1. 錄製開始後,訊息「・REC」及餘下時間將會顯示。
2. 如果您要結束錄製操作,請按中心鍵「停止」。

完成儲存後點按 ■ ,您可以檢視下列功能:

- **新增語音錄製:** 您可錄製新的語音備忘錄。
- **發送方式:** 您可透過 多媒體訊息、藍芽或電郵的方式發送語音備忘錄。
- **我的檔案:** 您可存取「聲音」資料夾。

MP3 播放器 (功能表 5)

所有歌曲 (功能表 5.1)

KE850 內建整合式MP3 播放器。您可以使用兼容耳機或內建揚聲器, 收聽儲 存在手機記憶體內的MP3 音樂檔。

因為是小型揚聲器, 所以在某些情形下, 聲音可能會失真, 特別是將音量調到最大和出現許多低 音時。因此, 我們建議您使用立體聲耳機, 以取得較佳的音樂品質。

音樂播放器支援:

- **MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III:** 取樣頻率由 8KHz 至 48KHz。 位元率最高可達 320Kbps, 立體聲。
- **AAC:** LC (複雜性低)
- **AAC+:** V1: (位元率 16~128Kbps)
  V2: (位元率 16~48Kbps)
  (取樣頻率由 8KHz 至 48KHz)
- **WMA, RA**

KE850 不支援變速 AAC 檔案。因此, 您無法將 MP3 格式變更為AAC。

您可利用 [大容量儲存] (功能表 - 設定 - 連接 - USB連接 - 大容量儲存) 將 MP3 檔案由相容的PC 傳送至手機的記憶體中。
當您用 USB 線 (隨盒附送) 將手機連接到電腦時,Windows Explorer 會將手機識別為卸除式磁碟。將歌曲複製到卸除式磁碟後,您必須執行從系統上移除硬體的安全操作。 切勿在傳輸資料時,從電腦或手機上拔下USB連接線,這樣可能會嚴重損壞手機。

- 您須將 MP3 複製到卸除式磁碟 X:\聲音\MP3 資料夾中。如果複製到其他資料夾, 您將看不到 MP3 檔案。
- 電腦的作業系統須為 Windows 2000 或 Windows XP。

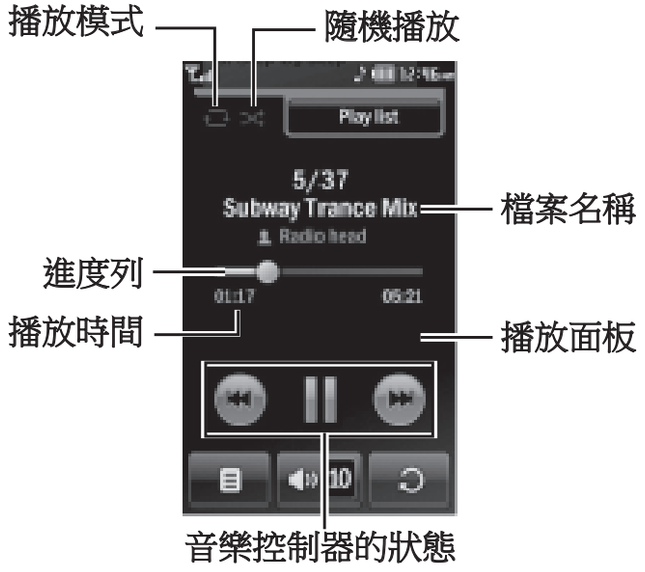

假如播放列表內有無效的檔案,功能表會返回到播放列表。

1. 按手機側面的 MP3 鍵以開啟 MP3 播放器。 然後,選擇播放列表以進行播放。
2. 按 [選項] 可存取以下功能表。

- **設為鈴聲:** 您可將目前播放的 MP3 音樂設為鈴聲。
- **設定:** 您可設定多種功能,如隨機和重複。

播放列表 (功能表 5.1.1)

此功能表可查看整個播放列表。 此外,如果您選擇 ,您則可刪除該檔案或檢視其資訊。

設定 (功能表 5.2)

- **隨機**
  若您選擇「開啟」,曲目將會以隨機方式播放。
- **重複**
  此功能表可讓您設定播放模式:一個、全部、關閉。
- **播放面板**
  您可以選擇視覺效果功能表:白色面板和黑色面板。 該功能可讓您變更畫面的背景。

音樂版權受國際公約及國內版權法的保護。 需要取得授權或許可才可以複寫或複製音樂。 在部份國家, 國家法禁止私人複製受版權保護的材料。 請檢查適用國家關於使用此類材料的國家法律。

當 MP3 播放器正在播放 MP3 時,若快按 MP3 鍵,您即可使用 BGM 模式。 在 BGM 模式中,您可以在使用其他功能的同時播放 MP3。 您可以在 MP3 播放器畫面上停止 BGM。

FM 收音機 (功能表 6)

您可以搜尋電台與收聽電台節目。

- 如要改善收音機接收效果, 可伸展作爲 FM 天線使用的耳機線。
- 您必須使用耳機聽取FM 收音機。

1. 點按某頻道對應的數字鍵,可儲存目前選定的電台資訊。
2. 預設電台頻道後,您可收聽所有的預設頻道。
3. 您可以在所選的頻道調較頻率及更改收音機電台。 點按至少兩秒鐘或按側邊鍵,您可搜尋下一頻道。

4. 您可以透過按 [選項] 存取以下選項功能表。

- **自動選取頻道:** 如果將「立即自動掃瞄?」設為「是」, 會自動設定收音機 頻道。
- **重設頻道:** 您可在 87.5Mhz 處重設所有頻道。

- 您可以透過按側面鎖定鍵鎖定FM 收音機功能。
- 當FM 收音機功能被鎖定時,您不能透過清除鍵 / 觸及鍵盤而開啟背燈。

遊戲及應用功能 (功能表 7)

在此功能表中, 可以管理安裝在您手機中的 Java 應用程式。 您可播放或刪除 下載的應用程式, 或設定連接選項。

預設遊戲 (功能表 7.1)

您可體驗四款預設遊戲。若想瞭解遊戲的內容,可使用遊戲中的「說明」。

下載的檔案 (功能表 7.2)

您可玩網絡上下載的遊戲。

資訊 (功能表 7.3)

您可查看手機中安裝的 Java 版本。

設定 (功能表 7.4)

要下載遊戲,您可在該功能表中設定接入互聯網的值。

工具

您可使用手機中安裝的各種工具,如鬧鐘、計算機、世界時間、單位換算器和日程表。

鬧鐘 (功能表 1)

您可以在本功能表中設定手機在特定時間發出響鬧。

1. 選取**開啟**, 然後輸入要設定的響鬧時間。
- : 點按「開啟」或「關閉」可設定鬧鐘。
- : 您可設定在指定的時間響鬧。
- : 您可設定鬧鐘的重複時間長度。
- : 您可設定每個資料夾的鬧鐘提示音。
- : 您可輸入鬧鐘備忘錄。 鬧鐘響鈴後,您可檢視備忘錄。

設定各個值後,點按「儲存」。

您最多可設定 5 個鬧鐘。

計算機 (功能表 2)

此功能表包含標準的計算功能, 例如 +, – , *, / : 加、減、乘、除。

此外, 您也可以使用各種計算機功能, 例如 +/-, sin, cos, tan, log, ln, exp, deg, rad 透過點按「科學」列。

1. 點按數字鍵,輸入數字。
2. 若要使用 sin 和 cos 等複雜計算,請點按 鍵。
3. 若輸入的數字有誤,請點按 鍵。
4. 點按 = 鍵以檢視結果。
5. 要結束計算機,請點按 。

世界時間 (功能表 3)

拖動世界地圖畫面,即可查看全球各地所選主要城市的時間。 您可放大畫面,使用箭咀找到正確的城市。

單位轉換器 (功能表 4)

這項功能可將任何測量單位轉換成您所需的單位。。總共可轉換7 種單位: **貨幣、面 積、長度、重量、溫度、體積**、和**速度**。

單位類型

1. 點按功能表,您可從七種單位類型中進行選擇。
2. 在每列中輸入要轉換的數字。 在單位換算器中不可輸入「-」符號。
3. 若要重設值,請點按「重新設定」。

日曆 (功能表 5)

當您進入本功能表時, 屏幕上將會顯示一個日程表。每當您更改日期時, 日 程表也將根據日期而更新。同時, 日程表會使用方形游標標示出特定的日期。如果您在日程表中看到任何底線, 表示當天有安排日程。這項功能可提醒您 日程及備忘錄。如果您已為某個記事設定了響鬧, 手機屆時會發出響鬧鈴聲。切換日、月、年的步驟。

若點按每天/月/年區域,您可變更相應的項目。

選擇 圖示後,您可查看以下功能表:

- **刪除已過日程:** 可刪除已過的日程表。
- **刪除全部:** 您可以刪除全部日程表。
- **轉到日期:** 您可直接進入所選的日期。

備忘錄 (功能表 6)

進入此功能表後,若選擇 圖示,則可檢視以下子功能表。

- **新建:** 您可建立新備忘錄。
- **多重刪除:** 您可一次性刪除所選的備忘錄。
- **刪除:** 可刪除備忘錄。
- **刪除全部:** 您可以刪除全部備忘錄。
- **發送方式:** 您也可透過文本模板/多媒體/電郵/藍芽發送備忘錄。

設定

您可設定與手機相關的設定。

顯示 (功能表 1)

牆紙 (功能表 1.1)

在備用模式下選取牆紙。
一些背景項目,如蝴蝶或時鐘,可透過手指進行移動。

背燈 (功能表 1.2)

您可以設定顯示背光的持續時間。

時鐘 (功能表 1.3)

您可選擇各種時鐘顯示類型。

亮度 (功能表 1.4)

您可以設定 LCD 的亮度: 100%、80%、60% 和40%。

主題 (功能表 1.5)

您可設定畫面的主題: PRADA 主題、藍色主題、蝴蝶主題和魚主題。

手機會依據不過主題顯示不同主目錄。

網絡名稱 (功能表 1.6)

如啟用本功能, 主屏幕上會顯示網絡名稱。

情景模式 (功能表 2)

在情景模式中, 您可以調整和自訂不同事件、環境或來電者群組的手機鈴聲。
有五種預設情景模式: **標準、靜音、震動、戶外、耳機。** 每種情景模式都可以進行個人化設定。

啟動 (功能表 2.X.1)

1. 顯示情景模式列表。
2. 在「情景模式」列表中,捲動到要啟動的情景模式,然後點按「啟動」。

更改 (功能表 2.X.2)

在情景模式列表中捲動到所需的情景模式,然後點按「更改」。

- **來電提示類型:** 設定來電提示的類型。
- **鈴聲:** 從列表中選取所需的鈴聲。
- **鈴聲音量:** 設定鈴聲音量。
- **訊息提示類型:** 設定訊息提示類型。
- **訊息提示音:** 選取訊息提示音。
- **按鍵音頻:** 選擇所需的觸控和按鍵音。
- **按鍵音量:** 設定觸控和按鍵音的音量。
- **確認音音量:** 設定確認音音量。
- **開機 / 關機音量:** 設定開啟/ 關閉手機時的鈴聲音量。
- **自動接聽:** 可供您設定自動接聽來電以配合環境狀況。請注意, 只有連接 免提裝置時, 此(耳機) 模式才包含此子功能表, 可供您啟動此功能。
  - **關閉:** 手機不會自動接聽電話。
  - **5 秒後:** 5 秒後手機將會自動接聽。
  - **10 秒後:** 10 秒後手機將會自動接聽。

設定 (功能表 3)

日期及時間 (功能表 3.1)
您可日期和時間。

日期 (功能表 3.1.1)
在本功能表中, 您可以輸入手機的日期。

日期格式 (功能表 3.1.2)
您可以在本功能表中設定日期格式。日期格式分別有年/ 月/ 日, 日/ 月/ 年, 月/ 日/ 年。

時間 (功能表 3.1.3)
您可以在本功能表中輸入手機的時間。

時間格式 (功能表 3.1.4)
您可以選擇24 小時或12 小時的時間格式。

自動更新 (功能表 3.1.5)
(需視網絡能否支援而定)
選擇「開啟」後,日期和時間設定將會自動進行更新。

省電模式 (功能表 3.2)
如果設定為「開啓」, 您便可以在不使用手機時節省電量。

語言 (功能表 3.3)
變更手機顯示的語言。此操作亦會影響語言輸入模式。

通話 (功能表 3.4)
點按「設定」功能表後,您可設定與通話相關的功能表。

來電轉接 (功能表 3.4.1)
來電轉接服務可讓您將語音、傳真和數據通話轉接到另一個號碼。詳細資訊 請洽詢電訊服務商。

。所有語音通話
無條件轉接所有語音通話。

。線路繁忙時
當手機正在通話時轉接語音通話。

。無人接聽時
當您沒有接聽時轉接語音通話。

。無網絡或關機時
當手機已關機或在網絡範圍以外時轉接語音通話。

。所有數據通話
無條件轉接至連接PC 的號碼。

。所有傳真通話
無條件轉接至連接傳真的號碼。

。取消全部
取消所有來電轉接服務。

子功能表
來電轉接功能表亦包含下列子功能表。

- 啟動
啟動對應的服務。

留言信箱中心
轉接至留言信箱中心。此功能無法在所有傳真通話及數據通話功能表中使 用。

其他號碼
輸入要轉接的號碼。

常用號碼
您可以查看最近 5 個轉接號碼。

- 取消
取消對應的服務。

- 檢視狀態
查看對應服務的狀態。

發送我的號碼 (功能表 3.4.2)
(需視網絡及申請的服務能否支援而定)

。按網絡設定
如選取此項目, 則可以根據您撥打的線路而提供手機號碼, 如線路1 或線 路2。

- **開啟**
  如果您選擇本功能表, 您可以將您的手機號碼發送給其他人。亦即是, 您 的電話號碼將會顯示在接聽者的手機上。
- **關閉**
  如果您選擇本功能表, 您將不會發送您的手機號碼。

來電等候 (功能表 3.4.3)
(需視網絡能否支援而定)

- **啟動**
  啟動對應的服務。
- **取消**
  關閉對應的服務。
- **檢視狀態**
  查看此服務的狀態。

分鐘提示 (功能表3.4.4)

如果選取開啟, 通話時, 手機將在每分鐘發出嗶聲, 以提示您通話時間。

自動重撥 (功能表 3.4.5)

- **開啟**
  啟動此功能後, 當通話無法接通時, 手機會自動重撥該號碼。
- **關閉**
  當原初通話無法接通時, 手機將不會自動重撥該號碼。

發送DTMF (功能表 3.4.6)

您可以在通話中發送DTMF 音頻以控制您的語音信箱或其他自動化電話服務。

資訊
DTMF: **雙重提示音多動頻率**

選擇線路 (功能表 3.4.7)
(視乎智能咭而定)

此功能表只有在智能咭支援兩個用戶號碼 (即兩條電話線路) 時才會顯示。選擇撥打電話與發送短訊時想使用的電話線路 (在線路 1 和線路 2 之間)。無論選擇哪一條線路, 兩條線路都可接聽來電。

安全 (功能表 3.5)

要求輸入PIN碼 (功能表 3.5.1)

在本選項中, 您可以設定手機在開機時詢問智能咭的PIN 碼。如果這項功能已被啟動, 您將會被要求輸入PIN碼。

1. 在安全功能表中,選擇要求輸入PIN碼。
2. 設定啟動 / 關閉。
3. 如果要變更此設定, 則在開機時需要輸入PIN1 碼。
4. 如果輸入錯誤的PIN1 碼超過3 次, 手機將被鎖定。PIN1 碼一旦被鎖定, 您 需要輸入 PUK 碼。
5. 您最多可以輸入 PUK 碼10 次。如果輸入錯誤的 PUK 碼超過10 次, 就無 法將手機解除鎖定。請洽詢電訊服務商。

自動按鍵鎖 (功能表 3.5.2)

若您啟動該功能,在備用模式下,如果沒有進行按鍵操作,則系統會自動鎖定按鍵。

手機鎖 (功能表 3.5.3)

使用安全密碼可避免他人擅用您的手機。如果您將手機鎖設定為 [開機時], 手機會在每次開啟時要求您輸入安全密碼。
如果您將手機鎖設為 [智能咭更換時], 手機只會在智能咭更換時要求您輸入 安全密碼。

通話限制 (功能表 3.5.4)

通話限制服務可限制您的手機撥打或接聽特定類別的來電。這項功能需要限 制密碼。您將可看到以下子功能表。

- **所有撥出通話**
  限制撥出所有電話的服務。
- **國際撥號**
  限制撥出所有國際電話的服務。
- **漫遊時的國際撥號**
  限制撥出所有開戶網絡以外的電話 (國際漫遊) 服務。
- **所有來電**
  限制接聽所有來電的服務。
- **漫遊時的來電**
  限制漫遊時接聽所有來電的服務。
- **取消全部**
  您可以取消所有通話限制服務。
- **更改密碼**
  您可以更改從服務供應商取得的限制密碼。

子功能表 :

- **啟動**
  要求網絡啟用通話限制。
- **取消**
  停用選取的通話限制。
- **檢視狀態**
  查看是否限制通話。

固定撥號 (功能表 3.5.5)

(取決於智能咭)
您可以限制撥出電話時只能撥打選取的電話號碼。這些號碼由您的PIN2 碼 提供保護的。

- **開啟**
  您可以限制撥出電話時只能撥打選取的電話號碼。
- **關閉**
  停用固定撥號功能。
- **號碼列表**
  查看設定為固定撥號的號碼列表。

本手機的預設安全密碼為 0000。 PIN 1 碼和 PIN 2 碼和您的智能咭及服務供應商相關。

更改密碼 (功能表 3.5.6)

PIN 是個人身份號碼的縮寫, 可防止他人擅用手機。
可以更改存取密碼: **安全密碼、PIN1 碼和PIN2 碼。**

1. 若要變更安全密碼/PIN1/ PIN2 碼,請輸入舊密碼,然後點按「確定」。
2. 輸入新的PIN1 碼 / PIN2 碼 / 安全密碼, 然後加以確認。

連接 (功能表 3.6)

網絡選擇 (功能表 3.6.1)

您可選擇網絡類型。

- **自動:** 如果選擇自動模式, 手機會自動搜尋並選擇網絡。選擇自動後, 即使 電源關閉後再重新啟動, 手機也會設定為 自動。
- **手動:** 手機將搜尋並顯示出一個可用的網絡列表。如果您所需使用的網絡 與您的開戶網絡服務商已簽訂漫遊協議, 您就可以選擇這個網絡。如手機 無法存取該選取的網絡, 您仍可選擇其他網絡。如果關機, 手機會重設為 自動。
- **首選網絡:** 您可以設定首選網絡的列表, 手機會先嘗試登入該網絡, 然後再 嘗試登入其他網絡。此列表是透過手機的已知網絡預定列表而建立的。

網絡設定 (功能表 3.6.2)

網絡設定是用於連接至互聯網的網絡資訊。
一些網絡商在手機記憶體內已儲存預設的設定檔。
無法重新命名預設設定檔。

GPRS 連接 (功能表 3.6.3)

您可以根據各種不同狀況設定 GPRS 服務。.

- **開機後啟用**
  如選用此功能, 開機時手機會自動登入 GPRS 網絡。此將會啟動 WAP 或電 腦撥接應用程式, 用以建立電話與網絡之間的連接, 便可即時傳輸數據。當 您結束應用程式後,GPRS 連接也會結束, 但仍保留 GPRS 網絡的註冊身份。
- **需要時**
  如果選取**需要時,** 手機只會在您啟動應用程式或有所動作時才會使用 GPRS 連接。如果沒有任何應用程式需要 GPRS 連接, 連接將會結束。

USB 連接 (功能表 3.6.4)

憑藉 USB,透過各種 PC 連接和數據通訊應用程式來使用您的手機。

飛行模式 (功能表 3.7)

啟用飛行模式後,您可在無需連接到 GSM 無線網絡的情況下使用手機。 您也可處理不需要使用無線網絡的工作。 在飛行模式下,您無法撥打任何通話,包括緊急電話或使用需要網絡服務的其他功能。

重設設定 (功能表 3.8)

您可以選擇本功能表, 將手機重設回預設的設定值。此外, 您必須有安全密 碼才可啟動這項功能。

- **回復預設的設定:** 允許您恢復預設設定。
- **清除多媒體記憶體:** 可將多媒體記憶體格式化,並建立預設目錄。
- **清除外置記憶體:** 可格式化外置記憶體中的所有資料。

記憶體狀態 (功能表 3.9)

您可以查看每個資料庫、內置記憶體、多媒體記憶體、外置記憶體的剩餘空間與使用狀況。 您可以進入每個資料庫功能表。

藍芽 (功能表 4)

藍芽功能讓兼容的流動裝置、周邊設備及電腦, 只要彼此靠近, 便可直接連線, 不需透過任何線路。本手機支援內建的藍芽連接功能, 使它可以連接兼容的藍芽耳機、電腦應用程式等等。

- 如果您經由藍芽使用 PCSync 功能,則只能交換通訊錄中的資料。
- 當手機由其他藍芽裝置接收到資訊時, 會要求您確認。確認傳輸之資料後, 該檔案會複製 到手機上。
- 資料會依其檔案類型儲存到以下資料夾中:
  - MP3(.mp3, mp4, aac, wma): 音樂資料夾。
  - 影片 (.3GP): 影片資料夾。
  - 通訊錄 (.VCF): 通訊錄資料夾。
  - 文字 (.txt): 文字資料夾。
  - 其他檔案 (.*): 檔案儲存資料夾。
- DUN 支援的藍芽軟件 (Bluetooth stack):推薦的驅動程式為 WidComm 藍芽,適用於 Windows 1.4 及 3.0。

藍芽開/關 (功能表 4.1)

您可在此功能表中開啟或取消藍芽。

裝置列表 (功能表 4.2)

您可查看所有與手機藍芽相容的裝置。

因相容性問題,部份裝置可能不支援此功能。

藍芽設定 (功能表 4.3)

您可為兼容藍芽的新裝置註冊。 如果您已經新增裝置,輸入密碼後,即可進行搜尋。

- **我的手機可見性**
  設定此功能後,您的手機會顯示在他人藍芽裝置上。
- **我的姓名**
  您可以設定藍芽裝置名稱。預設名稱為 KE850.
- **我的地址**
  您可查看啟用的藍芽裝置地址。

支援服務 (功能表 4.4)

您可檢視受此藍芽手機支援的裝置列表,如耳機和免提套件。

經由藍芽列印,可用於支援「基本列印網絡設定」的列印機。 對於支援「物件 Push 網絡設定」的列印機,您可透過「經由藍芽列印」功能表進行列印。 如果每個檔案大小超過 500KB (動畫 GIF 檔案) 或 200KB (其他檔案),快顯訊息會顯示為「不支援」。

智能咭服務 (功能表 5)

此功能表會按智能咭和網絡服務而異。

- 如果智能咭支援 SAT (即智能咭應用程式工具集) 服務,本功能表將出現智能咭上儲存之系統業者服務名稱。
- 如果智能咭並不支援 SAT 服務,本功能表將為操作模式。

配件

手機配有多種配件。您可依據個人需要選擇所需配件。

旅行充電器

您可在離家或辦公
室時使用充電器充電。

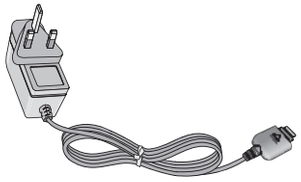

標準電池

數據傳輸組件/ 光碟

您可使用數據傳輸組件
連接PC 進行通訊。

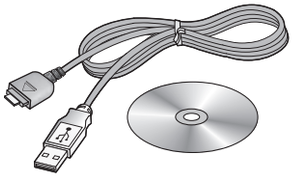

立體聲耳機

控制器: 接聽和結束按鈕、
音樂播放控制器、
音量控制、按鈕鎖定按鈕,
以及麥克風。

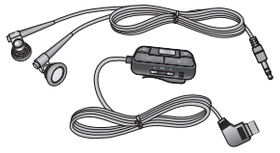

LCD 清潔布

皮包

記憶咭

網絡服務

在手冊所述之無線電話認可用於 GSM 900、DCS 1800 、PCS1900 網絡。

- 雙頻帶是一種以網絡為基礎的功能。 請諮詢當地服務供應商,瞭解能否訂閱和使用該功能。
- 本手冊中所提及的很多功能均稱為網絡服務。 這些特殊的服務是您同無線服務供應商協定而獲得的。 使用這些網絡服務前,您必須向無線網絡供應商訂閱服務並獲取有關如何使用的說明。

疑難排解

本章列出了您在使用手機過程中可能會遇到的一些問題。 部份問題可能需要諮詢服務供應商,而絕大部份的問題都可自行輕鬆解決。

訊息	可能原因	可用解決方法
智能咭錯誤	手機中無智能咭,或插入方式不正確。	請確保智能咭正確插入。
無網絡	訊號較弱 位於 GSM 網絡服務範圍外	舉高手機面向窗口或移到開闊的位置。 諮詢服務供應商,瞭解服務區域地圖。
代碼不匹配	在變更安全密碼前,您必須再次輸入以確認新密碼。 兩次輸入的密碼不匹配。	聯絡服務供應商。
無法設定功能	服務供應商不支援此功能或功能需要註冊	聯絡服務供應商。
無法撥打電話	撥號錯誤 新插入的智能咭已達通話費用上限	未獲得新網絡的使用授權。 查看新的限制條款。 聯絡服務供應商或使用 PIN 2 碼重設限制。
無法開機	按開/關鍵時間太快 電池沒電 電池觸片不潔淨	按開/關鍵至少兩秒鐘。 為電池充電。 檢查屏幕充電指示器。 清潔觸片。

訊息	可能原因	可用解決方法
充電錯誤	電池完全無電 不在適當溫度範圍內 接觸問題 電源無電 充電器故障 使用不當充電器 電池故障	為電池充電。 確定室溫合適,稍候再充電。 檢查電源以及與手機的連接。 檢查電池觸片,必要時進行清潔。 插入到其他插座或檢查電壓。 如果充電器沒有反應,請更換充電器。 只可使用原廠 LG 配件。 更換電池。
手機失去網絡連接	訊號太弱	自動重新連接到其他服務供應商。
號碼不准許	固定撥號功能已開啟。	檢查設定。

技術資料

一般資料

產品名稱 : KE850
系統 : GSM 900 / DCS 1800 / PCS 1900

適用溫度

最高 : +55˚C (放電中)
+45˚C (充電中)
最低 : -10˚C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeuido-dong, Yeoungdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 / Tri Band Terminal Equipment

Model Name

KE850

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360VEN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name	Issued Date
Jin Seog, Kim / Director	11. September. 2006

LG Electronics Logitics and Services B.V
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

Signature of representative

简体中文

KE850 用户手册

视话机软件版本或服务提供商而定,本手册中的部分内容可能与您的手机有所不同。

内容

5 产品介绍

7 安全及有效使用指南

10 手机部件

10 手机正面

13 显示信息

14 屏幕上的图标

15 开始

15 安装SIM 卡和手机电池

17 给电池充电

17 断开充电器

18 存储卡

19 常规功能

19 拨打一个电话

19 调节音量

19 应答电话

19 输入文本

22 选择功能和选项

23 呼叫中菜单

23 呼叫期间

24 多方通话

25 菜单树

28 拨号

29 电话本

29 查找

29 新建联系人

29 快速拨号

30 群组

30 设置

30 信息

31 通话记录

31 全部通话

31 未接来电

31 已拨电话

31 已接来电

31 通话费用

31 数据信息

32 信息

32 新建文本信息

32 新建多媒体信息

33 新建电子邮件

34 收件箱

34 电子邮箱

34 草稿箱

35 发件箱

35 已发送

35 收听语音邮件

35 小区广播

36 模板

36 设置

38 浏览器

38 主页

38 书签

38 转到URL

38 设置

39 多媒体

39 我的文档

39 图像

40 声音

40 视频

43 文档

43 其它

44 照相

46 摄像机

47 录音

48 音乐播放器

48 所有歌曲

49 设置

50 FM 收音机

51 游戏和应用程序

51 默认游戏

51 下载内容

51 信息

51 设置

52 工具

52 闹钟

52 计算器

52 世界时钟

52 单位换算器

53 日程表

53 备忘录

54 设置

54 显示

54 墙纸

54 背景灯

54 时钟

54 亮度

54 主题

54 网络名称

55 情景模式

55 通用

55 静音

55 振动

55 大声

55 耳机

56 设置

56 日期和时间

56 省电模式

56 Languages

56 通话

57 保密设置

58 连接

59 飞行模式

59 重设设置

59 内存状态

60 蓝牙

60 打开/关闭蓝牙

60 设备列表

60 蓝牙设置

60 支持的服务

61 SIM 服务

62 附件

63 网络服务

64 故障排除

66 技术数据

恭喜您购买了先进精巧，采用最新数码通信技术的KE850 手机电话。

本用户手册包括重要的手机使用和操作信息。请仔细阅读以使您的手机发挥最佳性能、防止手机损坏和不正当使用。本手册未明确认可的任何更改和修改可使手机的保修失效。

请阅读以下简单的准则。违反这些规定可能造成危险或者触犯法律。本手册中给出了进一步的详细信息。

警告

- 在飞机上, 必须关闭手机。
- 开车时请不要手持手机。
- 在加油站、燃料仓库、化工厂或爆破活动附近请关机。
- 为了您的安全, 请只使用原厂电池和充电器。
- 手机在充电时, 不要用湿手拿起手机。这可能会导致电击或使您的手机严重受损。
- 请将手机放在儿童接触不到的安全地方, 以防止它的可拆部件使儿童造成窒息危险。

小心

- 在任何有特殊规定的场所请关机。例如, 在医院内请关机, 因为手机会对心脏起搏器和助听器等电子医疗设备造成干扰。
- 并非所有蜂窝网络都支持紧急呼叫。因此您不可以只依靠手机作为紧急时刻的通信工具, 例如: 紧急医疗救护。
- 仅使用原厂附件以防损坏手机。
- 手机可能对电视、收音机、电脑等造成轻微干扰。
- 废旧电池应按相关法规进行适当处理。
- 切勿拆除手机或电池。
- 要在关机状态下插/ 取外部存储卡。

暴露在射频能量之下

辐射波照射和吸收比率(SAR) 信息

该款KE850 型移动电话的设计完全遵循了辐射波照射的相关安全要求。该要求基于科学的指导原则, 包括用于确保所有人(无论年龄和健康状况) 安全的辐射允许限度。

- 辐射波照射指导原则采用了一种称为吸收比率(或SAR) 的测量单位。进行SAR 测试时, 手机将使用一种标准化的方法, 在所有可用的频段上以其最高测定能量级发射频率。
- 虽然各种型号LG 手机的SAR 级可能不尽相同, 但它们均是遵循辐射波曝露的相关规定设计制造而成。
- 国际非电离辐射保护委员会(ICNIRP) 所规定的SAR 界限是在十(10) 克人体组织上平均为2W/kg。
- 经DAISY 测试表明, 此型号手机在手持使用时SAR 的最大值为0.838W/kg(10 克)。
- 各国/ 地区政府所采用的SAR 数据信息是由电气和电子工程师协会(IEEE) 评估制定, 其标准是在一(1) 克人体组织上平均为 1.6W/kg(例如美国、加拿大、澳大利亚和台湾)。

产品的保养与维护

> 警告
>
> **请仅使用经过认可且与特定手机型号相符的电池、充电器和配件。使用其它类型的配件将可能终止该手机的有关证明或担保, 甚至可能造成危险。**

- 请勿擅自拆装手机。(如需任何维修, 请将其交给具备相关资格的服务技术人员。)
- 手机应远离诸如电视机、收音机或个人计算机等电器设备。
- 切勿将手机置于散热设备或炊具附近。
- 切勿抛掷手机。
- 切勿对手机造成任何机械振动或震荡。
- 手机套或乙烯基外包装均有可能对手机表面造成损伤。
- 不要使用刺激性的化学药品(如酒精、苯、稀释剂等) 或清洁剂来清洁手机。这存在引发火灾的危险。
- 切勿将手机置于过度烟尘环境中。
- 切勿将手机靠近信用卡或交通票卡; 这有可能影响磁条中存储的信息。
- 切勿以尖锐物体接触屏幕; 否则将对手机造成损伤。
- 切勿将手机置于液体或潮湿的环境中。
- 谨慎使用耳机等手机配件。

- 如果将手机放在口袋或手提包时没有盖上手机插孔(电源插销), 则金属物件(如硬币、回形针或钢笔) 会使手机短路。请在不使用时始终盖好插孔。
- 千万不要将手机放在微波炉上, 否则会使电池爆炸。
- 只有授权人员才能对手机及其配件进行维修。 安装不当或非法维修可能会发生意外, 并因此使保修失效。
- 如果天线损坏, 请勿使用手机。如果损坏的天线接触机壳, 则会导致其轻度灼伤。请联系LG 授权维修中心, 以便更换损坏的天线。
- 本产品上内部的电线将使您接触到铅, 这是一种美国加利福尼亚州认可的会导致癌症和生育缺陷或其它生殖伤害的化学物。请在操作后洗手。
- KE850 的外壳是由镁合金制作的, 遇到海水会使手机腐蚀。

有效的手机操作

电器设备

所有无线电话均会造成干扰, 这可能会影响电器设备的性能

- 在未得到允许的情况下, 切勿将手机靠近医疗设备。请避免将手机放置在起搏器上方, 例如, 放在您胸前的口袋中。
- 手机还可能对某些助听设备造成影响。
- 少量干扰还可能影响到电视机、收音机、PC 等。

道路安全

在您驾驶时, 请查阅所在区域有关手机使用的法规。

- 请勿在驾驶时使用手持电话。
- 驾驶时应全神贯注。
- 如有条件, 可使用免提装置。
- 如驾驶条件不允许, 请将车停在路边或空地旁, 然后再拨打或接听电话。
- 射频能量可能影响机动车辆上的某些电子系统, 例如车载音响、安全设备等。
- 在驾车时, 不要将手机或免提装置放在靠近安全气囊的地方。如果无线装置安装不当, 则在安全气囊弹出时, 您可能会受到严重创伤。

爆破现场

切勿在引爆过程中使用手机。请遵守相关限制, 并按照规定行事。

潜在的爆炸性环境

- 切勿在加油站使用手机。切勿将手机靠近燃料或化学物品。
- 如车辆上携带有移动电话或其配件, 请勿在车厢里装载或运输可燃性气体、液体或易爆物品。

飞机上

无线设备将对飞机通讯造成影响。

- 登机前请关闭移动电话。
- 未经乘务人员允许, 请勿擅自使用手机。

儿童

将手机放在儿童接触不到的安全地方。手机中包含细小零件,如果脱落可能导致窒息危险。

紧急电话

并非在所有手机网络中均可使用紧急电话。因此,您不应仅依赖于手机的紧急呼叫功能。请向当地的服务提供商核准。

电池信息与保养

- 您不必在充电前将电池完全放电。与其它电池系统不同, 该手机电池不存在影响电池性能的记忆效应。
- 请仅使用LG 电池和充电器。LG 充电器根据电池而设计, 可最大限度地延长电池寿命。
- 切勿拆卸电池, 或造成电池短路。
- 保持电池组上金属触点的干净清洁。
- 电池无法再使用时, 请更换电池组。电池组在更换前一般可进行数千次充电。
- 新换电池应继续充电, 以利发挥其最大功效。
- 切勿将电池充电器直接曝露于阳光下, 也不应在过度潮湿的环境中使用(如浴室)。
- 切勿将电池置于高温或寒冷的环境中, 这将影响电池的性能。
- 如果用不适当的电池进行替换,可能会有爆炸危险。
- 请按制造商的说明处置用过的电池。如果可能,请循环使用电池。不要象处理家用废物一样处理电池。

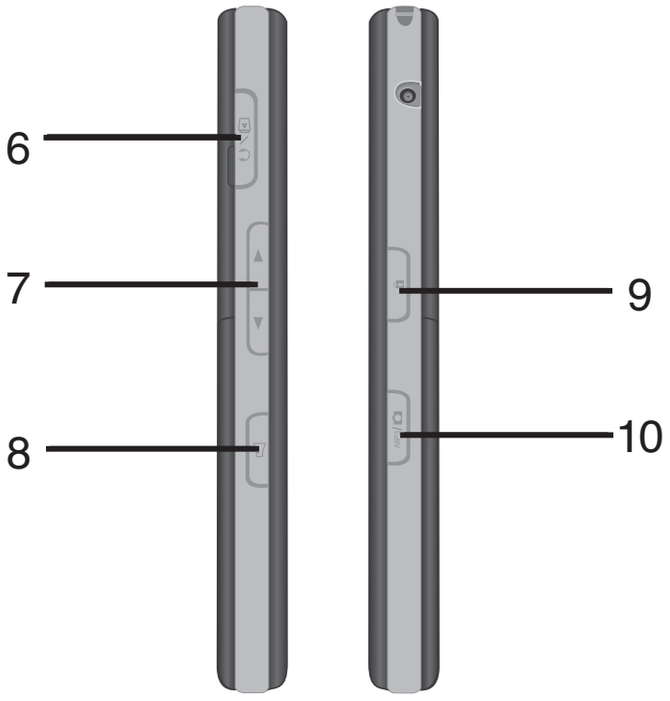

手机正面

1. 听筒
2. LCD 屏幕
- **顶部:** 信号强度、电池电量及其它功能
- **底部:** 菜单/拨号/信息/电话本指示

3. 发送键
- **拨打电话或接听来电。**

4. 清除/取消键
- **每按一下删除一个字符。**
- **使用此键返回上一个屏幕。**

5. 结束/电源键
- **结束通话或拒接来电。**
- **开机/关机(长按)**

6. 充电器/数据线/免提连接器

7. 侧按键
- **屏幕处于待机模式时:** 控制按键音量
- **在菜单中:** 上拉与下拉
- **通话时:** 听筒音量

8. 情景模式键
- **长按激活/停用振动模式。**
- **通过短按此键,进入情景模式菜单。**
- **在键盘锁模式下,长按可激活解锁模式。**

9. 键盘锁/解锁键

10. MP3/相机键
- **短按此键进入 MP3 菜单。**
- **按住此键激活相机模式。**

手机背面

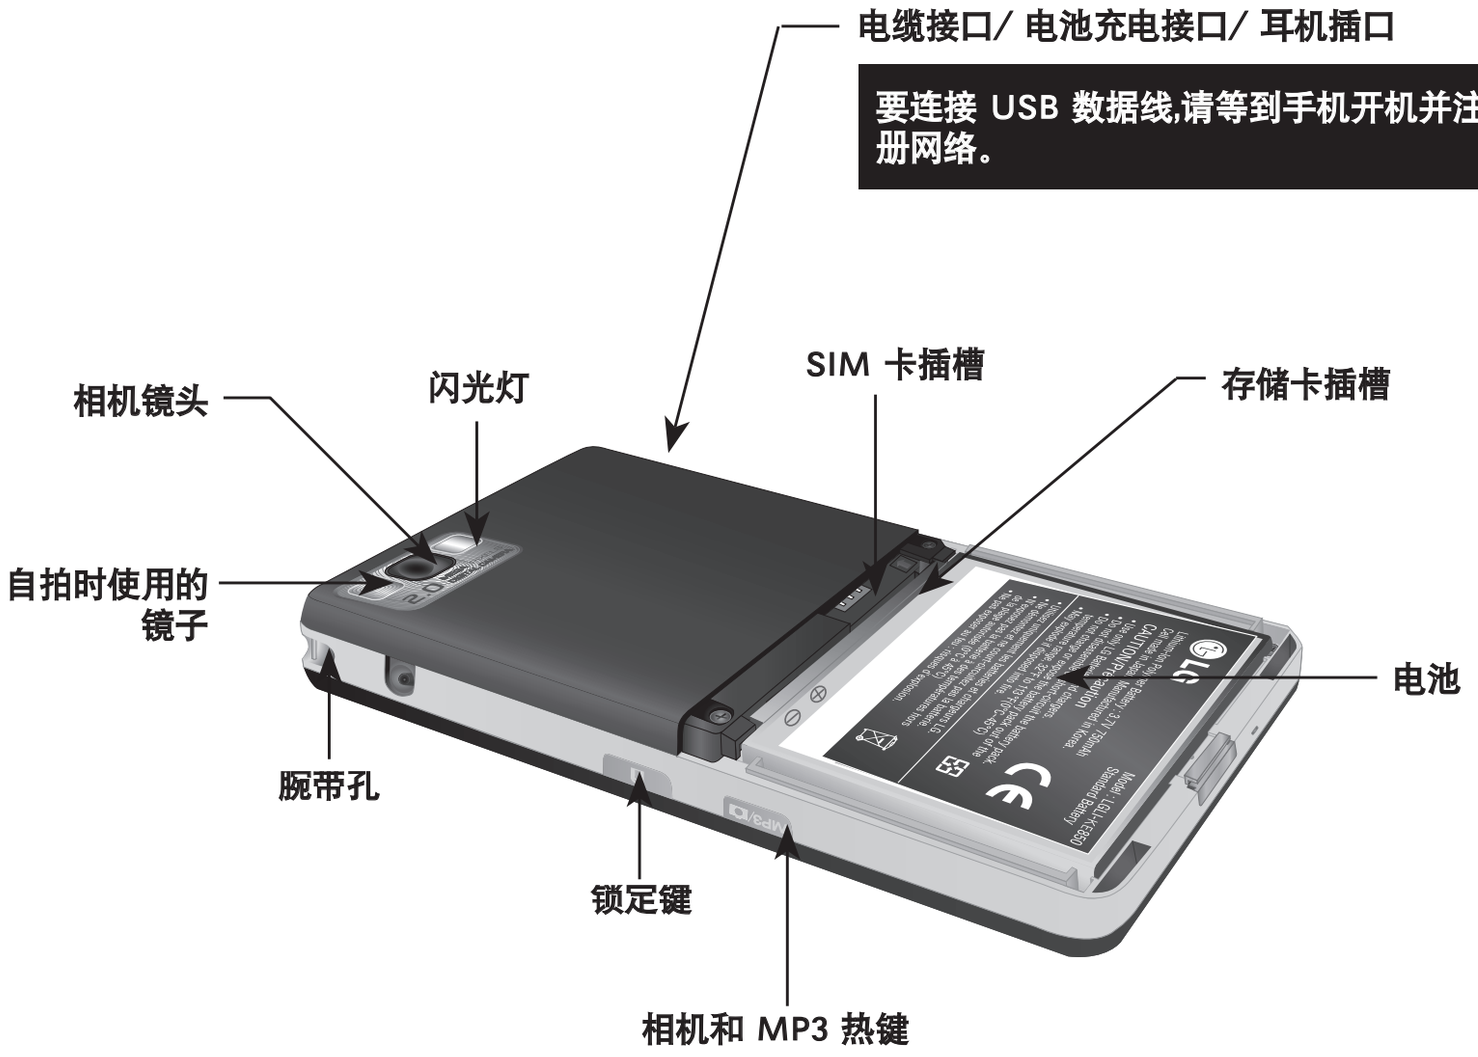
电缆接口/ 电池充电接口/ 耳机插口
要连接 USB 数据线,请等到手机开机并注册网络。
相机镜头
闪光灯
SIM 卡插槽
存储卡插槽
自拍时使用的镜子
电池
腕带孔
锁定键
相机和 MP3 热键

- 本产品 LCD 屏上的键都是轻触式按键。
- 使用本产品前,请确保阅读“轻触式按键警告”。

轻触式按键警告

1. 请确保您的双手是清洁且干燥的。
   - 避免双手表面残留水气或将轻触式按键置于潮湿的环境中。

2. 使用轻触式按键时,您无需用力按它们。不要对产品进行激烈撞击,这可能会损坏轻触式按键的灵敏性。
3. 使用指尖准确轻按您所需的轻触式按键,请小心不要接触到具有其它功能的按键。
4. 当主屏和轻触式按键指示灯都关闭时,按轻触式按键不会打开主屏指示灯。按 键,主屏指示灯亮起(轻触式按键指示灯关闭时,轻触式按键无法正常工作)。
5. 如果轻触式按键被手机盒或塑料盖住,那么它们可能无法正常工作。此外,如果您使用轻触式按键时戴着手套,那么它们可能无法工作。
6. 使轻触式按键表面远离金属或其它传导材料,因为接触它们将导致损坏。
7. 本手机不允许使用钢笔或手写笔来选择菜单。如果使用钢笔或手写笔,菜单可能无法正确激活。请仅用手指使用手机。
8. 在湿热环境中,可能无法激活轻触式按键。

显示信息

轻触一下墙纸“模拟时钟”,您可以设置闹钟。模拟时钟为默认设置。

图标	说 明
	用于直接进入菜单。
	用于拨打电话或发送文本/多媒体信息。
	用于发送文本/多媒体信息以及查看收件箱中的信息。您可以激活与信息相关的各种功能。
	用于访问电话本列表。

手机屏幕会显示很多图标, 具体描述如下:

屏幕上的图标

图标/指示器	描 述
	表示网络信号的强度。
	指示您目前正在使用GPRS。
	指示您目前正在使用EDGE。
	显示您目前不在服务区。
	您正在使用漫游服务。
	闹铃已设定并启动。
（空） （完整）	显示电池电量。
	表示您收到了文本信息。
	表示您收到了语音信息。
	表示信箱已满。

图标/指示器	描 述
	情景模式中的振动功能。
	情景模式中的私人功能。
	情景模式中的大声功能。
	情景模式中的无声功能。
	情景模式中的耳机功能。
	表示您设置了呼叫转接。
	指示手机目前正在访问WAP。
	表示您激活了飞行模式。
	表示您激活了蓝牙模式。

通话质量视网络信号强度而定。信号强度低于2格 时, 您可能会遇到没有声音、通话掉线或音质极差等情况。请根据网络信号强度指示条的情况, 决定您是否进行通话。当没有指示条时,表示不在网络服务区内: 在此情况下, 您不能访问网络以使用任何服务。

安装SIM 卡和手机电池

在卸下电池前确保电源已关闭。

1. 卸下电池盖。

按电池释放闩,将电池盖沿着手机底部滑动。

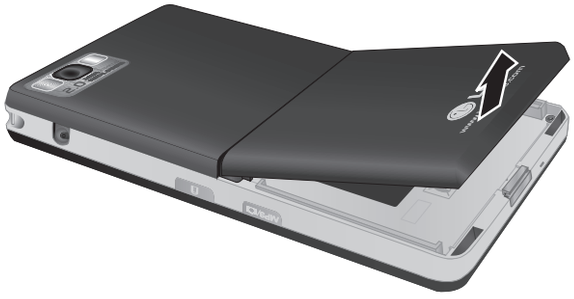

如果在电源打开时从手机上卸下电池, 可能导致手机出现故障。

2. 卸下电池。

握住电池边缘, 将电池从电池室取出。

3. 安装 SIM 卡。

将SIM 卡滑进SIM 卡插槽中。确保SIM 卡以正确方式插入并且卡上的金色接触区域面朝下。要取出SIM 卡, 轻轻将卡向下按并反向推出。

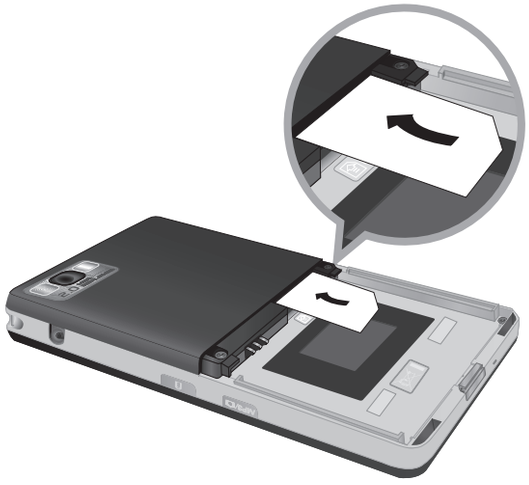

插入SIM 卡

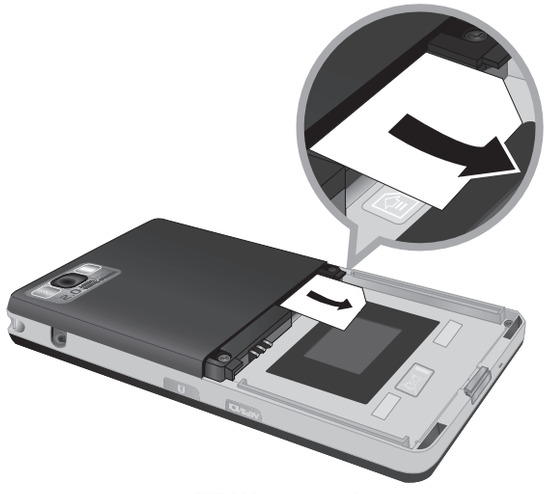

取出SIM 卡

SIM 卡的金属触点很容易因刮擦而损坏。操作时请对SIM 卡多加注意。遵守随SIM 卡提供的说明。

4. 安装电池。

先将电池后端插入电池室底部。请确保电池触点与手机端子对齐。 向下推电池前端, 直至电池卡入到位。

5. 安装电池盖。

将电池盖放到手机的适当位置,并向下按直至闩锁卡入到位。

给电池充电

要用充电器为手机充电，您必须先装上电池。

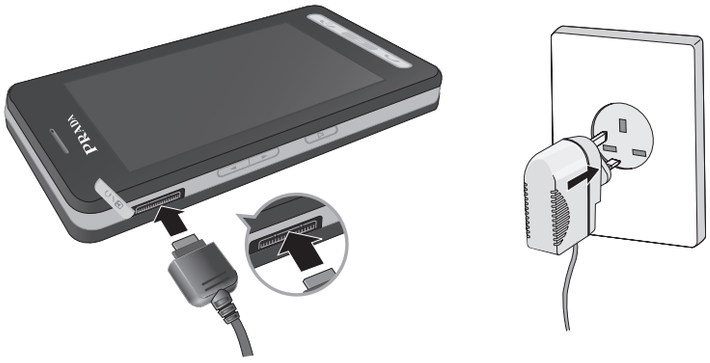

1. 手机原装电池在使用前必须完全充电。
2. 将充电器的一端插入手机底部。
3. 将充电器的另一端连接到墙上的AC 电源插座。仅使用原装充电器。
4. 完全充电后电池图标条棒将停止闪烁。

– 不可强行插入充电接口，因为这将损坏手机及充电器。
– 如果在本国外使用电池组充电器，务必使用附属的适配插头进行适当的配置。
– 充电时切勿取出电池或SIM 卡。
– 如果用不适当的电池进行替换,可能会有爆炸危险。请按制造商的说明处置用过的电池。

– 在发生雷电时，务必拔掉电线和充电器，以免遭受电击或发生火灾。
– 确保没有细尖的物体，如动物牙齿、指甲进入手机内触碰电池。 这存在引发火灾的危险。

断开充电器

如图所示，将其与手机断开。取出时请拉扯接头,而不是电源线。

存储卡

将存储卡滑入插槽,直至完全到位,如下图所示:

安装存储卡

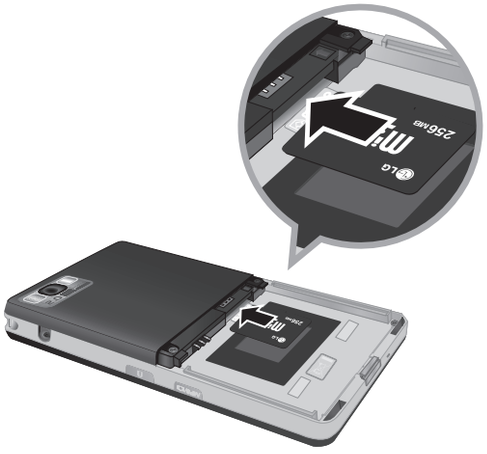

金属触点朝下,滑入存储卡。

拔出存储卡

1. 用指尖将存储卡向插槽内推以激活弹出机制。
2. 将存储卡从卡槽内小心取出。

拔出存储卡

- 仅在需要时取出或插入存储卡, 因为取出/插入可能会导致出现问题。
- 插入外部存储卡时, 如果图标显示为红色, 请取出并重新插入。(如果重新插入后, 图标仍然显示为红色, 那么有可能是存储卡损坏, 请使用其它存储卡替换。)
- 存储卡使用(存储、复制、删除、初始化、播放) 过程中, 取出外部存储卡或关闭电源都可能会导致存储卡严重损坏或手机出现故障。
- 建议在手机内部对存储卡进行初始化。 存储卡包括针对任何外部存储文件的系统空间, 因此在初始化存储卡时可能保留部分性能。
- 我们始终建议您备份存储卡上保存的任何数据。
- 少数存储卡可能与手机不兼容,有关详细信息,请与制造商联系。

拨打一个电话

1. 确保手机已开机。
2. 在待机模式下,轻触 图标。
3. 输入电话号码。若要删除以输入的数字, 您只需按 键即可。

◦ 如果按 键或轻触 ,您将返回到上一个菜单。

4. 按 键或轻触 拨打电话。
5. 按 [结束] 键来结束通话。

拨打国际电话

1. 轻触并按住 键以输入国际前缀。符号 “+” 在拨叫过程中将被替代为国际通话接入码。
2. 输入国家代码, 区位号以及电话号码。
3. 按 键或轻触 拨打电话。

结束呼叫

当完成呼叫后, 按结束 键。

从电话本中拨打电话

您可以将常用的联系人姓名和电话号码保存在SIM卡和(或) 手机内存中,通过在电话本中查找所需的姓名, 即可拨打相应电话号码。

调节音量

通话过程中,使用手机侧面的向上/向下键调节音量。

应答电话

当接收到电话时, 手机响铃并且LCD 画面闪烁。如果可以识别致电者, 则会显示该致电者的电话号码(如果存储在电话本列表中,则会显示姓名/图片)。

1. 按 键或左软键来接听来电。
2. 通话结束后, 按 键。

当使用电话本或其它菜单功能时, 也可以应答电话(可移动磁盘功能除外)。

锁定轻触式屏幕和键盘

按 键将激活键盘锁模式。

信号强度

如果是在建筑物内部, 移到窗口附近可以改善信号接收质量。您可以通过手机LCD 屏幕上的信号指示符( ) 检查信号强度。

输入文本

在触摸屏上使用键盘输入字母数字字符。例如, 在电话本中存储姓名、写文本信息、创建个人问候语或者在日程表安排事件等, 都需要输入文本。本款手机提供以下文本输入方法。

某些字段可能只允许以一种文本输入模式输入(如在电话本字段输入电话号码)。

T9 英文模式

此模式允许以每个字母只需一次击键的方式输入单词。键盘上的方式输入单词。键盘上的每个按键对应于多个字母。此模式自动将所击按键与内部词典进行比较，然后确定正确的单词，因此所需的击键次数比传统的 ABC 模式要少。默认情况下,T9 设为“关闭”。

要进入 T9 模式,请轻触 ,选择 T9,然后选择打开 T9。

ABC/ABC/ABC 模式

在此模式中，输入字母时，按标示为所需字母的按键一次、两次、三次或更多，直到显示该字母。

123 模式(数字模式)

以每个数字一次击键的方式输入数字。要在文本输入字段中将输入模式更改为 123,请轻触 键,直到屏幕右上角显示 123 模式。

长按 ,您可以返回上一个字母输入模式。

中文模式

这种模式允许您使用拼音或笔划输入法输入汉字。

更改文本输入模式

1. 当处于允许输入字符的区域中时，在LCD 屏幕的右上角可以看到文本输入模式指示符。
2. 如果要更改模式,请轻触 ,直至转到所需可用模式。

长按 .,您可以返回上一个字母输入模式。

使用 T9 模式

T9 预测性文本输入模式允许您以最少的按键次数输入单词。当您按每个按键时，手机开始显示它根据内置词典认为正确的字符。

您可以通过菜单选项 选择不同的 T9 语言。然后选择 T9 语言输入法。

1. 当处于 T9 预测性文本输入模式时,通过轻触 2 到 9 键开始输入单词。

∘ 在输入字母时，单词不断更改。请忽略屏幕上显示的单词，至整个单词输入完毕。

例: 按 4 6 6 3 输入 Good。

∘ 如果单词选择列表中没有所需的单词,请使用 ABC 模式添加该单词。

2. 输入整个单词之后再对输入的内容进行编辑或删除。
3. 按 0+ 键以空格结束每个单词。要删除字母，按住删除整个单词。

要删除字母,请按 。按住 连续清除字母。

要从文本输入模式中退出而不保存输入内容,请按 . 手机返回到待机屏幕。

使用 ABC/ABC/ABC 模式

使用 2 至 9 键输入文本。

1. 轻触标示为所需字母的按键:
   - 按一次输入第一个字母
   - 连续按两次输入第二个字母
2. 要插入空格,请轻触 0+ 键一次。要删除字母,按 键。轻触并按住 键以连续删除字母。

使用 123(数字) 模式

使用 123 模式, 您可以在文本信息中输入数字(例如电话号码)。
轻触与所需数字对应的按键,然后手动切换回适当的文本输入模式。

在字母模式下,通过轻触并按住相应按键,也可以输入数字。

输入符号和字符

在文本编辑模式, 您可以输入各种符号或特殊字符。
要输入符号, 请按 键。

触摸屏由以下菜单组成:

主题不同,顶部菜单的标题图标也将不同。(默认为黑色主题。)

标题菜单

图标	说 明
	通话菜单
	多媒体菜单
	工具菜单
	设置菜单

您的手机提供许多可以在呼叫期间使用的控制功能。要在呼叫期间访问这些功能，按左软键 [选项]。

如果激活键盘锁,您可以选择“静音”键。

呼叫期间

在手机屏幕上，在呼叫期间显示的菜单与在待机模式中显示的默认主菜单不同，下面对这些选项进行说明。

手机扬声器

通话过程中,您可以通过按“锁定”键及 键激活手机扬声器。

拨打第二个电话(需网络支持)

您可以从电话本中查到号码以拨打第二个电话。通话过程中,按情景模式键将激活拨号键盘。

在两个呼叫之间切换

在通话期间，您可以通过按右软键或通过按 键拒绝接听第二个来电。

接听来电

要在手机响铃时应答来电,滑开手机即可。如果手机已滑开,请按 键 当您在通话过程中有来电，手机也会提醒您。听筒中发出提示音,显示屏上将显示第二个呼叫正在等待。
该功能被称为呼叫等待，只有在您的网络支持它时才可用。如果“呼叫等待”功能已打开,您可以按左软键将第一个呼叫置于保持状态,然后接听第二个呼叫。

拒接来电

只需按 键，您可以拒接来电而不作应答。
通话过程中,您可以通过按两次 键拒接来电。

使麦克风静音

通话过程中,您可以通过轻触右下角的 [静音] 键静音。通过轻触 [取消静音],可以取消手机的静音。 当手机静音时,致电者不能听到您的声音,但您仍可以听到他们的声音。

在呼叫期间打开双音多频音调

要在呼叫期间打开双音多频音调，按左软键，然后选择开启多音双频(DTMF)。可以使用同样方式关闭双音多频音调。双音多频音调允许您的手机使用自动电话交换台。

通话过程中,如果没有按任何键,几秒钟后,显示屏和键盘背景灯将关闭。按任意键即可打开背景灯。背景灯关闭时,将不会发送 DTMF。

通话过程中,要激活键盘,请按侧面的 。

多方通话

通过多方通话服务，您能够与多个致电者同时通话（如果您的网络运营商支持此功能）。仅当您具有一个活动的呼叫及一个保持的呼叫时（ 已应答这两个呼叫），才可以建立多方通话。一旦建立多方通话，则建立多方呼叫的用户可以添加、断开或分离（ 即从多方通话中撤出，但仍与您相连接）呼叫。在多方通话中最多可以与五位致电者通话。开始之后，您即可以控制多方通话,并且只有您能将致电者加入多方通话。

拨打第二个电话

当目前已处于呼叫中时，您可以拨打第二个电话。输入第二个号码并按 [发送] 键。当连接第二个呼叫之后，第一个呼叫自动置于保持状态。您可以通过按左软键，然后选择切换，在两个呼叫之间切换。

通话过程中,要激活键盘,请按侧面的 。

启动多方通话

保持一个呼叫，并在一个呼叫处于活动状态时，按左软键，然后选择多方通话/全部加入。

保持多方通话

要激活保持的多方通话，请按发送键。此外也可以按左软键 [选项] 并选择多方通话/ 全部保持。保持通话的其他用户不会断开。要返回多方通话模式,请在选择“多方通话”后轻触 [选项]。

向多方通话加入呼叫

要将一个通话添加到现有的多方通话,轻触左软键,然后选择“多方通话”中的“加入”菜单。

在多方通话期间拨打私人电话

要与多方通话中的某个致电者进行私人通话,在屏幕上显示该致电者的号码,然后轻触左软键。选择多方通话/私人通话将其他致电者置于保持状态。

结束多方通话

要结束多方通话，请按开关机键。您也可以通过在按左软键后选择结束全部通话来结束多方通话。

此图标指示与通话、信息和浏览器相关的菜单。

拨号

电话本

1 查找
2 新建联系人
3 快速拨号
4 群组
5 设置
6 信息

通话记录

1 全部通话
2 未接来电
3 已拨电话
4 已接来电
5 通话费用
6 数据信息

信息

1 新建文本信息
2 新建多媒体信息
3 新建电子邮件
4 收件箱
5 电子邮箱
6 草稿箱
7 发件箱
8 已发送
9 收听语音邮件
0 小区广播
11 模板
12 设置

浏览器

1 主页
2 书签
3 转到URL
4 设置

此图标指示与多媒体功能相关的菜单,如 MP3、相机、摄像机、FM 收音机。

我的文档

1 图像
2 声音
3 视频
4 文档
5 其它

照相

摄像机

录音

音乐播放器

1 所有歌曲
2 设置

FM 收音机

游戏和应用程序

1 默认游戏
2 下载内容
3 信息
4 设置

此图标指示与为用户提供便利的工具相关的菜单。

闹钟

计算器

世界时钟

单位换算器

1 币种
2 面积
3 长度
4 重量
5 温度
6 体积
7 速度

日程表

备忘录

此图标指示与设备设置相关的菜单。

显示

1 墙纸
2 背景灯
3 时钟
4 亮度
5 主题
6 网络名称

情景模式

1 通用
2 静音
3 振动
4 大声
5 耳机

设置

1 日期和时间
2 省电模式
3 Languages
4 通话
5 保密设置
6 连接
7 飞行模式
8 重设设置
9 内存状态

蓝牙

1 打开/关闭蓝牙
2 设备列表
3 蓝牙设置
4 支持的服务

SIM 服务

此菜单视 SIM 卡和网络服务而定。

拨号 (功能表 1)

此图标表示与通话相关的菜单。如果选择此图标,您可以拨打电话以及发送信息。

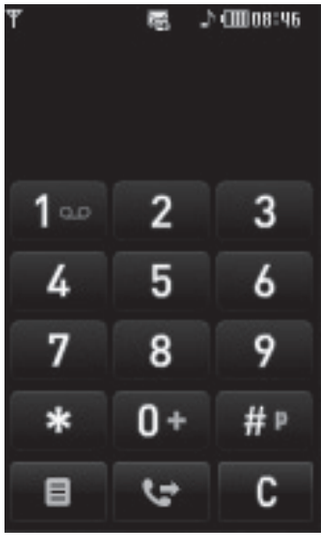

轻触相应图标,您可以在待机模式下直接进入“拨号”、“信息”和“电话本”菜单。

要拨打及接听电话,请确保手机已开机。手机开机并输入 PIN 码后(或者不用输入,取决于 PIN 码请求设置),手机将自动搜索在 SIM 卡中注册的网络。

要拨打电话,请轻触 图标,然后进入“拨号”菜单。屏幕上显示键盘后,输入电话号码。

电话本 (功能表 2)

1. 在待机模式下,轻触 图标或菜单图标。
2. 选择“电话本”菜单。

查找 (功能表 2.1)

1. 在“电话本”菜单中轻触“搜索”。
2. 您可以查看保存的电话本列表。
3. 如果要编辑、删除或复制任何条目,请选择 图标。屏幕上显示以下菜单。

- **新信息:** 找到所需号码后,您可以向选定号码发送文本/多媒体信息,或电子邮件。
- **删除:** 您可以删除一个条目。
- **编辑:** 您可以通过使用导航键编辑姓名、号码、群组、字符和图片。
- **新建联系人:** 您可以添加新的条目。
- **通过文本/多媒体/电子邮件/蓝牙发送联系人:** 您可以将电话本数据发送给与蓝牙兼容的其它设备。您也可以通过文本/多媒体/电子邮件发送保存在电话本中的条目。
- **复制到 SIM 卡/手机:** 您可以从 SIM 卡或手机内存复制条目。
- **删除多个:** 您可以同时删除多个条目。
- **按 3x4 搜索:** 您可以通过输入的名称搜索条目。

新建联系人 (功能表 2.2)

您可以使用该功能来添加电话簿条目。手机内存容量为1000 个条目。SIM 卡内存容量视 SIM 卡自身而定。您可以在SIM 卡中保存字符, 而字符的数量取决于SIM 卡。

1. 选择“新建联系人”。
2. 选择您要保存的存储器位置:SIM 卡或手机。
   a. 轻触名称空白处,输入名称,然后轻触 [确定]。
   b. 输入号码,轻触 [保存]。

最多可存储的姓名和号码长度取决于 SIM 卡的类型。

   c. 您可以通过滚动滚动条设置条目组。
   d. 您可以选择铃声。
   e. 您可以通过滚动滚动条为条目设置字符和图片。

步骤 c、d 和 e 仅针对手机中存储的号码,不是用于 SIM 卡中存储的号码。

快速拨号 (功能表 2.3)

您可以为姓名列表条目指定按键 2~9 中的任一按键。通过轻触并按住此键,您可以直接拨号。在分配快速拨号号码后,您可以更改或删除条目。您也可以向此号码发送信息。

1. 选择快速拨号。
2. 如果您想添加快速拨号, 选择空。然后, 您可以在电话簿中查找姓名。
3. 选择底部中间的 [分配]。

群组 (功能表 2.4)

您可以设定7 个群组列表。

- **设置群组铃声:** 您可以根据群组不同设定来电铃声。
- **设置群组图标:** 您可以根据群组不同设定标志。
- **添加成员:** 您可以向选定群组添加号码。
- **删除成员:** 允许您从群组中删除号码。
- **删除成员:** 您可以修改和编辑群组名称。
- **全部删除:** 可以将群组中的所有成员删除。

设置 (功能表 2.5)

1. 选择“设置”。

- **全部复制**
  您可以在 SIM 卡存储器和手机存储器之间复制/移动条目。

2. 选择“全部复制”
   - **SIM 卡到手机:** 您可以将所有条目从 SIM 卡复制到手机内存中。
   - **手机到 SIM 卡:** 您可以将所有条目从手机内存复制到 SIM 卡。

- **全部删除**
  您可以删除 SIM 卡或手机中的所有条目。此功能要求安全码。

信息 (功能表 2.6)

- **服务号码**
  使用此功能访问网络运营商提供的特定服务列表(如果 SIM 卡支持)。
- **本机号码**
  您可以查看本机号码。如果使用其它 SIM 卡,您可以使用 <添加> 保存新号码。
- **内存状态**
  您可以检查 SIM 卡或手机内存的状态。
- **名片**
  您可以创建名片。选择“编辑”,您可以创建新的名片。

通话记录 (功能表 3)

仅当网络支持服务区内的主叫线路识别(CLI) 时, 您才能检查未接来电、已接来电和已拨电话。
屏幕上显示电话号码和姓名(如果有) 以及通话日期和时间。您还可以查看通话时间和计费。

全部通话 (功能表 3.1)

您可以查看近期的未接来电, 已拨电话和已接来电的所有列表。

未接来电 (功能表 3.2)

此选项允许您查看最后40 个未应答的来电。使用[选项] 键, 您还可以:

- 查看电话号码(如果有)并呼叫,或将该号码保存到电话本中。
- 为该号码输入姓名,并保存到电话本中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

已拨电话 (功能表 3.3)

此选项允许您查看最后40 个去电(拨出或尝试)。使用[选项] 键, 您还可以:

- 查看电话号码(如果有)并呼叫,或将该号码保存到电话本中。
- 为该号码输入姓名,并保存到电话本中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

已接来电 (功能表 3.4)

此选项允许您查看最后40 个来电。在按左软键[选项] 之后, 您还可以:

- 查看电话号码(如果有)并呼叫,或将该号码保存到电话本中。
- 为该号码输入姓名,并保存到电话本中。
- 向该号码发送信息。
- 从列表中删除该呼叫。

通话费用 (功能表 3.5)

通话时间

可查看来电和去电的通话时间长度。您也可以重置通话时间。可以使用以下计时方式:

- **最后通话:** 最后一次通话的时间长度。
- **全部通话:** 上次计时器重设之后, 所有来电和去电的总时间长度。
- **已拨电话:** 去电的时间长度。
- **已接来电:** 接听的时间长度。

通话计费

允许您查看最后一次通话或所有通话的费用。

设置

在此菜单中,您可以在输入 PIN2 码后更改设置。

- **设定话费:** 此网络允许您通过选择计费单位来限制通话费用。
- **通话费率:** 您可设置货币类型和计费单价。通话费率的服务提供商联系以获得计费单价。 要在该功能表选择货币或单位, 您需要输入PIN2 码。
- **自动显示:** 该网络服务可让您自动查看最后通话的费用。如果您在自动显示功能表中选择开, 通话结束时, 您即可查看最后通话的费用。

数据信息 (功能表 3.6)

您可以通过 GPRS 信息选项查看在网络上传输的数据量。此外,您也可以查看自己的在线时间。

浏览计时 (功能表 3.6.1)

你可以检查最后浏览和全部浏览的时间长度。您也可以重置浏览时间。

数据量 (功能表 3.6.2)

您可以查看已发送, 已接收或者全部的数据量, 您也可以全部清零。

信息 (功能表 4)

本功能表涉及的功能包括: SMS(文本信息服务), MMS(多媒体信息服务), 电子邮件、语音邮件以及网络的服务信息。

新建文本信息 (功能表 4.1)

您可写入并编辑文本信息。您也可以查询信息页数。

1. 进入“信息”菜单。
2. 如果您要撰写一则新信息,请选择“新建文本信息”。
3. 使用T9 文本可更容易地输入信息。
4. 轻触 图标,您可以查看以下子菜单:

- **插入:** 您可以插入符号、图像、声音、文本模板、电话本条目或您自己的名片。
- **T9:** 您可以激活或取消 T9 模式。
- **撰写语言:** 您可以选择语言。
- **新建 T9 单词:** 您可以使用 T9 模式新建单词。
- **保存到草稿箱:** 您可以在草稿箱中保存信息。
- **清除文本:** 您可以删除所有文本。
- **退出:** 如果在写信息时按“退出”, 可结束写信息并返回“新信息”菜单。您写的信息不会保存。

本手机支持 EMS 版本 5,可用于发送彩图、声音、文本样式等等。如果另一方的手机不支持这些选项,将无法正确接收您发送的图片、声音文件或文本样式。

新建多媒体信息 (功能表 4.2)

您可以编写多媒体信息, 查看信息大小。

1. 进入“信息”菜单。
2. 如果您要撰写一则新信息,请选择“新建多媒体信息”。
3. 您可以新建信息,也可以从已创建的多媒体信息模板中进行选择。

可插入彩信的最大文件大小为 300 KB。

“收件人”选项卡中的选项菜单

- **发送:** 您可以将多媒体信息发送给多个收件人、为信息设定优先级,或稍后发送信息。
- **预览:** 您可以预览编写的多媒体信息。
- **联系人:** 您可以为信息插入联系人。
- **最近信息:** 您可以查看自己最近撰写的信息。
- **设置:** 您可以配置设置以发送信息。
- **退出:** 您可以退出选项列表。

所有信息均会自动保存在发信箱中,即使在发送失败之后。

“主题”选项卡中的选项菜单

- **发送:** 您可以将多媒体信息发送给多个收件人、为信息设定优先级,或稍后发送信息。
- **预览:** 您可以预览编写的多媒体信息。
- **退出:** 您可以退出选项列表。

“幻灯片”选项卡中的选项菜单

- **插入:** 您可以为信息插入符号、图像、视频剪辑、模板及其它内容。
- **预览:** 您可以预览编写的多媒体信息。
- **预览:** 您可以预览编写的多媒体信息。
- **保存:** 修改选择的多媒体信息。
- **幻灯片持续时间:** 您可以设置幻灯片、文本、图片和声音的计时器。
- **退出:** 您可以退出选项列表。

如果在创建多媒体信息时选择了图片（50K),则加载过程约用时 5 秒。加载期间,您不能激活按键。加载完成后,您将可以写入多媒体信息。

新建电子邮件 （功能表 4.3）

要发送/接收电子邮件,您应先设置电子邮件帐户。

1. 您可以在“收件人”、“抄送”字段中输入最多 20 个电子邮件地址。
   提示: 要输入“@”,请轻触 并选择“@”。
2. 输入电子邮件主题,然后轻触“确定”。

帐户 （功能表 4.3.1）

通过选择“新建”,您最多可以设置 3 个电子邮件帐户。使用 ,您可以设置以下值。

- **设置为默认帐户:** 您可以将某个电子邮件帐户设为默认帐户。
- **编辑**
  - **帐户名称:** 您可以编辑电子邮件帐户名称。
  - **电子邮件地址:** 输入服务提供商提供给您的电子邮件地址。
  - **我的名称:** 输入用户名。
  - **接收邮件服务器:** 输入接收电子邮件的 POP3 或 IMAP4 地址。
  - **用户名:** 输入您的电子邮件 ID。
  - **密码:** 输入您的电子邮件密码。
  - **发送邮件服务器:** 输入发送电子邮件的电脑的 SMTP 地址及端口号。

保存: 您可以保存电子邮件设置。

高级设置

- **协议类型:** 选择您的协议类型。（POP3/IMAP4）
- **最大接收大小:** 设置可以接收的最大文件大小（100KB/200KB/300KB）。
- **保存到服务器:** 选择“开”,将文件保存到服务器。
- **插入签名:** 选择“开”,将您的签名添加到电子邮件。
- **邮件回复地址:** 您可以设置邮件回复地址。
- **接收端口号:** 输入接收电子邮件的 POP3 或 IMAP4 端口号。
- **发送端口号:** 输入发送电子邮件的计算机的 SMTP 地址及端口号。
- **发送邮件认证:** 发送邮件时,您可以设置是否需要认证。
- **发送服务器 ID:** 输入您的电子邮件 ID。
- **发送服务器密码:** 输入您的电子邮件密码。

网络设定 （功能表 4.3.2）

网络设定是用于连接 Internet 的网络信息。
手机内存中已存有某些运营商的默认网络设定。

签名 (功能表 4.3.3)

您可以设置自己的签名。

– 对于每个电子邮件帐户,您最多可以保存 20 封邮件(5 个帐户总共可以保存 100 封邮件)。“收件箱”文件夹可最多保存 20 封邮件;“草稿箱”和“发件箱”文件夹可各保存 5 封邮件;“已发送的邮件”文件夹可最多保存 10 封邮件。如果“草稿箱”、“发件箱”或“已发送的邮件”文件夹已满,则当您试图向这些文件夹之一保存新邮件时,手机将自动删除最早保存的邮件。

– 您可以发送最大 300 kb 的邮件(包括附件在内),并且可以接收最大 100 kb 的邮件。如果您将接收含有 5 个以上附件的邮件,则手机将仅接收 5 个附件。某些附件可能无法正确显示。

收件箱 (功能表 4.4)

当收到信息时, 手机会给予提示。收到的信息会存储到收信箱中。在收信箱中, 您可以通过指示图标识别每一条信息。

如果手机显示“无空间接收 SIM 卡信息”,您仅需要从收件箱中删除一些信息即可。如果手机提示“无空间接收信息”,您可以通过删除信息、媒体和应用程序获得空间。

*** SIM 卡信息**

SIM 卡信息指存储在 SIM 卡中的信息。您可以将此信息移至手机。

对于收到的多媒体信息通知, 您可以对信息进行操作或者等待其自动下载。

若要读取一条信息, 请按左软键[选项]:

- **删除:** 删除所选信息。
- **回复:** 您可以向发送方回复信息。
- **转发:** 您可以向所有收件人发送回复。
- **回复电话:** 您可以向发送方回复电话。
- **信息:** 您可以查看信息详情。
- **标记:** 选定要删除的信息。
- **删除多个:** 选定要删除的信息后,按“确定”,将删除您选定的所有信息。
- **删除所有已读信息:** 您可以删除所有已读信息。
- **全部删除:** 你可以删除所有信息。

电子邮箱 (功能表 4.5)

当您进入此菜单时,您既可以连接您的远程邮箱检索新邮件,也可以在不登录电子邮件服务器的情况下查看之前检索到的邮件。

您可以检查已保存的电子邮件、草稿箱、发件箱以及已发送的电子邮件。在“收件箱”中,最多可存储 20 封电子邮件。

草稿箱 (功能表 4.6)

使用此功能表,您可以预设最多五条常用的多媒体短信。此功能表显示预设的多媒体短信列表。

可以使用以下选项。

- **编辑:** 修改您选择的信息。
- **删除:** 删除您选择的信息。
- **信息:** 用于查看信息的详情。
- **标记:** 选定您要删除的信息。
- **全部删除:** 删除草稿箱中的所有信息。

发件箱 （功能表 4.7）

此菜单允许您查看要发送多媒体信息或发送失败的信息。成功发送信息后,信息将被移到已发送菜单。

- **重新发送:** 您可以发送信息。信息发出后,此信息将被移到已发信息箱。
- **编辑:** 修改您选择的信息。
- **信息:** 您可以检查信息日期, 时间, 类型等等。
- **删除:** 您可以删除信息。
- **标记:** 选定要删除的信息后,按“确定”,将删除您选定的所有信息。
- **全部删除:** 您可以全部删除发件箱中的文本信息、多媒体信息或全部信息。

已发送 （功能表 4.8）

您可以通过此功能表查看您已经发送的信息。您也可以查看其时间和信息的内容。

收听语音邮件 （功能表 4.9）

选定此菜单后,只需轻触 [确定] 即可收听语音邮件。您也可以在拨号模式下轻触并按住 1 键来收听语音邮件。

当您收到语音邮件时, 您的手机会显示相应的图标并且您可以听到提示音。请与网络提供商联系, 了解有关其服务的详细信息, 以便对您的手机正确进行配置。

小区广播 （功能表 4.0）

（视网络和您所申请的服务而定）

小区广播信息是通过网络以文本信息形式向您的手机发送的。 它们提供诸如天气报告、交通新闻、出租车、药店和股票行情之类的一般信息。 不同类型的信息有不同的号码;因此,您可以联系服务提供商,以便输入所需信息的特定号码。不同类型的信息有不同的号码; 因此您可以联系服务提供商, 以便正确输入特定信息的特定号码。在收到小区广播信息时, 您会看到弹出信息, 告诉您已收到
信息, 或者直接显示小区广播信息。

读取 （功能表 4.0.1）

1. 当您接收到小区广播信息时, 可以通过选择读取显示信息。通过滚动 ,您可以阅读其它信息。
2. 收到的信息可以保存到有新信息到达之前。

栏目 （功能表 4.0.2）

（视网络和您所申请的服务而定）

- **新增:** 您可以使用昵称,在手机内存中添加小区广播信息号码。
- **查看列表:** 您可以查看添加的小区广播信息栏目。如果轻触 图标,可以编辑及删除添加的小区广播信息类别。
- **当前列表:** 您可以在启动列表中选择小区广播信息栏目。如果激活某小区广播信息号码,您便可以接收由该号码发出的信息。

模板 (功能表 4.11)

文本模板 (功能表 4.11.1)

您共有 6 种文本模板, 如下所示:

- **请回话!**
- **我迟到了, 我马上到。**
- **你现在在哪里?**
- **我在路上。**
- **非常紧急! 请速联系。**
- **我爱你!**

多媒体模板 (功能表 4.11.2)

如果模板列表为空,您可以通过轻触“新建”添加新的模板。如果已存在模板,您可以查看以下子菜单:

- **编辑:** 您可以编辑多媒体信息模板。
- **发送:** 您可以发送多媒体信息。
- **删除:** 您可以删除多媒体信息模板。
- **新模板:** 您可以添加多媒体信息模板。
- **全部删除:** 允许您删除模板中所有多媒体信息。

设置 (功能表 4.12)

文本信息 (功能表 4.12.1)

如果选择此菜单,您可以轻触栏中的子菜单,如下所示:

- **服务中心:** 如果要发送文本信息,您可以通过此菜单接收短信中心地址。
- **发送报告:** 如果您在该功能表中设定是, 您即可查询您的信息是否已成功发送。
- **有效期:** 该网络服务可让您在发送信息时设定文本信息在信息中心储存的期限。
- **回复计费:** 如果信息已发出, 则它可以允许接收人回复并支付回复至您的手机所需要的费用。 此服务取决于您的服务提供商。
- **信息类型:**
  文本、语音、传真、Natl. 传呼、X.400、电子邮件、ERMES
  通常, 信息类型设定为文本格式。您可以将文本信息转换为 其它格式, 以配合接收信息的设备。要获取有关该功能的信息, 请联系您的服务提供商。

多媒体信息 (功能表 4.12.2)

如果选择此菜单,您可以轻触栏中的子菜单。

- **设置定时器:** 您可以设置每张幻灯片的持续时间。
- **优先级:** 您可以设置您选择的信息的优先级。
- **有效期:** 该网络服务可让您在发送信息时设定信息在信息中心储存的期限。
- **状态报告:** 如果您在该功能表中设定开, 您即可查询您的信息是否已成功发送。
- **已读回执:** 如果在此菜单中设置为“是”,您可以检查收件人是否已阅读了信息。
- **自动下载:** 果选择“ 开”, 您将自动接收多媒体消息。如果选择“关”,您仅会在收件箱中收到通知,您可以稍后查看该通知。如果选择“仅限本地网络”,那么您仅可以在使用本地网络时接收多媒体信息。
- **网络设定:** 如果选择多媒体信息中心, 您可以设置多媒体信息中心的URL地址。
- **允许的消息类型**
  个人: 个人信息。
  广告: 商业信息。
  信息: 必要信息。

电子邮件 (功能表 4.12.3)

此菜单允许您编辑、删除或添加电子邮件帐户。

- **帐户**
  通过选择“新增”,您最多设置电子邮件帐户。使用“编辑”菜单,您可以编辑设置值。有关详细信息,请参阅第 33 和 34 页。
- **网络设定**
  您可以激活保存为默认值的网络设定。
- **签名**
  您可以设置自己的签名。

语音邮件中心 (功能表 4.12.4)

如果您的网络服务提供商支持此功能, 则可接收语音邮件。当新语音邮件已接收, 屏幕上将显示符号。请向您的网络服务提供商查询服务详情, 以便相应地配置手机。

Push 信息 (功能表 4.12.5)

选择是否接收 Push 信息。

小区广播 (功能表 4.12.6)

- **接收**
  开: 如果您选择此选项, 您的手机将接收小区广播信息。
  关: 如果您选择此选项, 您的手机将不再接收小区广播信息。
- **信息提示**
  开: 当您收到小区广播信息时,您的手机将发出蜂鸣音。
  关: 当您收到小区广播信息时,您的手机不会发出蜂鸣音。
- **语言**
  您可以选择所需语言。 然后手机将以您所选的语言来接收小区广播信息。

浏览器 (功能表 5)

您可以访问不同的 WAP(无线应用协议）服务, 如银行业务、新闻、天气报告和航班信息等。这些服务专为手机应用而设计, 由WAP 服务提供商负责进行维护。

向您的网络运营商及(或）希望使用其服务的服务提供商咨询, 了解WAP服务的提供、定价和收费情况。服务提供商将向您提供有关如何使用其服务的说明。

一旦建立连接, 屏幕上即显示主页。主页内容视服务提供商而定。要在任何时间退出浏览器, 按开关机键。手机将返回待机模式。

使用WAP 浏览器导航

您可以使用 WAP 浏览器菜单上网。

使用WAP 浏览器菜单

当无线上网时, 有多个菜单选项可供使用。

视浏览器版本而定,WAP 浏览器菜单可能有所不同。

主页 (功能表 5.1)

主页是您在启动的WAP 接入点中所设定的WAP 站点。如果您没有进行设置, 将使用运营商预先设定的站点。

书签 (功能表 5.2)

此菜单使您可以存储喜爱网页的URL 以便以后访问。

要创建书签

1. 选择 图标。
2. 选择“新建”。
3. 输入所需 URL 和名称后,请轻触“保存”。

选定所需的书签后, 便可以使用下列选项。

- **查看:** 您可以查看名称和保存为书签的 URL。
- **编辑:** 您可以编辑所选书签的 URL 和(或) 标题。
- **新建:** 选择此选项创建新的书签。
- **删除:** 删除所选书签。
- **发送 URL:** 您可以发送保存为书签的 URL。
- **全部删除:** 删除所有书签。

转到URL (功能表 5.3)

您可以直接连接到想要的站点。输入特定的 URL 后, 轻触“连接”。

设置 (功能表 5.4)

您可以设置与 Internet 服务相关的上网设定、 缓存及安全性。

网络设定 (功能表 5.4.1)

WAP 接入点为用于连接互联网的网络信息。

每个WAP 接入点均有子菜单, 如下所示:

- **查看:** 您可以查看选定的网络设定。
- **编辑:** 您可以更改网络设定的名称。
- **新建网络设定:** 您可以添加新的网络设定。
- **全部重设:** 从列表中删除选定的网络设定。

缓存 (功能表 5.4.2)

您已访问的信息或服务保存在手机的缓存中, 您可以开启或关闭缓存。

- **清除缓存:** 删除缓存中保存的所有信息。
- **允许缓存:** 如果选择“开”,您可以使用缓存临时保存内容。

安全证书 (功能表 5.4.3)

显示安全证书的列表。

信息 (功能表 5.4.4)

您可以查看 WAP 浏览器的版本。

多媒体

如果轻触“多媒体”图标,您可以输入与多媒体有关的菜单,如相机、摄像机、语音备忘录、MP3、收音机和 Java 游戏。

请勿更改默认文件夹名称,否则它将无法正常工作。

我的文档 (功能表 1)

图像 (功能表 1.1)

显示位于“默认图像”或“下载内容”文件夹中的 JPG/BMP/GIF/PNG 文件列表。

如果轻触 JPG/BMP/GIF/PNG 列表中的 图标,您可以查看以下子菜单(在“缩略图”视图中):

- **发送方式:** 您可以通过彩信/电子邮件/蓝牙发送图像。
- **设为墙纸:** 可以将所选图像设置为墙纸。墙纸支持全屏/调节屏幕/原始模式。
- **删除:** 您可以删除选定的图像。
- **文件:**
  - **旋转图像:** 您可以将图像旋转 90/180/270 度。
  - **重命名:** 您可以更改文件名。
  - **移动/复制:** 您可以在内存和外部存储器间移动或复制图像。
  - **信息:** 显示文件信息。
- **设为墙纸:** 您可以通过蓝牙将选定的文件打印到其它设备。
- **幻灯片放映:** 您可以以幻灯片放映形式查看 JPG/BMP/GIF/PNG 文件。
- **删除多个:** 您可以同时删除多个文件。
- **全部删除:** 删除列表中的所有文件。
- **列表视图:** 您可以查看 JPG/BMP/GIF/PNG 列表。

如果轻触 JPG/BMP/GIF/PNG 列表中的 图标,您可以查看以下子菜单(在“列表”视图中):

- **发送方式:** 您可以通过彩信/电子邮件/蓝牙发送图像。
- **设为墙纸:** 可以将所选图像设置为墙纸。(仅适用于 JPG/BMP/PNG)
- **删除:** 您可以删除选定的图像。
- **文件:**
  - **旋转图像:** 您可以将图像旋转 90/180/270 度。
  - **重命名:** 您可以更改文件名。
  - **移动/复制:** 您可以在内存和外部存储器间移动或复制图像。
  - **信息:** 显示文件信息。
- **设为墙纸:** 您可以通过蓝牙将选定的文件打印到其它设备。
- **幻灯片放映:** 您可以以幻灯片放映形式查看 JPG 文件。
- **删除:** 删除文件。
- **删除多个:** 您可以同时删除多个文件。
- **全部删除:** 删除列表中的所有文件。
- **缩略图视图/列表视图:** 您可以以缩略图/列表图像查看 JPG/BMP/GIF/PNG 文件。

- **您可以将 .JPG (.JPEG) 文件存储在手机或存储卡的“照片”文件夹中。在手机和外部存储器的“图像”文件夹中,您都可以存储 JPG、BMP、PNG、GIF、WBMP 及其它格式的图像文件。**
- **要将“照片”文件夹内的 JPG/BMP/GIF/PNG 文件设为墙纸,请转到“菜单”–“多媒体”–“相册”,然后选择“选项”菜单中的“设为墙纸”。**
- **您不能将 GIF、动画 GIF、动画 GIF、透明 GIF 和渐变 JPG 文件设为墙纸。**

声音 (功能表 1.2)

显示“默认声音”、“下载内容”、“语音备忘录”和 MP3 文件夹中的 MP3、AAC、WMA、I-MELODY、WAVE、MIDI、AMR、MMF、M4A 文件列表。

如果轻触列表中的 图标,您可以查看以下菜单:

- **发送方式:** 您可以在撰写的信息中发送声音文件。
- **设为铃声:** 您可以将声音设为铃声。
- **文件:** 您可以查看文件和 DRM 信息。
- **删除:** 删除文件。
- **删除多个:** 您可以同时删除多个文件。
- **全部删除:** 删除列表中的所有文件。

视频 (功能表 1.3)

显示“下载内容”文件夹中的 MP4 文件列表。

“下载内容”文件夹为默认文件夹。您不能编辑或删除默认文件夹。您可以将通过网络服务下载的文件保存在此文件夹中。

如果您没有在手机中插入外部存储卡,将显示警告信息“未插入外部存储卡”。

如果轻触列表中的 图标,您可以看到以下子菜单(在“缩略图”视图中):

- **发送方式:** 通过彩信、电子邮件和蓝牙将选定的文件发送到其它设备。

您不能使用以下字符:\ / : * ? “ < > |

- **删除:** 删除文件。
- **文件:**
  - **重命名:** 您可以更改文件名。
  - **移动/复制:** 您可以在内存和外部存储器间移动或复制图像。
  - **信息:** 显示文件信息。
- **全部删除:** 删除列表中的所有文件。
- **删除多个:** 您可以同时删除多个文件。如果通过轻触屏幕,您在复选框中标记了 v,那么,您可以删除选定文件,也可以取消操作。
- **缩略图视图/列表视图:** 您可以查看文件列表。

如果文件夹中的视频文件多于 9 个,屏幕右侧将显示“向上/向下”及“上一页/下一页”图标。

可插入彩信和电子邮件的最大文件大小为 300 KB。如果尝试附加的文件超过 300KB,将会显示警告信息“大小超出限制”,随后,操作将被自动取消。

打开文件夹中的视频文件时,您可以使用以下功能:

普通视图

- **通过按音量软键,您可以设置视频文件的音量。**

如果将屏幕转为宽屏,您可以使用以下功能:

图标	描 述
	查看视频文件的运行时间。
	通过彩信发送视频文件
	轻触锁定键
	控制音量
	广角视图
	后退
	暂停或播放
	快进
	转为普通视图。

播放视频文件时,使用蓝牙耳机将听不到声音。

在选项中选择“风景”菜单,您可以水平转换屏幕。默认模式为全屏。(400X240)

完整图像

宽屏

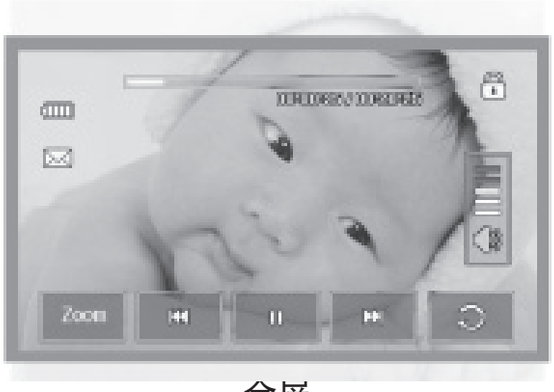

全屏

文档 (功能表 1.4)

显示 SIM 卡或手机内存中的文本文档。打开文件后,您可以轻触 图标以查看子菜单。

- **风景:** 您可以以风景视图阅读文本。
- **转到页面:** 无需搜索,您可以直接转到选定页面。
- **设置放大:** 您可以轻触按钮放大图像。
- **查看设置:** 您可以使用“调整高度”和“调整宽度”菜单 来设置文本大小。
- **书签设置:** 如果设为“开”,您可以直接返回到打开的上一页。您最多可以将 100 个文档保存为书签。

其它 (功能表 1.5)

显示多媒体存储器中“我的媒体”\“其它”内的文件列表。

- **发送方式:** 通过电子邮件或蓝牙将选定的文件发送到其它设备。
- **删除:** 删除文件。
- **文件:** 您可以编辑文件名称。您还可以复制和移动文件。
- **删除多个:** 您可以同时删除多个文件。
- **全部删除:** 删除列表中的所有文件。

照相 (功能表 2)

执行下列操作之一,以显示相机拍摄屏幕:

1. 按 键两秒,直接进入相机拍摄模式。或者,轻触“多媒体”图标,然后选择“相机”菜单。
2. 对准您要拍照的对象, 然后按 [OK] 键。
3. 您可以自动保存图片。

拍照前,您可以查看以下菜单:

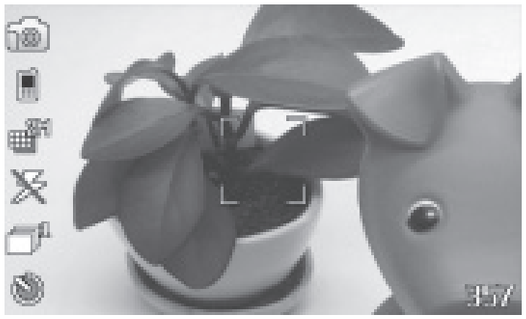

功能表	图标	描 述
模式		允许您拍照。
		允许您拍摄移动的图像。
缩放		允许您设置缩放值。
闪光灯 开/关		允许您在黑暗的场所拍照时设置闪光灯。
分辨率		320X240, 640X480, 1280X960, 1600X1200

功能表	图标	描 述
米		全部、中心
过滤器		关、底片、灰色、怀旧
质量		正常, 精细, 超精细
AF、 开/关	AF	只须按一下按钮,便可调整焦距,获得清晰锐利的图像。
连拍		允许您连续拍摄多张照片。 – QVGA（1,3,6） – VGA（1,3） – ONE_MEGA（1） – TWO_MEGA（1）
查看		4:3, 16:9
存储位置		您可以选择存储空间:手机或存储卡。
计时器		允许您选择延迟时间(关、3 秒、5 秒、10 秒)。手机将会在指定的时间之后拍照。
保存位置		快门 1、快门 2、快门 3
白平衡	WB	自动, 钨丝灯, 荧光灯, 日光, 阴天

轻触屏幕,您可以查看以下菜单:

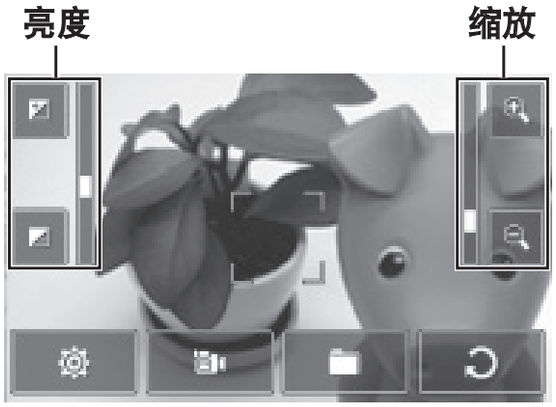

功能表	图标	描 述
设置		您可以更改设置。
模式		您可以将模式从相机更改为摄像机。
文件夹		您可以将图片移至每个文件夹。
取消		您可以返回上一个菜单。

拍照后,您可以查看以下菜单:

功能表	图标	描 述
选项		拍照后轻触此图标,您可以将其设为墙纸,或通过彩信、电子邮件发送信息。
删除	删除	如果不要保存图片,您可以删除它。
相机		您可以拍照。

摄像机 (功能表 3)

1. 选择“摄像机”菜单。

当屏幕显示设置时,您可以通过轻触图标滚动浏览。滚动至要更改的设置后,轻触屏幕,此时将显示设置值。 滚动至所需选项。

2. 要开始录制,请按 。一旦开始录制,屏幕上即会显示一个计时器。

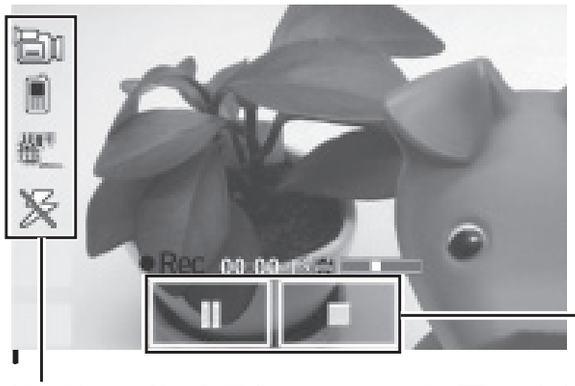

除“持续时间”外,设置与“相机”相同。有关详细信息,请参阅第 44 页。

功能表	图标	描 述
长度		在此菜单中,您可以查看录制持续时间。(多媒体信息/无限制)

3. 按 结束录制,且录制的内容将被立即保存。

拍摄移动的图像后,您可以查看以下菜单:

功能表	图标	描 述
选项		拍照后轻触此图标,您可以将其设为墙纸,或通过彩信、电子邮件发送信息。
删除	删除	如果不要保存图片,您可以删除它。
摄像机		您可以摄像。

录音 (功能表 4)

在“语音备忘录”菜单中,您可以录制语音备忘录。

如果在无语音文件时选择 ,则可以查看以下子菜单:

- **我的素材:** 您可以直接进入“录制语音”菜单。
- **存储位置:** 您可以选择存储位置,将语音文件保存在手机或外部存储器中。
- **录制模式:** 您可以选择合适的模式:“无限制”或“多媒体信息”。

在“无限制”模式中,您可以将语音录制为 MP3。如果在通话过程中录制语音,或者在多媒体信息模式下录制语音,将保存为 AMR 格式。

1. 一旦录音开始,屏幕上将显示“正在录音”字样以及剩余时间。
2. 如果要结束录音,请按中间键“停止”。

如果在保存语音备忘录后轻触选项 ,您可以查看以下子菜单:

- **新录制语音:** 您可以录制新的语音备忘录。
- **发送方式:** 您可以通过彩信、蓝牙、红外或电子邮件发送语音备忘录。
- **我的素材:** 您可以访问“声音”文件夹。

音乐播放器 (功能表 5)

所有歌曲 (功能表 5.1)

KE850 拥有一个内置集成的 MP3 播放器。 通过使用兼容耳机或通过内置听
筒, 您可以欣赏手机内存中的 MP3 音乐文件。

由于扬声器的尺寸较小, 在某些情况下声音可能失真, 特别是在最大音量和低音较多时。 因此,我们使用立体声耳机以便让您欣赏到高品质的音乐。

音乐播放器支持:

- **MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III:** 采样频率为 8KHz 至 48KHz。 位速率高达 320Kbps, 立体声。
- **AAC:** LC（低复杂性）
- **AAC+:** V1: (位速率为 16~128Kbps)
  V2: (位速率为 16~48Kbps)
  (采样频率为 8KHz 至 48KHz)
- **WMA, RA**

KE850 不支持所有已知的可变位速率文件类型。因此, 您无法将文件从 MP3 格式更改为 AAC 格式。

使用 Mass Storage, 您可以将 MP3 文件从兼容的 PC 传输到手机存储器中。
使用 USB 电缆(在相同的包装盒中附带）将手机连接到电脑时, 您可通过Windows 资源管理器显示可移动磁盘。将歌曲复制到可移动磁盘后, 您应执行从系统安全移除的相关操作。在数据传输过程中,请勿将数据线从电脑或手机中移除,否则,会对手机造成严重损坏。

- 您应该将 MP3 复制至我的文档\ 声音\MP3 文件夹。 如果您复制到其它文件夹, 将无法显示或播放 MP3 文件。
- 电脑应运行 Windows 2000 或 Windows XP 操作系统。

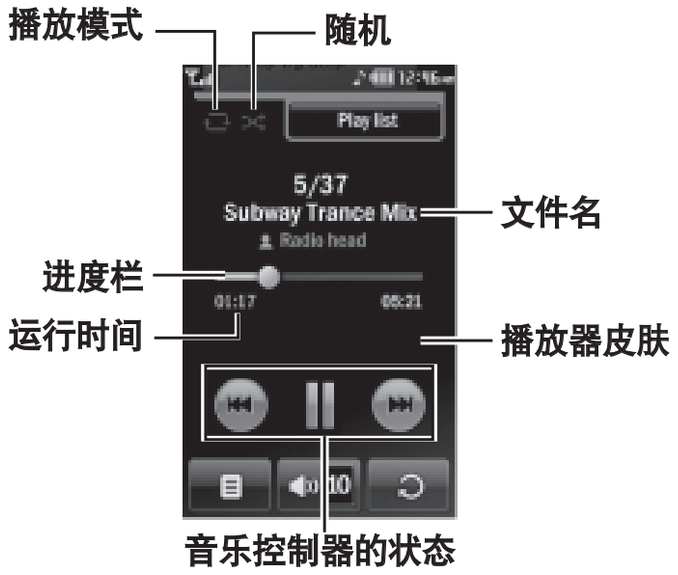

如果播放列表中包含无效文件,此菜单将返回播放列表。

1. 如果播放列表中包含无效文件,此菜单将返回播放列表。然后,选择播放列表以播放。
2. 在播放模式下, 按左软键 [选项] 访问以下菜单。

- **设为铃声:** 您可以在播放 MP3 文件时,将当前音乐设为铃声。
- **设置:** 您可以设置多种功能,如随机播放、重复。

播放列表 (功能表 5.1.1)

此菜单允许您查看整个播放列表。您可以按导航键来移动曲目。此外,如果选择选项菜单,您可以删除文件或查看文件信息。

设置 (功能表 5.2)

- **随机播放**
  如果选择“开”,系统将随机播放曲目。
- **重复**
  此菜单允许您对播放模式进行设置: 关、全部重复、单曲重复。
- **播放器皮肤**
  您可以选择可视效果菜单: 白色皮肤及黑色皮肤。此菜单允许您更改显示器的背景。

此款手机未设置均衡器的图标, 因此您无法在播放器画面上查看到此图标。

如果您在 MP3 播放器正在播放 MP3 时长按 MP3 侧键, 就可以使用 BGM 模式(背景音乐播放模式)。如果您要关闭BGM 模式, 请您再次长按MP3 侧键。在BGM 模式中, 您可以在使用其它功能时同时播放MP3。在BGM 模式中, 如果您使用声音文件、游戏、侧键功能和多媒体菜单中其他功能时, 此模式会自动停止。

FM 收音机 (功能表 6)

收音机 (功能表 6.1)

您可以搜索收音机电台并收听节目。

要提高收音机接收质量,请伸展耳机线,它具有 FM 天线的功能。

1. 轻触相应频道的数字键以将当前选定的收音机电台存储于此频道。
2. 预设收音机频道之后,您可以收听所有预设频道。
3. 您可以调节频率以及更改指定频道的收音机电台。您可以通过轻触两秒或按侧键搜索下一个电台。

4. 您可以通过按左软键 [选项] 来访问以下选项菜单。

- **自动扫描:** 如果您将“现在自动扫描?”选择为“是”,将自动设置收音机频道。当弹出“ 保存此电台?” 信息时, 如果选择“ 是”, 将保存选定的频率。
- **重置频道:** 您可以将所有频道重置为 87.5Mhz。

– 您可以按侧锁定键锁定 FM 收音机功能。
– 如果此功能已锁定,那么,按“清除”键或轻触键盘将无法打开背景灯。

游戏和应用程序 (功能表 7)

在此菜单中,您可以管理手机中安装的 Java 应用程序。您可以播放或删除下载的应用程序,或者设置连接选项。

默认游戏 (功能表 7.1)

您可以玩默认游戏。如果要了解游戏内容,请使用游戏中的“帮助”。

下载内容 (功能表 7.2)

您可以玩从网络下载的游戏。

信息 (功能表 7.3)

您可以检查手机上安装的 Java 版本。

设置 (功能表 7.4)

要下载游戏,您可以在此菜单中设置值以连接网络。

工具

您可以使用本手机中安装的各种工具,如闹钟、计算器、世界始终、单位换算器和日程表。

闹钟 (功能表 1)

您可以将闹钟设为在指定的时间停止响铃。

1. 选择**开并**输入闹钟的时间。
- ：您可以通过轻触“开”或“关”来设置闹钟。
- ：您可以设置在指定时间进行提醒。
- ：您可以设置闹钟的重复时间。
- ：您可以设置每个文件夹中的闹钟铃声。
- ：您可以为闹钟输入备忘录。闹钟提醒时,您可以查看备忘录。

设置每个值之后,请轻触“保存”。

计算器 (功能表 2)

该功能表包含的标准功能包括 +、−、 ×、 ÷: 加、减、乘、除。

此外,轻触“科学”栏,您还可以使用计算器的其它各种功能,如:加减运算 (+/−)、正弦函数、余弦函数、正切函数、对数、自然对数、指数、幂次方、角度值、弧度值运算。

1. 轻触数字键输入数字。
2. 如果要进行复杂的计算,如正弦函数、余弦函数,请轻触 键。
3. 如果输入了错误的数字,请轻触 键。
4. 轻触 = 键查看结果。
5. 要退出“计算器”,请轻触 。

世界时钟 (功能表 3)

在世界地图屏幕中滚动,您可以查看所选世界主要城市的时间。您可以放大地图,使用箭头键查找正确的城市。

单位换算器 (功能表 4)

该功能可实现单位的转换。有 7 种可以转换的单位类型: **币种、面积、长度、重量、温度、体积、速度**.

单位类型

1. 轻触此菜单,您可以选择 7 种单位之一。
2. 在每一栏中输入要换算的数字。单位换算器中不能输入“-”符号。
3. 如果要重设值,请轻触“重设”。

日程表 (功能表 5)

当您进入这一功能表, 会有一个日历显示出来。屏幕顶端是日期部分, 在屏幕右下端是您选定日期下的日程表图标。在您更改日期后, 日历会按照该日期更新。如果日历有小三角形, 表示当天已设定日程表。该功能可以提醒您记住您的日程表。如果您已设定提示, 手机将发出提示音。
更改日、月、年。

如果轻触“日/月/年”区域,您可以对其进行更改。

如果选择 图标,您可以查看以下菜单:

- **删除已过日程:** 您可以删除已过日程表。
- **全部删除:** 您可以删除所有日程表。
- **转到日期:** 您可以直接转到选定的日期。

备忘录 (功能表 6)

进入菜单后,如果选择 图标,您可以查看以下子菜单:

- **新建:** 可以创建新的备忘录。
- **删除多个:** 您可以一次删除选定的备忘录。
- **删除:** 您可以删除备忘录。
- **全部删除:** 您可以删除所有备忘录。

设置

您可以配置与手机相关的设置。

显示（功能表 1）

墙纸（功能表 1.1）

您可以选择待机模式下的背景图片。
某些背景,如蝴蝶或时钟,用手指即可移动。

背景灯（功能表 1.2）

您可以设置显示屏的持续亮灯时间。

时钟（功能表 1.3）

您可以选择要显示的时钟类型。

亮度（功能表 1.4）

您可以将屏幕亮度设置为: 100%、80%、60% 和 40%。

主题（功能表 1.5）

您可以设置显示屏的主题: PRADA 主题、蓝色主题、蝴蝶主题、小鱼主题。

主题不同,手机顶部显示的菜单也将不同。

网络名称（功能表 1.6）

如果激活此功能, 网络名称将显示在主屏幕上。

情景模式 (功能表 2)

在**情景模式**中，您可以调节和自定义手机铃声，用于不同的事件、环境或群组。
有五种预设的情景模式：**通用，静音，振动，大声**和**耳机**。除振动、静音模式外，其他模式都可以被更改。

启动 (功能表 2.X.1)

1. 屏幕上显示情景模式的列表。
2. 在“情景模式”列表中,滚动到您所需的情景模式,然后轻触“激活”。

更改 (功能表 2.X.2)

在“情景模式”列表中,滚动到所需的情景模式,然后轻触“个性化”。

- **来电提示:** 设置来电提示类型。
- **铃声类型:** 从列表中选择所需的铃声类型。
- **铃声音量:** 设置铃声的音量。
- **信息提示:** 设置信息的提示类型。
- **信息提示音:** 选择信息的提示音。
- **按键音:** 选择所需的按键音。
- **按键音量:** 设置按键音的音量。
- **确认音音量:** 设置确认音效。
- **开机/关机音量:** 设置开机/ 关机时的铃声音量。
- **自动应答:** 请注意只有耳机模式拥有该子功能表。
  - **关:** 即使您的手机响铃，也不会自动应答。
  - **5 秒后:** 在5 秒后自动应答。
  - **10 秒后:** 在10 秒后自动应答。

设置 (功能表 3)

日期和时间 (功能表 3.1)
您可以设置日期和时间。

日期 (功能表 3.1.1)
在该功能表中, 您可以设定手机日期。

日期格式 (功能表 3.1.2)
在该功能表中, 您可以设定日期格式。比如: 日/月/年, 月/日/年, 年/月/日 。

时间 (功能表 3.1.3)
您可以设定当前手机时间。

时间格式 (功能表 3.1.4)
您可以选择时间格式为12 小时制或24 小时制。

自动更新日期 (功能表 3.1.5)
(Network dependent)
如果选择“开”,将自动更新日期和时间设置。

省电模式 (功能表 3.2)
如果您选择[开], 手机将进入节电模式。

Language (功能表 3.3)
您可以选择手机上文本显示的语言。此设定会影响到语言输入法。

通话 (功能表 3.4)
您可以通过轻触“设置”菜单设置与通话相关的菜单。

呼叫转接 (功能表 3.4.1)
呼叫转接服务可让您将语音来电、传真来电和数据来电转移到其它号码。要获取更多信息, 请联系您的服务提供商。

- **所有语音来电**
  无条件转移语音来电。
- **正在通话时**
  当手机正在使用时转移语音来电。
- **无人接听时**
  转移您没有应答的语音来电。
- **无网络或关机时**
  当手机关机或不在服务区时转移语音来电。
- **所有数据来电**
  无条件转移到使用PC 连接的号码。
- **所有传真来电**
  无条件转移到使用传真连接的号码。
- **全部取消**
  取消全部呼叫转接。

子功能表
呼叫转接功能表有以下子功能表。

- **启动**
  启动相应服务。
  至语音邮件中心
  转发到信息中心。该功能不包括在所有数据来电和所有传真来电功能表中。
  至其它号码
  输入接受转移呼叫的电话号码。
  至常用号码
  您可以检查最近转接的号码。
- **取消**
  取消相应服务。
- **查看状态**
  查看相应服务的状态。

发送号码（功能表 3.4.2）
（视网络和所申请的服务而定）

- **网络设定**
  如果您选择该功能，是否发送您的手机号码将视您两条线路的服务而定,比如线路一或者线路二。
- **开**
  您可以将手机号码发送给对方，在接收方手机上将显示您的手机号码。
- **关**
  在接收方手机上不会显示您的手机号码。

呼叫等待（功能表 3.4.3）
（视网络而定）

- **启动**
  如果启用该服务，通话过程中您可以接收待接来电。
- **取消**
  如果关闭该服务，您将**取消**此服务。
- **查看状态**
  显示呼叫等待的设置状态。

分钟提示（功能表3.4.4）
如果您选择**开**，可以在通话期间通过每分钟的蜂鸣声检查通话时间。

自动重拨（功能表 3.4.5）

- **开**
  当该功能设定为开启时，您的手机在连接失败后将再进行连接尝试。
- **关**
  连接失败后，您的手机将不再进行连接尝试。

发送 DTMF（功能表 3.4.6）
双音多频音调允许您的手机使用自动电话交换台。

信息
DTMF: 双音多频。

选择线路（功能表 3.4.7）
（视 SIM 卡情况而定）
只有 SIM 卡支持两个用户号码,即两条电话线路时才显示此菜单。选择您要用于拨打电话与发送短信的电话线路(线路 1 或线路 2)。无论选择哪一条线路,均可应答其中一条线路上的呼叫。

保密设置（功能表 3.5）

设置 PIN 码（功能表 3.5.1）
在该功能表中，您可以设定手机在开机时需要 SIM 卡的PIN码。如果启动该功能，您将被要求输入PIN码。

1. 在“安全设置”菜单中选择“请求 PIN 码”。
2. 设置“**关闭**”或者“**启动**”。
3. 如果选择“启动”，开机时需要您输入PIN码。
4. 如果您三次输错PIN码，手机将被锁定，这时您需要输入PUK码。
5. 您最多可以十次输入PUK码，如果您十次输错PUK码，您将无法解锁您的手机。这时，您只能联系服务中心寻求帮助。

自动键盘锁（功能表 3.5.2）
如果激活此功能,待机模式下无需任何按键操作即会自动锁定键盘。

手机锁 (功能表 3.5.3)

您可以使用此功能防止他人未经授权使用您的手机。如果您将手机锁设定为开, 则开机时手机将要求您输入安全密码。如果您将手机锁设定为当更换SIM 卡时, 则只有当您更换SIM 卡时, 手机才要求您输入安全密码。
您也可以选择立即设定锁定手机。

呼叫限制 (功能表 3.5.4)

呼叫限制服务可以防止您的手机拨打或接听某种电话。该功能需要呼叫限制密码(安全密码)。您可以查看以下子功能表。

- **所有拨出电话**
  您可以限制所有拨出电话。
- **拨出国际电话**
  您可以限制拨出国际长途。
- **国际漫游时拨打电话**
  您可以限制在国际漫游时所拨打的电话。
- **所有来电**
  您可以限制所有来电。
- **国际漫游时来电**
  您可以限制国外漫游时来电。
- **全部取消**
  您可以取消所有限制服务。
- **更改密码**
  您可以更改呼叫限制服务的密码(默认密码为0000)。

呼叫限制子功能表:

- **启动**
  请求网络启动呼叫限制服务。
- **取消**
  取消所选子功能表呼叫限制服务。
- **查看状态**
  查询呼叫限制服务开启或关闭的状态。

固定拨号 (功能表 3.5.5)

(需SIM 卡支持)
您可以限制电话号码的拨打。这些号码由 PIN2 码保护。

- **开**
  您可以限制拨打您所选择的电话号码。
- **关**
  您可以不限制对电话号码的拨打。
- **号码列表**
  您可以查看被保存为FDN 的号码列表。

本手机的默认安全码是 0000。PIN 1 码和 PIN 2 码与 SIM 卡和服务提供商相关。

更改密码 (功能表 3.5.6)

PIN 是Personal Identification Number(个人识别号码) 的缩写。可用来防止未经授权的人使用您的手机。您可以更改访问密码: **安全密码、PIN1码、PIN2码。**

1. 如果要更改安全码/PIN1 码/PIN2 码,请输入您的初始码,然后轻触 [确定]。
2. 输入新的安全密码、PIN 码或PIN2 码, 然后确认。

连接 (功能表 3.6)

网络选择 (功能表 3.6.1)

您可以选择一种网络类型。

- **自动:** 如果您选择 “ 自动”, 手机会自动选择在您区域内的可用网络。一旦您选择 “ 自动”, 无论手机在开机状态还是关机状态, 都将保持设置为“自动” 。

- **手动:** 手机会找到可用的网络列表并显示出来。然后您可以选择您想使用的网络, 前提是该网络与您本地网络运营商已签订漫游协议。如果手机无法接入到您选择的网络中, 手机允许您选择另一个网络。
- **首选网络:** 您可以设定手机在注册其它网络前首先注册的首选网络列表。该列表从手机预设的已知网络列表中创建。

网络设定 (功能表 3.6.2)

网络设定是用于连接 Internet 的网络信息。 手机内存中已存有某些运营商的默认网络设定。 不可以重命名默认网络设定。

GPRS 设定 (功能表 3.6.3)

您可以选择开机或需要时两种情况。

- **当开机时连接**
  如果选择此菜单, 则在开机时, 手机会自动注册到 GPRS 网络。启动 WAP 或 PC 拨号应用程序, 在手机和网络间建立连接, 即可进行数据传输。结束该应用程序后, GPRS 连接即会断开, 但 GPRS 网络的注册信息将会保持。
- **需要时**
  如果选择此菜单, 则会在连接 WAP 服务时建立起 GPRS 连接, 并在断开WAP 连接后结束。

USB 连接 (功能表 3.6.4)

使用 USB 数据线,您可以将您的手机与各种电脑连接和数据通信应用程序一起使用。

飞行模式 (功能表 3.7)

如果激活飞行模式,您可以在不连接到 GSM 无线网络的情况下使用手机。您仍然可以执行无需使用无线网络的任务。使用飞行模式,您无法拨打任何电话,包括紧急呼叫,也无法使用需要网络服务的其它功能。

重设设置 (功能表 3.8)

您可以通过选择该功能表将手机恢复为预设配置。然后, 您需要安全密码启动该功能。

- **恢复默认设置:** 允许您恢复默认设置。
- **清除多媒体内存:** 允许您格式化多媒体存储器并创建默认目录。
- **清除外部存储器:** 允许您格式化外部存储器中的所有数据。

内存状态 (功能表 3.9)

您可以检查各个存储器、内存、多媒体存储器和外部存储器的可用空间和使用情况。您可以进入各个存储器菜单。

蓝牙 (功能表 4)

使用蓝牙, 您可以与近距离的可兼容移动设备、外围设备和计算机直接通信, 而无需任何连线。 本手机支持内置蓝牙连接, 这样使其可与兼容的蓝牙手机、计算机应用程序等连接。

– 如果您通过蓝牙使用 pcsync,则只可以交换电话本中的数据。
– 当您从其它蓝牙设备接收数据时, 手机要求确认。 确认传输后, 文件将被复制到您的手机上。
– 根据文件类型, 它将会被存到如下的文件夹中:
• MP3(.mp3, mp4, aac, wma): 音乐文件夹。
• Video(.3GP): 视频文件夹。
• 电话本联系人(.VCF): 电话本。
• 文本 (.txt): 文本文件夹。
• 其他文件(.*): 文件存储文件夹。
– 支持 DUN 的蓝牙软件(蓝牙堆栈): 推荐使用驱动程序: WidComm Bluetooth for Windows 1.4 and 3.0 On/Off

打开/关闭蓝牙 (功能表 4.1)

您可以在此菜单中激活或取消蓝牙。

设备列表 (功能表 4.2)

您可以查看与蓝牙手机兼容的所有设备。

由于兼容性问题,某些设备可能不支持此功能。

蓝牙设置 (功能表 4.3)

您可以注册与蓝牙兼容的新设备。如果您已添加了设备,则您可以在输入密码后搜索该设备。

- **显示本机号码**
  您可以设置您的手机显示在他人蓝牙设备上的功能。
- **我的名称**
  您可以设置蓝牙设备的名称。默认名称为 KE850。
- **我的地址**
  您可以查看激活的蓝牙设备的地址。

支持的服务 (功能表 4.4)

您可以查看设备列表,如启用了蓝牙的手机所支持的耳机和免提套件。

设为墙纸: 在支持“基本打印情景模式”的打印机中可用。对于支持“对象推出情景模式”的打印机, 您可以使用“通过蓝牙发送”菜单打印。如果单个文件大于 500KB(带动画效果的 GIF 文件)或 200KB(其它),将会弹出一则消息显示“不支持”。

SIM 服务 (功能表 5)

此菜单视 SIM 卡和网络服务而定。

- 如果 SIM 卡支持 SAT(即,SIM 卡应用程序套件)服务,则此菜单将是 SIM 卡上存储的运营商特定服务的名称。
- 如果 SIM 卡不支持 SAT 服务,则此菜单将是“情景模式”。

附件

我们为您的手机准备了多种附件。您可以根据个人的通信要求来选择合适的附件。

充电器

当您不在办公室或家中时，可以使用此充电器为电池充电。

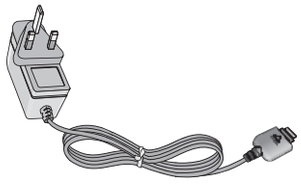

标准电池

数据套件/CD

您可以将手机与PC 相连，进行数据交换。

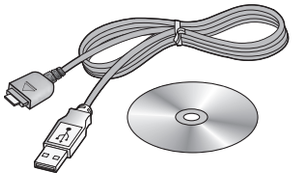

手控耳机和音乐线控器

立体声耳机

按键: 播放和结束按钮，声音控制，锁定按钮和麦克风。在您连接耳机和线控之后，将控制器的连接端插入手机右侧的耳机插孔中。

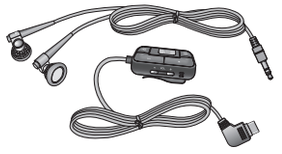

LCD 清洁布

皮套

存储卡

网络服务

本指南中描述的无线手机适用于 GSM 900、DCS 1800、PCS1900 网络。

- 双频功能取决于网络。请与您的本地服务提供商联系,以查看是否可以预订并使用此功能。
- 本指南中包含的一系列功能称为网络服务。这些服务是由您的无线服务提供商提供的特殊服务。在利用这些网络服务之前,必须先向您的服务提供商预订,并获取使用说明。

故障排除

本章列出了您在使用手机过程中可能遇到的一些问题。对于某些问题,您可能需要致电服务提供商,但是大部分问题,您都可以执行解决。

信息	可能原因	可行解决措施
SIM 卡错误	手机中无 SIM 卡或 SIM 卡插入不正确。	请确保正确插入 SIM 卡。
无网络连接	信号弱 不在 GSM 网络中	移到靠近窗户或空旷地区的较高位置。 检查服务提供商覆盖图。.
代码不匹配	要更改安全码,您需要在输入后再确认一次新的安全码。两次输入的代码不匹配。	请与提供商联系。
无法设置功能	服务提供商不支持或需要注册	请与提供商联系。
无法拨打电话	拨号错误 插入的新 SIM 卡达到尝试次数上限	新网络未获得授权。查看新的限制。与服务提供商联系或重新设置 PIN 2 的限制。
手机无法打开	按开/关键时间过短 电池电量空 电池触点脏	请按开/关键至少两秒钟。 为电池充电。检查显示屏上的充电指示灯。 清洁触点。

信息	可能原因	可行解决措施
充电错误	电池电量空	为电池充电。
	温度超出范围	确保外部环境温度适当，稍等片刻,然后重新充电。
	触点问题	检查电源,连接到手机。检查电池触点,如果需要,请清洁。
	无电源电压	插入其它插口,或检查电压。
	充电器故障	如果充电器不发热,请替换。
	错误充电器	请仅使用正品 LG 配件。
	电池故障	替换电池。
手机无网络	信号太弱	将自动重新连接到其它服务提供商。
不允许输入号码	已打开固定拨号功能。	检查设置。

技术数据

常规

产品型号：KE850
系统：GSM 900 / DCS 1800 / PCS 1900

环境温度

最高：+55° C（放电）
+45° C（充电）
最低：–10° C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeuido-dong, Yeoungdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 / Tri Band Terminal Equipment

Model Name

KE850

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360VEN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name	Issued Date
Jin Seog, Kim / Director	11. September. 2006

Signature of representative

LG Electronics Logitics and Services B.V
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

ENGLISH

KE850 | USER GUIDE

Some of contents in this manual may differ from your phone depending on the software version of the phone or your service provider.

CONTENTS

5 INTRODUCTION

7 GUIDELINES FOR SAFE AND EFFICIENT USE

10 KE850 FEATURES

10 Part of the phone

13 Display information

14 On-Screen Icons

15 INSTALLATION

15 Installing the SIM card and the handset battery

17 Charging the Battery

17 Disconnecting the charger

18 Memory Card

19 GENERAL FUNCTIONS

19 Making a Call

19 Adjusting the Volume

19 Answering a Call

20 Entering Text

22 SELECTING FUNCTIONS AND OPTIONS

23 IN-CALL MENU

23 During a Call

24 Conference Calls

26 MENU TREE

29 DIALLING

30 CONTACTS

30 Search

30 New contact

30 Speed dials

31 Groups

31 Settings

31 Information

32 CALL HISTORY

32 All calls

32 Missed calls

32 Dialled calls

32 Received calls

32 Call charges

33 Data information

34 MESSAGE

34 New text message

34 New multimedia message

35 New email message

36 Inbox

36 Email box

36 Drafts

37 Outbox

37 Sent

37 Voice mail

37 Info service

38 Templates
38 Settings
40 BROWSER
40 Home
40 Bookmarks
40 Go to URL
40 Settings
42 MULTIMEDIA
42 MY STUFF
42 Images
43 Sounds
43 Videos
46 Documents
46 Others
47 CAMERA
49 CAMCORDER
50 VOICE RECORDER
51 MP3 PLAYER
51 All songs
52 Settings
53 FM RADIO
54 GAMES & APPS
54 Default games
54 Downloaded
54 Information
54 Settings
55 TOOLS
55 ALARM CLOCK
55 CALCULATOR
55 WORLD CLOCK
55 UNIT CONVERTER
56 CALENDAR
56 MEMO
57 SETTINGS
57 DISPLAY
57 Wallpaper
57 Backlight
57 Clock
57 Brightness
57 Theme
57 Network name
58 PROFILE
58 General
58 Silent
58 Vibrate only
58 Outdoor
58 Headset
59 SETTINGS
59 Date & Time
59 Power saving
59 Languages

59 Call

60 Security

62 Connectivity

62 Flight mode

63 Reset setting

63 Memory status

64 BLUETOOTH

64 Bluetooth on/off

64 Device list

64 Bluetooth settings

64 Supported services

65 SIM SERVICE

66 ACCESSORIES

67 NETWORK SERVICE

68 TROUBLESHOOTING

70 TECHNICAL DATA

Congratulations on your purchase of the advanced and compact Prada phone by LG, designed to operate with the latest digital mobile communication technology.

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal. Further detailed information is given in this manual.

WARNING

- Mobile Phones must be switched off at all times in an aircraft.
- Do not hold the phone in your hand while driving.
- Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.
- For your safety, use ONLY specified ORIGINAL batteries and chargers.
- Do not handle the phone with wet hands while it is being charged. It may cause an electric shock or seriously damage your phone.
- Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

CAUTION

- Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals or it may affect sensitive medical equipment.
- Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls.
- Only use ORIGINAL accessories to avoid damage to your phone.
- All radio transmitters carry risks of interference with electronics in close proximity. Minor interference may affect TVs, radios, PCs, etc.
- Batteries should be disposed of in accordance with relevant legislation.
- Do not dismantle the phone or battery.

EXPOSURE TO RADIO FREQUENCY ENERGY

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model KE850 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.838 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue.

PRODUCT CARE AND MAINTENANCE

> WARNING:
>
> **Use only batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.**

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliances such as TVs, radios, and personal computers.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.

EFFICIENT PHONE OPERATION

ELECTRONICS DEVICES

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over pacemakers, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

ROAD SAFETY

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your vehicle such as car stereos and safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can fail or cause serious injury due to improper performance.

BLASTING AREA

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

POTENTIALLY EXPLOSIVE ATMOSPHERES

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your mobile phone and accessories.

IN AIRCRAFT

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

CHILDREN

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

EMERGENCY CALLS

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

BATTERY INFORMATION AND CARE

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- There is risk of explosion if the battery is replaced by an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as household waste.

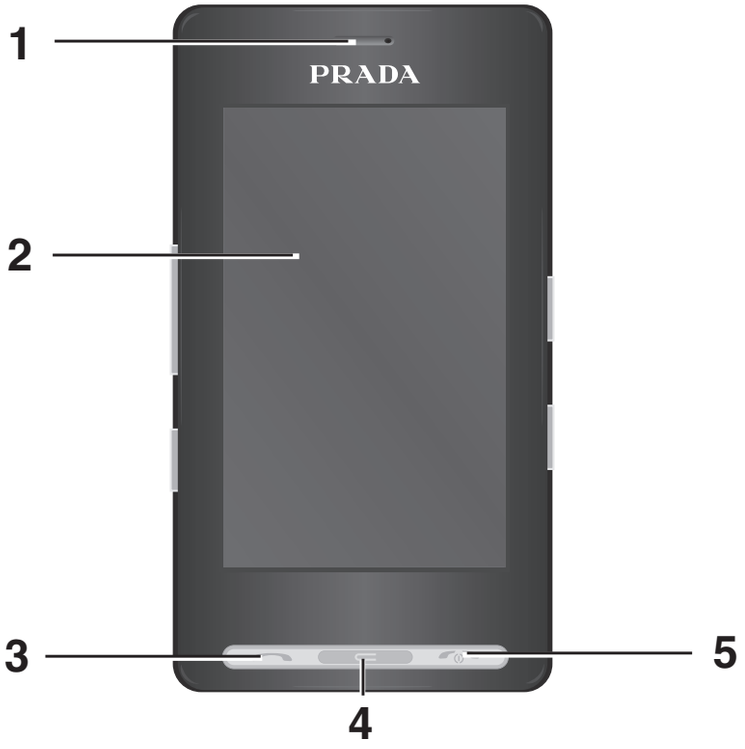

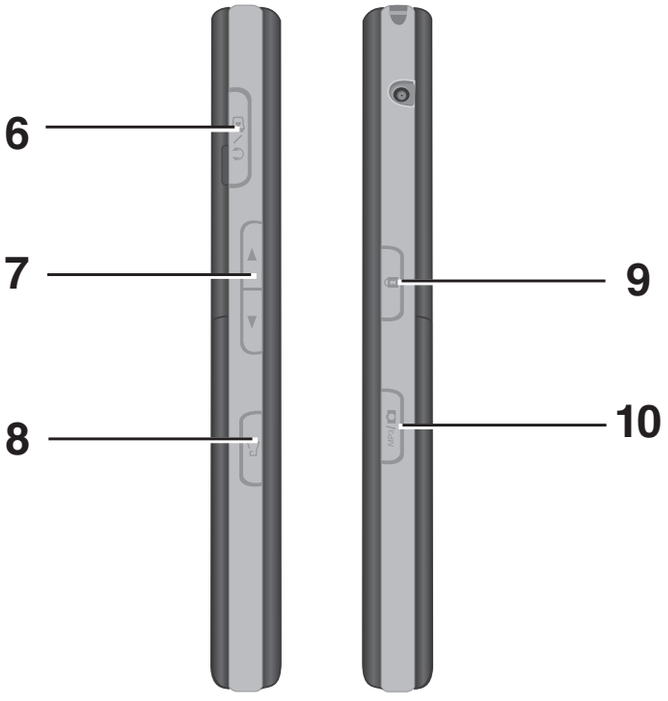

PART OF THE PHONE

1. EARPIECE
2. MAIN LCD
- **Top:** Signal strength, battery level and various function
- **Bottom:** Menu/Dialling/Message/Phonebook indications

3. SEND KEY
- **Dials a phone number and answers incoming calls.**

4. CLEAR KEY
- **Deletes a character with each press.**
- **Uses this key to go back to a previous screen.**

5. END/POWER KEY
- **Ends or rejects a call.**
- **Turns the phone on/off.**

6. CHARGER/CABLE/HANDSFREE CONNECTOR

7. SIDE KEYS
- **When the screen is idle:** Volume of key tone
- **In menu:** scroll up & down
- **During a call:** volume of the earpiece

8. PROFILE KEY
- **Long press activates/deactivates vibrate mode.**
- **Enters the profile menu directly by pressing this key shortly.**
- **Long press activates Unlock mode in key lock.**

9. KEYPAD LOCK/UNLOCK KEY

10. MP3/CAMERA KEY
- **Press this key shortly to enter MP3 menu.**
- **Press and hold this key to activate camera.**

REAR VIEW

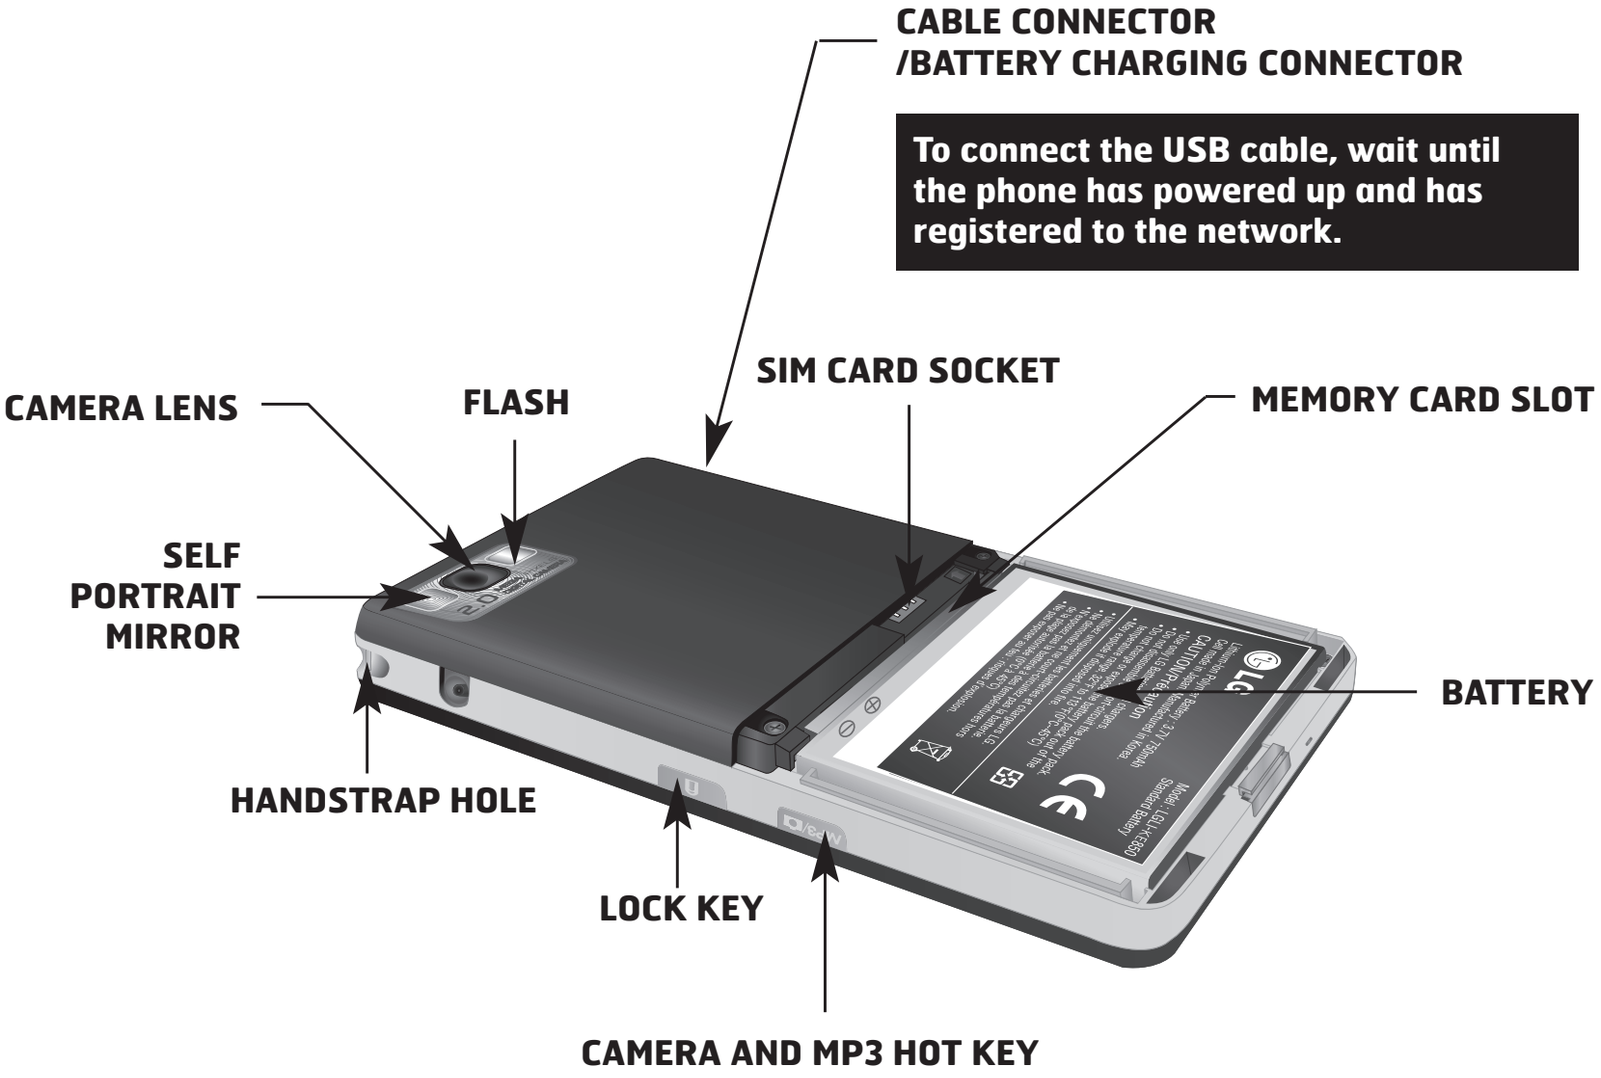
CABLE CONNECTOR
/BATTERY CHARGING CONNECTOR
To connect the USB cable, wait until the phone has powered up and has registered to the network.
SIM CARD SOCKET
CAMERA LENS
FLASH
MEMORY CARD SLOT
SELF
PORTRAIT
MIRROR
BATTERY
HANDSTRAP HOLE
LOCK KEY
CAMERA AND MP3 HOT KEY

- This product's keys on the LCD screen are touch keys.
- Be sure to read "Cautions for Touch Keys" before using this product.

CAUTIONS FOR TOUCH KEYS

1. Make sure your hands are clean and dry.
   - Remove all moisture from the surface of your hands or the touch keys in a humid environment.

Touch keypad

Hard keys

2. You do not need to press hard on the touch keys to make them work.
Do not subject the product to severe impact, as this may damage the touch key sensors.

3. Use the tip of your finger to press exactly on the touch key you want, being careful not to touch the keys for other functions.

4. When both the home screen and touch key lights are off, pressing a touch key will not turn on the home screen light. Press and the home screen light will turn back on(touch keys do not work when the touch key lights are off).

5. Touch keys may not work normally if a mobile phone case or plastic cover is covering them. Also, touch keys may not work if you are wearing gloves.

6. Keep metal and other conductive materials away from the surface of the touch keys, as contact with them may result in an error.

7. This phone does not allow to use a pen or a stylus to select menu. If you use a pen or a stylus, the menus cannot be activated properly. Use the phone by only finger.

8. Touch key cannot be activated properly in hot and humid environment.

DISPLAY INFORMATION

If you tap the wallpaper "Analogue clock" once, you can set the alarm. Analogue clock is set as a default.

ICON	DESCRIPTION
	Used to enter menu directly.
	Used to make a call or send text/ multimedia message.
	Used to send the text/ multimedia message and to view the messages in the inbox. You can activate various functions related to messages.
	Used to access the phonebook list.

The screen displays several icons. These are described below.

ON-SCREEN ICONS

ICON/INDICATOR	DESCRIPTION
	Tells you the strength of the network signal.
	Indicates that you are using GPRS.
	Indicates that you are using EDGE service.
	Shows that you are out of service area.
	Shows that you are using a roaming service.
	The alarm has been set and is on.
(Empty) (Full)	Tells you the status of the battery.
	Indicates that you have received a text message.
	Indicates that you have received a voice message.
	Indicates that the message box is full.

ICON/INDICATOR	DESCRIPTION
	Vibrate only menu in profile.
	General menu in profile.
	Outdoor menu in profile.
	Silent menu in profile.
	Headset menu in profile.
	Indicates that you have diverted a call.
	Indicates that the phone is accessing WAP.
	Indicates that you have activated flight mode.
	Indicates that you have activated Bluetooth.

The quality of the conversation may change depending on network coverage. When the signal strength is below 2 bars, you may experience muting, call drop and poor audio. Please take the network bars as an indicator for your calls. When there are no bars, that means that there is no network coverage: in this case, you won't be able to access the network for any service (call, messages and so on).

INSTALLING THE SIM CARD AND THE HANDSET BATTERY

Make sure the power is off before you remove the battery.

1. REMOVE THE BATTERY COVER.

Press the battery release latch and lift the battery cover from the bottom of the phone.

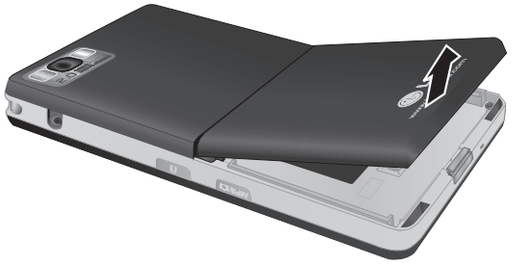

Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. REMOVE THE BATTERY.

Hold the top edge of the battery and lift the battery from the battery compartment.

3. INSTALL THE SIM CARD.

Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

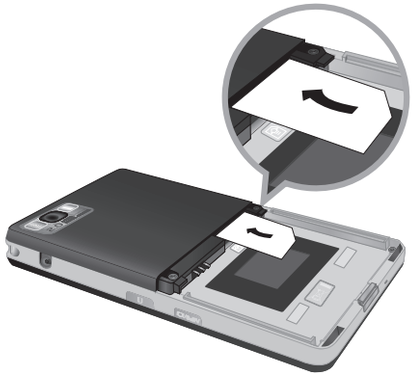

To insert the SIM card

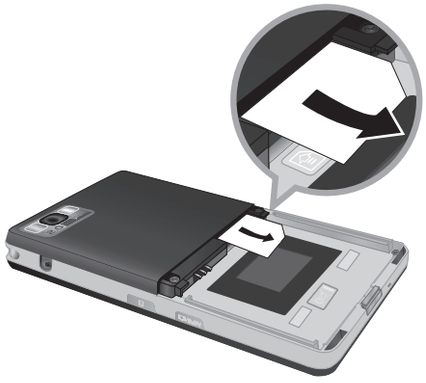

To remove the SIM card

The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

4. INSTALL THE BATTERY.

Insert the bottom of the battery first into the bottom edge of the battery compartment. Ensure the battery contacts align with the terminals on the phone. Push down the top of the battery until it snaps into space. Do not force the battery.

5. REPLACE THE BATTERY COVER.

Lay the battery cover in place on the phone and press it down until the latch clicks.

CHARGING THE BATTERY

Before connecting the charger to the phone you must first check the battery is installed.

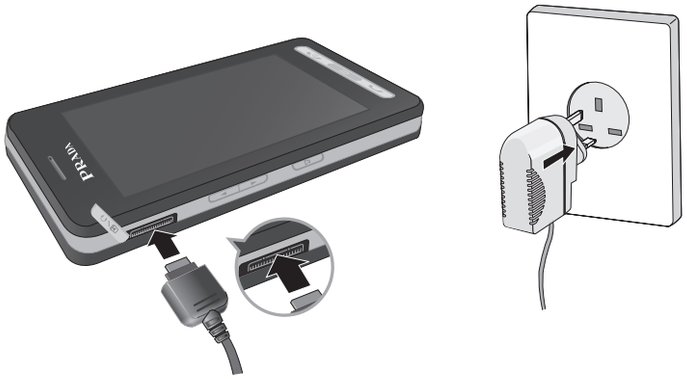

1. Ensure the battery is fully charged before using the phone.
2. With the arrow on the plug facing down, push the plug on the charger into the socket on the side of the phone.
3. Connect the other end of the charger to the main socket. Use only the charger included in the box with the phone.
4. The moving bars of the battery icon will stop after charging is complete.

- Do not force the connector as this may damage the phone and/or the charger.
- If you use the charger out of your own country, use an attachment plug adaptor for the proper configuration.
- Do not remove your battery or the SIM card while charging.
- There is risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the maker's instructions.

- Unplug the charger from the mains and phone during lightning storms to avoid electric shock or fire.
- Make sure that no sharp-edged items such as animal teeth or nails come into contact with the battery. There is a risk of this causing a fire.

DISCONNECTING THE CHARGER

Disconnect the travel adapter from the phone as shown in the diagram. Make sure you pull by the plug, not the cord.

MEMORY CARD

Slide the memory card into the slot until the memory card is fully inserted into the slot, as shown in the figure below:

INSTALLING THE MEMORY CARD

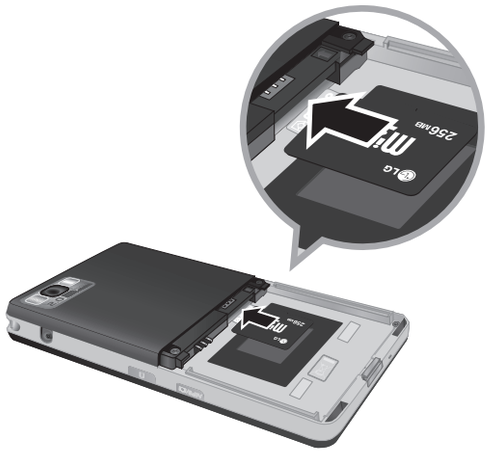

Slide the memory card
in with the metal contacts facing down.

REMOVING THE MEMORY CARD

1. Push in memory card with the tip of your finger into the slot which will activate the eject mechanism.
2. Carefully pull the memory card out of slot.

Remove the memory card

- The memory card must be removed or inserted only when necessary as its removal/insertion may lead to failure.
- When inserting an external memory card, remove and insert it again if its icon appears red. (If the icon remains red after re-insertion, the memory card may likely be damaged, so replace it with another one.)
- Removal of an external memory card or turning the mobile phone off while using the card (Store, Copy, Remove, Initialise, Play, etc.) may clear or initialise any stored file, which in turn may lead to severe damage on the card or malfunction of the phone.
- It is recommended the card be initialised within the mobile phone. The memory card includes some system space for any external memory file so some capacity may survive the initialisation of the memory card.
- It is always advised to make a backup of any data stored on your memory card.
- A few memory cards cannot be compatible with a phone, so please contact manufacuture for details.

MAKING A CALL

1. Make sure your phone is powered on.
2. In standby mode, tap icon.
3. Enter a phone number including the area code. To edit a number on the display screen, simply press the key to erase one digit at a time.

◦ If you press key or tap C, you can go back to previous menu.

4. Press the key or tap to call.
5. When you want to finish, press the key.

MAKING AN INTERNATIONAL CALL

1. Tap and hold the 0+ key for the international prefix. The '+' character can be replaced with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press the key or tap to call.

ENDING A CALL

When you have finished a call, press the key.

MAKING A CALL FROM THE CONTACT LIST

You can store names and phone numbers dialled frequently in the SIM card as well as the phone memory known as the Contact list.
You can dial a number by simply looking up a name in the contact list. For more details on the Contacts feature, please refer to page 30.

ADJUSTING THE VOLUME

Use the up/down keys on the side of the phone to adjust the volume during a call.

ANSWERING A CALL

When you receive a call, the phone rings and the animated phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name/picture if stored in your Contact list) is displayed.

1. Press the key or the left soft key to answer an incoming call.
2. End the call by pressing the key.

You can answer a call while using the address book or other menu features. In case the phone is connected to the PC via USB cable, incoming calls will be rejected, but after disconnecting the phone from the PC you can see a Missed call window.

LOCK TOUCH SCREEN AND KEYPAD

Keypad Lock Mode can be activated by pressing the key.

SIGNAL STRENGTH

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator ( ) on your phone's display screen.

ENTERING TEXT

You can enter alphanumeric characters by using the keypad on the touch screen. For example, storing names in the phonebook, writing a message, and scheduling events in the calendar all require entering text. The following text input methods are available in the phone.

Some fields may allow only one text input mode (e.g. telephone number in address book fields).

T9 MODE

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. T9 is set to Off as default.

To enter T9 mode, tap , and then select T9 then T9 on.

ABC MODE

This mode allows you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter is displayed.

123 MODE (NUMBERS MODE)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, tap key until 123 mode is displayed in the upper right corner of the display.

You can go back to previous letter mode by long press .

SYMBOLIC MODE

This mode allows you to enter special characters.

CHANGING THE TEXT INPUT MODE

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the display.
2. If you want to change modes, tap to step through the available modes.

You can go back to previous letter mode by long press .

USING THE T9 MODE

The T9 predictive text input mode allows you to enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on a built-in dictionary. As new letters are added, the word changes to reflect the most likely candidate from the dictionary.

You can select a different T9 language from the menu option . The default setting on the phone is T9 disable mode.

1. When you are in the T9 predictive text input mode, start entering a word by tapping keys 2 to 9.

◦ The word changes as letters are typed–ignore what's on the screen until the word is typed completely.

Example: Press 4 6 6 3 to type **Good.**

◦ If the desired word is missing from the word choices list, add it by using the ABC mode.

2. Enter the whole word before editing or deleting any key strokes.
3. Complete each word with a space by pressing the 0 key.

To delete letters, press . Press and hold down to erase the letters continuously.

To exit the text input mode without saving your input, press . The phone returns to the idle screen.

USING THE ABC MODE

Use the 2 to 9 keys to enter your text.

1. Tap the key labelled with the required letter:

◦ Once for the first letter.

◦ Twice for the second letter, and so on.

2. To insert a space, tap the 0 key once. To delete letters, press the key. Tap and hold down the key to erase the letters continuously.

If you select Insert menu on writing the message, you can insert the symbol, image, sound, text template and contact point.

USING THE 123 (NUMBERS) MODE

The 123 Mode enables you to enter numbers in a text message (a telephone number, for example). Tap the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

You can also add numbers whilst remaining in letter modes by tapping and holding the desired key.

USING THE SYMBOL MODE

The Symbol Mode enables you to enter various symbols or special characters.
To enter a symbol, press the * key.

The touch screen consists of the menus as follow:

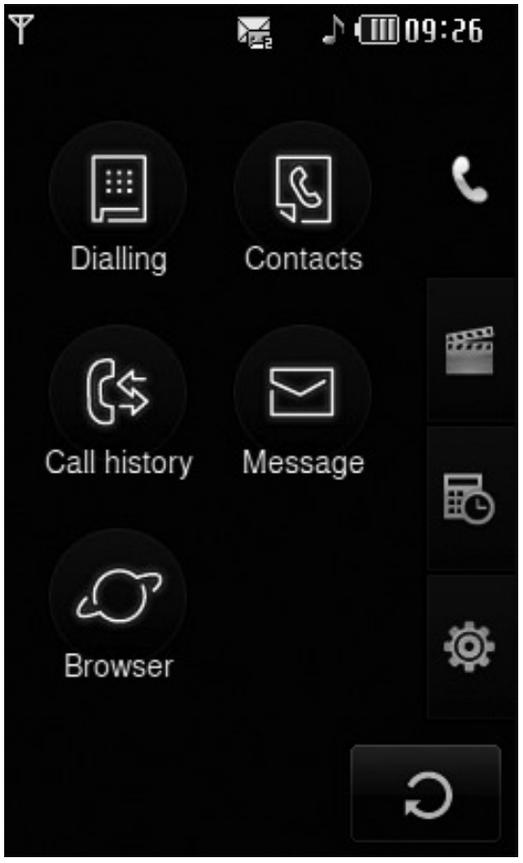

The top menu icons of title can be different depending on the theme. (The default mode is Black theme.)

Title menu

ICON	DESCRIPTION
	Call menu
	Multimedia menu
	Tool menu
	Setting menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

If you activate Key lock, you can select Mute key.

DURING A CALL

The menu displayed on the handset screen during a call is different than the default main menu displayed when in idle screen, and the options are described below.

SPEAKER PHONE

During call you can activate speaker phone by pressing the LOCK key and then pressing the key.

MAKING A SECOND CALL (NETWORK DEPENDENT)

You can get a number you wish to dial from the phonebook to make a second call. During a call, if you press profile key, you can activate the dial pad.

SWITCHING BETWEEN TWO CALLS

To switch between two calls, press key or the left soft key, and then select Swap call.

ANSWERING AN INCOMING CALL

To answer an incoming call when the handset is ringing, simply press the key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.
This feature, known as Call waiting, is only available if your network supports it. If Call waiting is on, you can put the first call on hold and answer the second, by pressing the left soft key.

REJECTING AN INCOMING CALL

You can reject an incoming call without answering by simply pressing the key.
During a call, you can reject an incoming call by pressing the key twice.

MUTING THE MICROPHONE

You can mute the microphone during a call by tapping the [Mute] key in the bottom right. The handset can be unmuted by tapping the [Unmute]. When the handset is muted, the caller cannot hear you, but you can still hear them.

DTMF TONES WHILE CALLING

To switch on DTMF tones while calling (e.g. to use the phone with an automatic switchboard) tap [Options] followed by Send DTMF – DTMF on. Select DTMF off to disable DTMF tones. DTMF tones are normally on.

The display and keypad backlights will turn off after a few seconds while in a call if no keys are pressed. To turn on the backlight press any key. DTMF is not sent when the backlight is off.

To activate the keypad in a call, press the on the side.

CONFERENCE CALLS

The conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature. A conference call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a conference call is set up, calls may be added, disconnected or separated (that is, removed from the conference call but still connected to you) by the person who set up the conference call. These options are all available from the In-Call menu. The maximum callers in a conference call are five. Once started, you are in control of the conference call, and only you can add calls to the conference call.

MAKING A SECOND CALL

You can make a second call while currently on a call. Enter the second number and press the . When the second call is connected, the first call is automatically placed on hold. You can swap between calls, by pressing the key.

To activate the keypad in a call, press the on the side.

SETTING UP A CONFERENCE CALL

To set up a conference call, place one call on hold and while the active call is on, press the left soft key and then select the Join menu of Conference call.

ACTIVATE THE CONFERENCE CALL ON HOLD

To activate Hold on a conference call, press the key. Alternatively press the left soft key [Options] and select Conference/Hold all calls. Other users on hold will stay connected. To return to conference call mode, tap [Options] followed by Conference call.

ADDING CALLS TO THE CONFERENCE CALL

To add a call to an existing conference call, tap the left soft key, and then select the Join menu of Conference call.

PRIVATE CALL IN A CONFERENCE CALL

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then tap the left soft key. Select the Private menu of Conference call to put all the other callers on hold.

ENDING A CONFERENCE CALL

A currently displayed caller from a conference call can be disconnected by pressing the key.

This icon refers to the menus related to call, message and browser.

Dialling

Contacts

1 Search
2 New contact
3 Speed dials
4 Groups
5 Settings
6 Information

Call history

1 All calls
2 Missed calls
3 Dialled calls
4 Received calls
5 Call charges
6 Data information

Message

1 New text message
2 New multimedia message
3 New email message
4 Inbox
5 Email box
6 Drafts
7 Outbox
8 Sent
9 Voice mail
0 Info service
11 Templates
12 Settings

Browser

1 Home
2 Bookmarks
3 Go to URL
4 Settings

This icon refers to the menus related to Multimedia functions such as MP3, camera, video camera, FM radio.

My stuff

1 Images
2 Sounds
3 Videos
4 Documents
5 Others

Camera

Camcorder

Voice recorder

MP3 Player

1 All songs
2 Settings

FM Radio

Games & Apps

1 Default games
2 Downloaded
3 Information
4 Settings

This icon refers to the menus related to Tool for user's convienience.

Alarm clock

Calculator

World clock

Unit converter

1 Currency
2 Area
3 Length
4 Weight
5 Temperature
6 Volume
7 Velocity

Calendar

Memo

This icon refers to the menus related to settings of device.

Display

1 Wallpaper
2 Backlight
3 Clock
4 Brightness
5 Theme
6 Network name

Profile

1 General
2 Silent
3 Vibrate only
4 Outdoor
5 Headset

Settings

1 Date & Time
2 Power saving
3 Languages
4 Call
5 Security
6 Connectivity
7 Flight mode
8 Reset setting
9 Memory status

Bluetooth

1 Bluetooth on/off

2 Device list

3 Bluetooth settings

4 Supported services

SIM service

This menu depends on SIM and the network services.

DIALLING (Menu 1)

This icon stands for the menu related to Call. If you select this icon, you can make a call, and send a message.
You can enter Dialing, Message and Contacts menu directly in standby mode by tapping the corresponding icon.

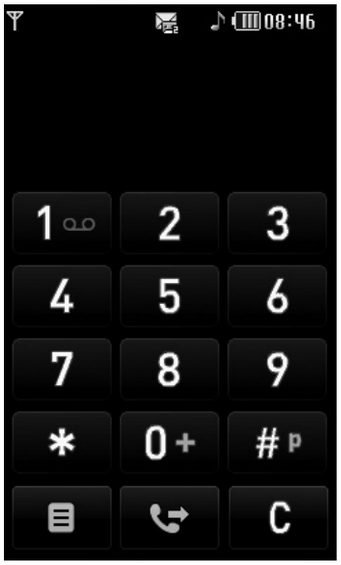

To make and receive calls, make sure that the phone is turned on. When the power is on and the PIN code is entered (or not, depending on setting of PIN code request) the phone automatically searches for the network registered in the SIM card. To make a call tap the icon and then enter Dialling menu. After the keypad is displayed on screen, enter the phone number.

CONTACTS (Menu 2)

1. Tap icon or menu icon in standby mode.
2. Select **Contacts** menu.

Search (Menu 2.1)

1. Tap **Search** in **Contacts** menu.
2. You can view the list of contacts you saved.
3. If you want to edit, delete, or copy an entry, select icon. The following menu will be displayed.

- **New message:** After you have found the number you want, you can send a text/ multimedia message, or an e-mail to the selected number.
- **Delete:** You can delete an entry.
- **Edit:** You can edit the name, number, group, character and picture by using the navigation key.
- **New contact:** You can add new entry.
- **Send contact via Text/Multimedia/E-mail/ Bluetooth:** You can send the data of phonebook to other devices which is compatible with Bluetooth. You can also send text/multimedia/ E-mail message with an entry saved in phonebook.
- **Copy to SIM/phone:** You can copy the entry from SIM card or phone memory.
- **Multiple delete:** You can delete the multiple entries at the same time.
- **Search by 3x4:** You can search the entry by entering the name. This menu is displayed on activating search editor.

New contact (Menu 2.2)

You can add phonebook entry by using this function. The phone memory capacity is 1000 entries. The SIM card memory capacity depends on the SIM. The number of characters is a SIM dependent feature.

1. Select **New contact**.
2. Select the memory you want to save: **SIM** or **Phone**.
   a. Tap the blank of name to input a name and tap [OK].
   b. Input a number and tap [Save].

Maximum stored name and number length depends on SIM-card type.

   c. You can set a group for the entry by scrolling a bar.
   d. you can select a ringtone.
   e. You can set a character and a picture for the entry by scrolling a bar.

The step of c, d, and e only can be set for numbers stored on the phone, not on the SIM.

Speed dials (Menu 2.3)

You can assign any of the keys 2 to 9 with a Name list entry. You can call directly by tapping and holding this key. After assigning the number as speed dial, you can change and delete the entry. You can also send a message to this number.

1. Select **Speed dials.**
2. If you want to add a speed dial, select (**Empty**). Then, you can search the name in the phonebook.
3. Select **[Assign]** in the middle of the bottom line.

Groups (Menu 2.4)

You can list up to the members per each group. There are 7 groups you can make lists to.

- **Set group ringtone:** Allows you to specify ring tone for the group members' call.
- **Set group icon:** Allows you to select the icon depending on Group.
- **Add member:** You can add a member to the selected group.
- **Remove member:** Allows you to remove a member from the group.
- **Rename:** You can change a group name.
- **Remove all:** Allows you to remove all the members from the group.

Settings (Menu 2.5)

1. Select Settings.

- **Copy all**

  You can copy/move entries from the SIM card memory to the Phone memory and vice versa.

2. Select **Copy all**

- **SIM to Phone:** You can copy all entries from SIM Card to Phone memory.
- **Phone to SIM:** You can copy all entries from Phone memory to SIM Card.

- **Delete all**

  You can delete all entries in the SIM card or phone. This function requires the security code.

Information (Menu 2.6)

- **Service dial numbers**

  Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

- **Own number**

  You can view your own number. If you use other SIM cards, you can save the new number by using **<Add>.**

- **Memory status**

  You can check the status of SIM or phone memory.

- **Business card**

  You can compose a business card. If you select **Edit**, you can make a new business card.

CALL HISTORY (Menu 3)

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area.
The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times.

All calls (Menu 3.1)

You can view all lists of outgoing or incoming calls.

Missed calls (Menu 3.2)

This option lets you view the last 40 unanswered calls. You can also:
- View the number if available and call it, or save it in the phonebook.
- Enter a name for the number and save both in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Dialled calls (Menu 3.3)

This option lets you view the last 40 outgoing calls (called or attempted).
You can also:
- View the number if available and call it or save it in the phonebook.
- Enter a name for the number and save both in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Received calls (Menu 3.4)

This option lets you view the last 40 incoming calls. You can also:
- View the number if available and call it or save it in the phonebook.
- Enter a name for the number and save both in the phonebook.
- Send a message to this number.
- Delete the call from the list.

Call charges (Menu 3.5)

Call duration

Allows you to view the duration of your incoming and outgoing calls. You can also reset the call times.
The following timers are available:
- **Last call:** Length of the last call.
- **All calls:** Total length of all calls made and incoming calls since the timer was last reset.
- **Dialled calls:** Length of the outgoing calls.
- **Received calls:** Length of the received calls.

Call costs

Allows you to check the cost of **Last call** and **All calls**.

Settings

In this menu, you can change the settings after entering the PIN2 code.
- **Set credit:** This network allows you to limit the cost of your calls by selected charging units.

- **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code.
- **Auto display:** This network service allows you to see automatically the cost of your last calls. If set to **On,** you can see the last cost when the call is released.

Data information (Menu 3.6)

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online.

Data time (Menu 3.6.1)

You can check the duration of Last session and All sessions. You can also reset the session timer.

Data volume (Menu 3.6.2)

You can check Sent, Received, All data volumes, and Reset all.

MESSAGE (Menu 4)

This menu includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service), Email, voice mail, as well as the network's service messages.

New text message (Menu 4.1)

You can write and edit text message, checking the number of message pages.

1. Enter the **Message** menu.
2. If you want to write a new message, select **New text message**.
3. To make text input easier, use T9.
4. If you tap icon, you can view submenus as follow:

- **Insert:** You can insert symbols, images, sounds, text templates, phonebook entries, or your own business card.
- **T9:** You can activate or cancel T9 mode.
- **Writing language:** You can select the language.
- **New T9 word:** You can add a new word by using T9 mode.
- **Save to drafts:** You can save the message in drafts.
- **Clear text:** You can delete all the text.
- **Exit:** If you select Exit while writing a message, you can finish, and go back to message menu. The message you have written is not saved.

This phone supports EMS release 5 is and is able to send colour pictures, sounds, text styles, etc.. The other party may not receive pictures, sounds or text styles you sent properly if the phone does not support such options.

New multimedia message (Menu 4.2)

You can write and edit multimedia messages, checking the message size.

1. Enter the **Message** menu.
2. If you want to write a new message, select **New multimedia message**.
3. You can create a new message or choose one of the multimedia message templates already made.

The maximum available file size that can be inserted into the MMS-message is 300 kb.

Options menu in To tab

- **Send:** You can send multimedia messages to multiple recipients, priorities your message, or send later.
- **Save:** You can save multimedia messages to drafts or as templates.
- **Contacts:** You can insert the contact to a message.
- **Recent messages:** You can view the latest message you wrote.
- **Settings:** You can configure the settings to send the message.
- **Exit:** You can get back to the Message menu.

All messages will be automatically saved in the outbox folder, even after a sending failure.

Options menu in Subject tab

- **Send:** You can send multimedia messages to multiple recipients, priorities your message, or send later.
- **Save:** You can save multimedia messages to drafts or as templates.
- **Exit:** You can get back to the Message menu.

Options menu in Slide tab

- **Insert:** You can insert symbols, images, video clips, templates, and others to the message.
- **Preview:** You can preview multimedia messages you wrote.
- **Save:** You can save multimedia messages to drafts or as templates.
- **Edit subject:** Modifies multimedia messages you chose.
- **Slide duration:** You can set a timer for slides, texts, pictures and sounds.
- **Exit:** You can get back to the Message menu.

If you select a picture (50K) on writing a multimedia message, the loading duration will take around 5 seconds. You can't activate any keys during the loading time. After it has loaded you will be able to write the multimedia message.

New email message (Menu 4.3)

To send/receive an email, you should set up an email account.

1. You can input up to 20 email addresses in the To and Cc field.
Tip: To input "@", tap the and select "@".

2. Key in the subject of the mail and tap OK.

Accounts (Menu 4.3.1)

You can set up email accounts by selecting **New.** Using you can set the following values.

- **Set as default:** You can select a mail account as default.
- **Edit**
  - **Account name:** You can edit the Email account name.
  - **Email address:** Enter the email address given to you by your service provider.
  - **My name:** Enter a user name.
  - **Incoming mail server:** Enter the POP3 or IMAP4 address that receives your email.
  - **User name:** Enter your email ID.
  - **Password:** Enter your email password.
  - **Outgoing mail server:** Enter the SMTP address and Port number of computer that sends your email.

Save: You can save the e-mail settings.

Advanced settings

- **Protocol type:** Choose your protocol type. (POP3/IMAP4)
- **Maximum receive size:** Set up the size of files that can receive(100KB/200KB/300KB).
- **Save to server:** Select On to save the file on the server.
- **Insert signature:** Select On to add your signature to your email messages.
- **Reply email address:** You can set up the reply email address.
- **Incoming port number:** Enter the POP3 or IMAP4 Port number that receives your email.
- **Outgoing port number:** Enter the SMTP address and Port number of computer that sends your email.
- **Outgoing mail authentication:** When you send the mail, you can set authentication whether or not.
- **Outgoing server ID:** Enter your email ID.
- **Outgoing server password:** Enter your email password.

Network profile (Menu 4.3.2)

A profile is the network information used to connect to the Internet.
There are default profiles for some operators stored in phone memory.

Signature (Menu 4.3.3)

You can make your signature.

- For each e-mail account you may save up to 20 messages (totally 100 for five accounts). In the Inbox folder you may save not more than 20 messages, in Drafts and Outbox folders - 5 messages, and in Sent folder up to 10 messages. In case Drafts, Outbox or Sent folder is full, and you try to save a new message to one of these folders, the oldest saved message will be automatically deleted.

- Maximum size for one sent message is 300 kb with attachments, and maximum size for one received message is 100 kb. In case you have received a message with more than 5 attachments, only 5 of them will be received. Some attachments may display incorrectly.

Inbox (Menu 4.4)

You will be alerted when you have received messages. They will be stored in the Inbox.
In the Inbox, you can identify each message by icons.
If the phone shows 'No space for SIM message', you have to delete some messages from the Inbox. If the phone displays 'No space for message', you can make space of each repository by deleting messages, media and applications.

*** SIM message**

SIM message means the message exceptionally stored in SIM card. You can move this message to the phone.

For notified multimedia message, you have to wait for downloading and processing of the message.
To read a message, select one of the messages by pressing View.

- **Delete:** You can delete the current message.
- **Reply:** You can reply to the sender.
- **Forward:** You can forward the selected message to another party.
- **Return call:** You can call back to the sender.
- **Information:** You can view information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Multiple delete:** After the messages you want to remove, you can delete the selected messages.
- **Delete all read:** You can delete all messages read.
- **Delete all:** You can delete all messages.

Email box (Menu 4.5)

When you access this menu, you can either connect to your remote mailbox to retrieve your new email messages, or you can view the previously retrieved email messages without logging in to the email server.
You can check the saved emails, drafts, outbox, and sent emails. In the Inbox, up to 20 emails are stored.

Drafts (Menu 4.6)

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.
The following options are available.

- **Edit:** Modifies the massage you choose.
- **Delete:** Deletes the message you choose.
- **Information:** To view the information of the message.
- **Multiple delete:** After selecting the messages you want to remove, press OK and you can delete the selected messages.

- **Delete all:** Deletes all of the messages in the folder.

Outbox (Menu 4.7)

This menu allows to view the message which is about to send or is failed sending. After sending the message successfully, the message will be moved to sent menu.

- **Resend:** You can send the message. After sending the message, this will be moved to sent box.
- **Edit:** Modifies the massage you choose.
- **Information:** You can check information of each message.
- **Delete:** You can delete the message.
- **Multiple delete:** After selecting the messages you want to remove, press OK and you can delete the selected messages.
- **Delete all:** You can delete all messages in outbox.

Sent (Menu 4.8)

This menu allows you to view the messages which are already sent. You can check the time and the contents of message.

Voice mail (Menu 4.9)

Once this menu has been selected, simply tap [OK] to listen to voice mail. You can also tap and hold down the 1 key in dial mode to listen to voice mail.

When you receive a voice mail, your phone displays the icon and you hear an alert. Please check with your network provider for details of their service in order to configure the handset correctly.

Info service (Menu 4.0)

(Dependent to network and subscription)

Info service messages are text messages delivered by the network to the your phone. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of has the number; therefore, you can contact the service provider as long as you have input the relevant number for the information you want. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed. To view the message again or not in standby mode, follow the sequence shown below;

Read (Menu 4.0.1)

1. When you have received an info service message and select Read to view the message, it will be displayed on the screen. You can read another message by scrolling .
2. The message will be shown until another message is reached.

Topic (Menu 4.0.2)

(Dependent to network and subscription)

- **Add new:** You can add Info service message numbers in the phone memory with its nickname.
- **View list:** You can see info service message numbers which you added. If you tap icon, you can edit and delete info message category which you added.
- **Active list:** You can select info service message numbers in the active list. If you activate an info service number, you can receive messages sent from the number.

Templates (Menu 4.11)

Text template (Menu 4.11.1)

You have 6 text templates as below;

- **Please call me back.**
- **I'm late. I will be there at**
- **Where are you now?**
- **I am on the way.**
- **Urgent! Please contact.**
- **I love you.**

Multimedia template (Menu 4.11.2)

If you the template list is empty, you can add new template by tapping New. If the template is existed, you can view submenus as follow:

- **Edit:** You can edit multimedia templates.
- **Send:** You can send a message with multimedia template.
- **Delete:** You can delete multimedia templates.
- **New template:** You can write and send multimedia messages.
- **Delete all:** Allows you to delete all multimedia messages.

Settings (Menu 4.12)

Text message (Menu 4.12.1)

If you select this menu, you can tap the submenus in bar as follow:

- **Service centre:** If you want to send the text message, you can receive the address of SMS centre through this menu.
- **Delivery receipt:** If you set to Yes, you can check whether your message has been delivered successfully.
- **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- **Reply charging:** When a message is sent, it allows the recipients to reply and charge the cost of the reply to your telephone bill. This service is dependant on your service provider.
- **Message type:**
  Text, Voice, Fax, X.400, E-mail, ERMES
  Usually, the type of message is set to **Text.** You can convert your text into alternative formats. Contact your service provider for the availability of these functions.

Mulitimedia message (Menu 4.12.2)

If you select this menu, you can tap the submenus in each bar.

- **Slide duration:** You can set the duration of each slide.
- **Priority:** You can set the priority of the message you choose.
- **Validity period:** This network service allows you to set how long your text messages will be stored at the message centre.
- **Delivery report:** If it is set to Yes in this menu, you can check whether your message has been delivered successfully.
- **Read report:** If it is set to Yes in this menu, you can check whether the receiver has read the message or not.
- **Auto download:** If you select On, you receive multimedia messages automatically. If you select Off, you receive only notification message in the inbox and then you can check this notification. If you select Home network only, you receive multimedia messages only when using your home network.

- **Network profile:** If you select multimedia message server, you can set the URL for multimedia message server.
- **Permitted msg type**
  Personal: Personal message.
  Advertisement: Commercial message.
  Information: Necessary information.

Email (Menu 4.12.3)

This menu allows you to edit, delete or add an email account.

- **Accounts**
  You can set email accounts by selecting Add new. Using the Edit menu, you can edit the setting values. For details, please refer to page 35 and 36.
- **Network profile**
  You can activate the profile saved as a default.
- **Signature**
  You can make your signature.

Voicemail number (Menu 4.12.4)

You can receive the voicemail if your network service provider supports this feature. When a new voicemail arrives, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

Push message (Menu 4.12.5)

You can set the option whether you will receive the message or not.

Info message (Menu 4.12.6)

- **Receive**
  On: If you select this menu, your phone will receive Info service messages.
  Off: If you select this menu, your phone will not receive Info service messages.
- **Alert**
  On: Your phone will beep when you have received Info service message numbers.
  Off: Your phone will not beep even though you have received info service messages.
- **Language**
  You can select the language you want. Then, the info service message will be shown in the language that you selected.

BROWSER (Menu 5)

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.
Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.
Once connected, the homepage is displayed. The content depends on the service provider. To exit the browser at any time, press the ( ) key. The phone will return to the idle menu.

Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP mobile browser menu.

Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

The WAP browser menus may vary, depending on your browser version.

Home (Menu 5.1)

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks (Menu 5.2)

This menu allows you to store the URL of favourite web pages for easy access at a later time.

To create a bookmark

1. Select icon.
2. Select **New.**
3. After entering the desired URL and name, tap **Save.**

After selecting a desired bookmark, the following options are available.

- **View:** You can check the name and URL saved as a bookmark.
- **Edit:** You can edit the URL and/or the name of the selected bookmark.
- **New:** Select this to create a new bookmark.
- **Delete:** Deletes the selected bookmark.
- **Send URL:** You can send the URL saved as a bookmark.
- **Delete all:** Deletes all the bookmarks.

Go to URL (Menu 5.3)

You can connect directly to the site you want. After entering a specific URL, tap Connect.

Settings (Menu 5.4)

You can set the profile, cache, cookie and security related to internet service.

Network profile (Menu 5.4.1)

A profile is the network information used to connect to the Internet.
There are default profiles for some operators, stored in phone memory. It's impossible to rename default profiles.
Each profile has submenus as follows:

- **View:** You can view the selected profile.
- **Edit:** You can change the profile name.
- **New profile:** You can add a new profile.
- **Reset all:** Deletes the selected profile from the list.

Cache (Menu 5.4.2)

The information or services you have accessed are saved in the cache memory of the phone.

- **Clear cache:** Removes all context saved in cache.
- **Allow cache:** If you select On, you can use cache memory to save the contents temporarily.

Security certificates (Menu 5.4.3)

A list of the available certification is shown.

Information (Menu 5.4.4)

You can view the version of WAP browser.

MULTIMEDIA

If you tap the Multimedia icon, you can enter the menu related to Multimedia such as camera, video camera, voice recorder, MP3, Radio, and Java games.

Do not change the default folder names, or it will not work properly.

MY STUFF (Menu 1)

Images (Menu 1.1)

Show the list of JPG/BMP/GIF/PNG files at Default images or Downloaded folder.You can view the taken picture and downloaded image from WAP. If you tap the image in list view or thumbnail view, you can view the normal image.

You can create new folder by connecting USB driver.

Memory

If you tap icon in a JPG/BMP/GIF/PNG list, you can view the submeus as follows (in Thumbnail view):

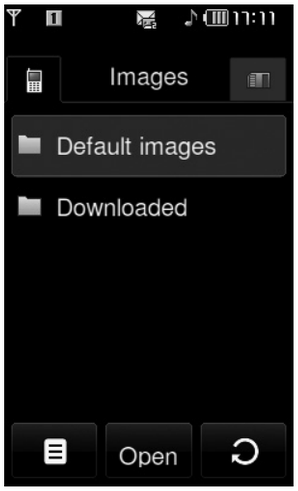

- **Send via:** You can send the image through MMS /Email/Bluetooth.
- **Set as wallpaper:** You can set the image as a wallpaper. The wallpaper is supported by full screen/adjust screen/original mode.
- **Delete:** You can delete the selected image.
- **File:**
  - **Rotate image:** You can rotate image with an angle of 90°/180°/270°.
  - **Rename:** You can change the name of file.
  - **Move/Copy:** You can move or copy image between internal memory and external memory.
  - **Information:** Shows the file information.
- **Print via Bluetooth:** You can print the selected file to another device via Bluetooth.
- **View as slide show:** You can view the JPG/BMP /GIF/PNG file as slide show.
- **Multiple delete:** You can delete multiple files at the same time.
- **Delete all:** Deletes all files in the list.
- **List view:** You can view the JPG/BMP/GIF/PNG list.

If you tap icon in a JPG/BMP/GIF/PNG list, you can view the submenus as follows (in List view):

- **Send via:** You can send the image through MMS/Email/Bluetooth.
- **Set as wallpaper:** You can set the image as a wallpaper. (Only for JPG/BMP/PNG)
- **Delete:** You can delete the selected image.
- **File:**
  - **Rotate image:** You can rotate image with an angle of 90°/180°/270°.
  - **Rename:** You can change the name of file.
  - **Move/Copy:** You can move or copy image between internal memory and external memory.
  - **Information:** Shows the file information.
- **Print via Bluetooth:** You can print the selected file to another device via Bluetooth.
- **View as slide show:** You can view the JPG file as a slide show.
- **Delete:** Deletes a file.
- **Multiple delete:** You can delete multiple files at the same time.
- **Delete all:** Deletes all files in the list.
- **Thumbnail view/List view :** You can view the JPG/BMP/GIF/PNG file as a thumbnail/list image.

- You can store .JPG (.JPEG) files in both the phone and memory card in the Photos folder. In the Images folder in both the phone and external memory you may store JPG, BMP, PNG, GIF, WBMP and other image format files.
- To setup a JPG/BMP/GIF/PNG file from the Photo folder as wallpaper, go to Menu-Multimedia-Photo album and then select Set as wallpaper in Options menu.
- You cannot set GIF, Ani GIF,Animated GIF,Transparent GIF, and Progressive JPG file as a wallpaper.

Sounds (Menu 1.2)

Shows the list of MP3, AAC, WMA, I-MELODY, WAVE, MIDI, AMR, MMF, M4A files at Default sounds, Downloaded, Voice records and MP3 folder.

If you tap icon in a list, you can view the menu as follows:

- **Send via:** You can send the sound file on writing the message.
- **Set as ringtone:** You can set the sound as a ringtone.
- **File:** You can view the file and DRM information.
- **Delete:** Deletes a file.
- **Multiple delete:** You can delete multiple files at the same time.
- **Delete all:** Deletes all files in the list.

Videos (Menu 1.3)

Shows the list of MP4, 3GP files in the Downloaded folder.

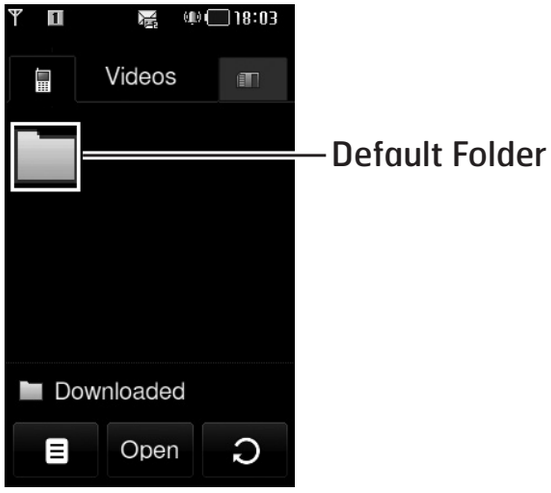

Downloaded folder is set by default. You cannot edit or delete the default folder. You can save the file downloaded from the network service in this folder.

Internal memory (Phone)

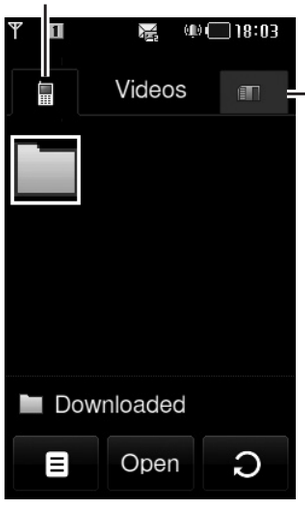

External memory

If you don't insert the external memory card into a phone, the warning message "No external memory inserted" will be displayed.

If you tap the icon in a list, you can view the submenus as follows (in Thumbnail view):

- **Send via:** Send the selected file to another device via MMS, Email and Bluetooth.

You can't use the following characters, \ / : * ? " < > |

- **Delete:** Delete a file.
- **File:**
  - **Rename:** You can change the name of file.
  - **Move/Copy:** You can move or copy image between internal memory and external memory.
  - **Information:** Shows the file information.
- **Delete all:** Delete all files in the list except default files and folder.
- **Multiple delete:** You can delete multiple files at the same time. If you mark v on the check box by tapping the screen, you can delete the selected file or cancel the actions.

- **Thumbnail view/List view:** You can view the file list.

Up & down, Page Up & Down Button

If the folder has video files over 9, up/down and page up/down icons will be shown up on the right side of screen.

The maximum available file size that can be inserted into the MMS-message and email is 300kb. If you try to attach the file over 300kb, the warning message "Oversized" will be displayed, and then the actions will be canceled automatically.

When you open the video file in folder, you can use the functions as follow:
The video player supports:

- Video Codec : **MPEG4,H.263**
- Audio Codec : **AAC,AMR**
- Resolution: 128X96, 176X144, 320X240, 352X288, 400X240, 176x120, 240x176, 320x176, 368x208, 384x160, 400x192, 416x176, 480x160
- File Extension : **.3gp, .mp4**

Normal view

• You can set the volume of video file by pressing volume soft key.

If you convert the screen to wide version, you can use the functions as follow:

ICON	DESCRIPTION
	Checks the running time of video file. Taps the bar to turn the indicating position.
	Sends the video file by MMS
	Touch lock key
	Controlling the volume
Wide	Wide view
	Rewind
	Pause or Play
	Fast Forward
	Converts to normal view.

You cannot listen to the sound with Bluetooth headset on playing the video file.

You can convert the screen horizontally by selecting Landscape menu in option. The default mode is full screen.(400X240)

Full image

Wide screen

Full screen

You can set the video file as a wallpaper as follow:
- **JPG: Not supported Greay scale format, Progressive format**
- **BMP: Maximum up to 24bit**
- **PNG : No limit**

Documents (Menu 1.4)

Show the text documents in SIM or phone memory. After opening the file, you can view the submenus by tapping icon.

- **Landscape:** You can read the text in landscape.
- **Go to page:** You can go the selected page directly without searching it.
- **Set magnification:** You can magnify it by tapping the icon.
- **View setting:** You can set the size of text by using Fit to height and Fit to width menus.
- **Bookmark setting:** If you select On, you can go back to the latest page you opened directly. You can save the documents as a bookmark up to 100.

- **If the file has over 300 lines, it may not be opened properly.**
- **You can open the file the maximum of up to 10MB.**
- **The display screen for loading can be stopped if the file size is exceeded the maximum.**

Others (Menu 1.5)

Show the list of files in My media\Others in the Multimedia memory.

- **Send via:** Send the selected file to another device via Email or Bluetooth.
- **Delete:** Delete a file.
- **File:** You can edit the file name. You can also copy and move the file.
- **Multiple delete:** You can delete multiple files at the same time.
- **Delete all:** Delete all files in the list.

DRM (Digital Rights Management)
As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may have a "Purchase right" menu to access them. You can acquire the key to purchase the right from the website which owns the rights to the contents.

CAMERA (Menu 2)

Do one of the following to display the camera capture screen:

1. Press the key at least two seconds to enter camera capture mode directly. Or, tap the Multimedia icon, and then select **Camera** menu.
2. Focus on the subject to capture the image, and then press the key.
3. You can save the picture automatically.

Before taking a picture, you can view the menu as follows:

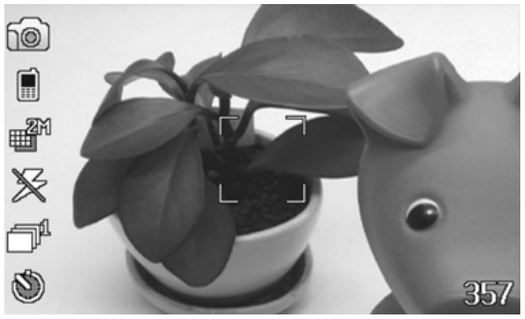

Menu	Icon	Description
Mode		Allows you to take a picture.
		Allows you to take a moving image.
Zoom		Allows you to set the zooming value.
Flash ON/OFF		Allow you to set the flash when you take a photo in dark place.
Resolution		320X240, 640X480, 1280X960, 1600X1200

Menu	Icon	Description
Meter		All, Centre
Filter		Off, Negative, Gray, Sepia
Quality		Normal, Fine, Super fine
AF, ON/OFF	AF	Automatically adjusts the focus for a clear, sharp image with a single press of a button.
Multishot		Allows to take multishot photos successively. - QVGA (1,3,6) - VGA (1,3) - ONE_MEGA (1) - TWO_MEGA (1)
View		4:3, 16:9
Storage		You can select a storage space; Phone or Memory card.
Timer		Allows you to select the delay time (Off, 3 Seconds, 5 Seconds, 10 seconds). Then the phone takes a photo after the specified time.
Shutter tone		Shutter1, Shutter2, Shutter3
WB	WB	Auto, Tungsten, Fluorescent, Daylight, Cloudy

If you tap on the screen, you can view the menu as follows:

Menu	Icon	Description
Setting		You can change the setting.
Mode		You can change the mode from camera to camcorder.
Folder		You can move the picture to each folder.
Cancel		You can go back to previous menu.

After taking a picture, you can check the menu as follows:

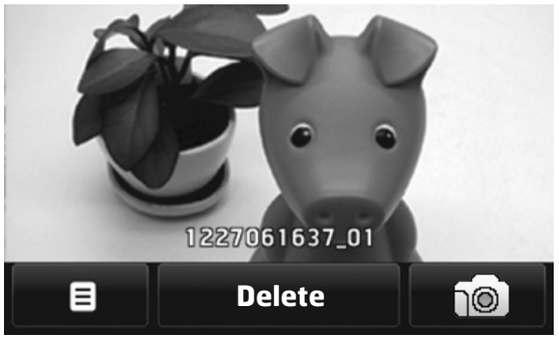

Menu	Icon	Description
Option		If you tap this icon after taking a picture, you can set it as a wallpaper or send a message via MMS, Email in My stuff menu.
Delete	Delete	If you don't want to save the picture, you can delete it.
Camera		You can take a picture.

CAMCORDER (Menu 3)

1. Select **Camcorder** menu.
Once the settings are displayed on the screen, you can scroll through them touching the icons. Scroll to the setting you wish to change, tap the screen and it will bring up the setting values. Scroll to your preferred choice.

2. To start recording press . As soon as it starts to record a timer will be displayed.

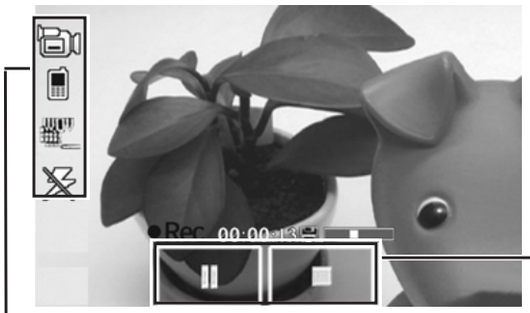

Same as Camera settings except of Duration. For details, refer to P.47.

Menu	Icon	Description
Duration		You can check the recording duration in this menu. (Multimedia msg/ No limit)

3. Press the to end the recording and this will now be saved.

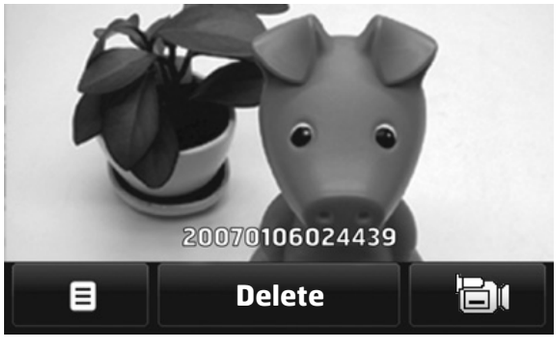

After taking a moving image, you can check the menu as follow:

Menu	Icon	Description
Option		If you tap this icon after taking a picture, you can set it as a wallpaper or send a message via MMS, Email.
Delete	Delete	If you don't want to save the picture, you can delete it.
Video camera		You can take a video.

VOICE RECORDER (Menu 4)

You can record voice memo in Voice recorder menu.

Recording time

If you select [ ] with no voice file, you can view the submenus as follow:

- **My stuff:** You can enter the Voice records menu directly.
- **Storage:** You can select the storage to save the voice in phone or external memory.
- **Recording mode:** You can select the proper mode of No limit or Multimedia msg.

In No limit mode, you can record the voice as an MP3. But if you record the voice during a call or in multimedia msg mode it will be recorded as an AMR.

1. Once recording is started, the message Recording and the remaining time is displayed.
2. If you want to finish recording, press the center key Stop.

If you tap Option [ ] after saving the voice memo, you can view the submenus as follow:

- **New voice record:** You can record new voice memo.
- **Send via:** You can send the voice memo via MMS, Bluetooth, infrared or E-mail.
- **My stuff:** You can access the Sounds folders.

MP3 PLAYER (Menu 5)

All songs (Menu 5.1)

The KE850 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on a memory in your phone using a compatible headset or via the internal loudspeaker.

Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The music player supports:

- **MPEG-1 Layer III, MPEG-2 Layer III, MPEG-2.5 Layer III:** Sampling frequency up from 8KHz to 48KHz. Bit rate up to 320Kbps, stereo.
- **AAC:** LC (Low complexity)
- **AAC+:** V1: (Bit rate 16~128Kbps)
  V2: (Bit rate 16~48Kbps)
  (Sampling frequency from 8KHz to 48KHz)
- **WMA, RA**

The KE850 doesn't support the variable bit rate of all mentioned file types. Therefore, you can't change the file from MP3 format to AAC.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mass Storage.
When you connect the phone to a PC using the USB cable (supplied in the box), the phone will be recognised as a removable disk through windows explorer. After you copy songs to the removable disk, you should execute the safe removal of hardware from your system. Never remove the cable from the PC or phone while data is transferring as this can seriously damage the phone.

- You should copy MP3 tracks to Sounds\MP3 folder. If you copy to any other folder, you can't see or play the MP3 files.
- The PC should run Windows 2000, Windows XP operating system.

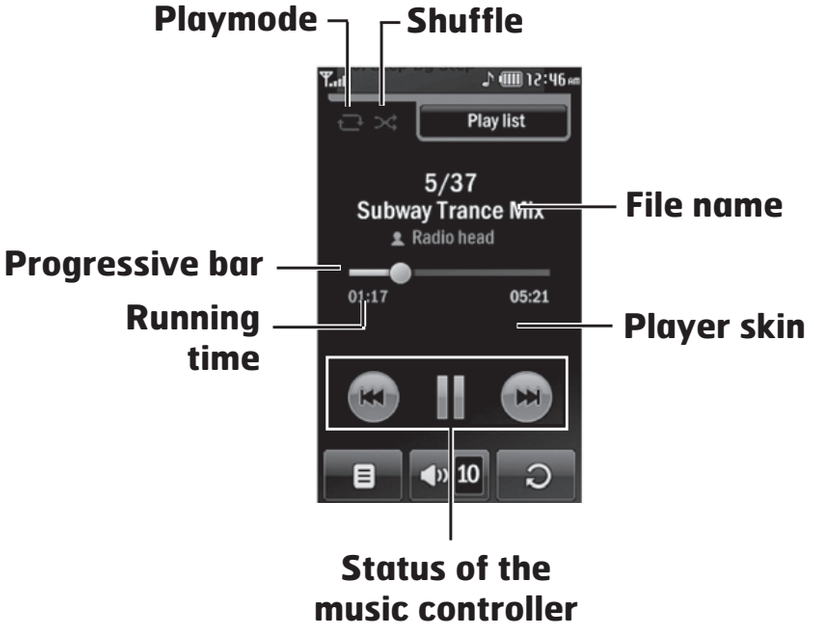

In case an invalid file is included in the playlist, the menu will return back to the play list.

1. Press the MP3 key on the side of the phone to open the MP3 player. Then select the play list to play.
2. Press the left soft key [Options] to access the following menus.

- **Set as ringtone:** You can set as a ringtone the current music on playing MP3 file.
- **Settings:** You can set up various functions such as shuffle, repeat.

Playlist (Menu 5.1.1)

This menu allows to view the whole play list. You can move the track by pressing the navigation key. In addition, if you select the option menu, you can delete the file or view its information.

Settings (Menu 5.2)

- **Shuffle**
  It you select On, the tracks will be played randomly.
- **Repeat**
  This menu allows to set the play mode: Off, Repeat all, Repeat one.
- **Player skin**
  You can select the visual effect menus: White skin and Black skin. This menu allows you to change the background of the display.

Music is copyright protected in international treaties and national copyright laws. It may be necessary to obtain permission or a license to reproduce or copy music. In some countries national law prohibits private copying of copyrighted material. Please check the national legislation of the applicable country concerning the use of such material.

When an MP3 is playing on the MP3 player, if you press MP3 short key, you can use BGM mode. In BGM mode MP3 can be played while other functions are being used. BGM can be stopped on the MP3 player screen.

FM RADIO (Menu 6)

Radio (Menu 6.1)

You can search radio stations and enjoy listening to the radio.

- To improve the radio reception, extend the headset cord which functions as the FM antenna.
- You cannot use FM radio without headset.

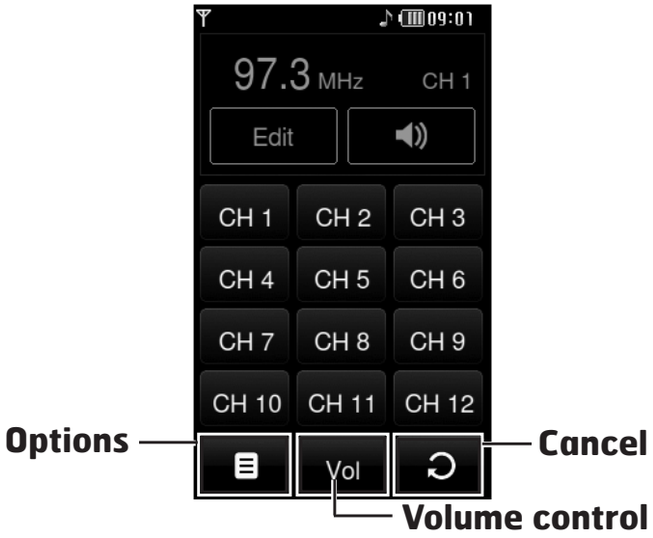

1. Tap the corresponding number key of a channel to store the currently selected radio station into.
2. After presetting the radio channels, you can listen to all the preset channels.
3. You can adjust frequency and change the radio station in the selected channel. You can search for the next station by tapping for at least two seconds or pressing the side keys.

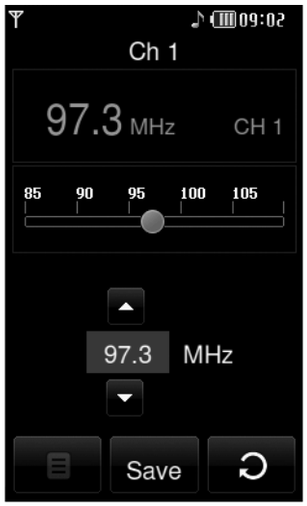

4. You can access the following option menus by pressing the left soft key [Options].

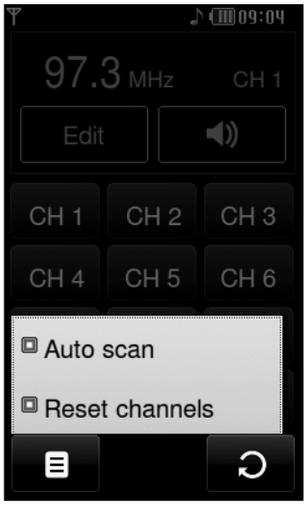

- **Auto scan:** If you select "Auto Scan Now?" to On, it automatically sets the radio channels. When "Save this Station?" message appears, if you select Yes, the selected frequency will be stored.
- **Reset channels:** You can reset all channels at 87.5Mhz.

- You can lock the FM radio function by pressing side lock key.
- You cannot switch on the backlight by pressing the clear key or touching the keypad if the function is locked.

GAMES & APPS (Menu 7)

In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connect option.

Default games (Menu 7.1)

You can enjoy four default games. If you want to know the contents of games, you can use Help in a game.

Downloaded (Menu 7.2)

You can play the downloaded games from the network.

Information (Menu 7.3)

You can check the Java version installed in a phone.

Settings (Menu 7.4)

To download a game, you can set the value to connect the network in this menu.

TOOLS

You can use various tools installed in the phone such as alarm, calculator, world clock, unit converter, and scheduler.

ALARM CLOCK (Menu 1)

You can set alarm clocks to go off at a specified time.

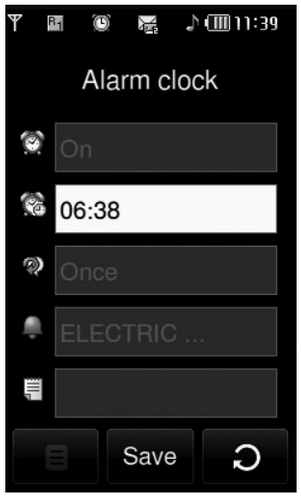

1. Select **On** and enter the alarm time you want.

- : You can set the alarm by tapping On or Off.
- : You can set the specified time to alert.
- : You can set the repeat duration for alarm.
- : You can set the alarm tone in each folder.
- : You can input the memo for alarm. When the alarm alerts, you can view the memo.

After setting each value, tap **Save.**

You can set multiple alarms up to 5.

CALCULATOR (Menu 2)

This contains the standard functions such as +, −, *, / : Addition, Subtraction, Multiplication and Division.
Furthermore, you can use the various function of calculator such as +/-, sin, cos, tan, log, ln, exp, deg, rad by tapping Science bar.

1. Input the numbers by tapping numeric keys.
2. If you want the complicate calculation such as sin, cos, tap key.
3. If you input wrong number, tap key.
4. Tap = key to view the result.
5. To end **Calculator**, tap .

WORLD CLOCK (Menu 3)

You can check the time of selected major city in world by dragging around the screen of world map. You can zoom in, and use the arrow keys to find the correct city.

UNIT CONVERTER (Menu 4)

This converts any measurement into a unit you want. There are 7 types that can be converted into units: **Currency, Area, Length, Weight, Temperature, Volume** and **Velocity.**

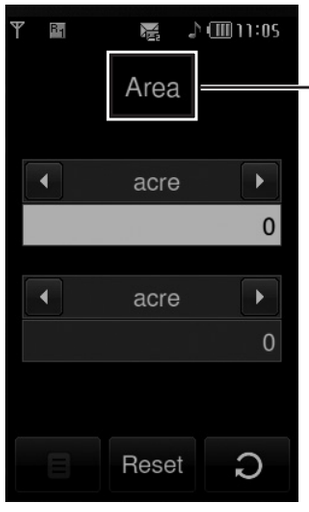

1. You can select one of seven unit types by tapping the menu.
2. Input the number you want to convert in each bar. It's impossible to input "-" symbol in unit converter.
3. If you want to reset the value, tap **Reset.**

CALENDAR (Menu 5)

When you enter this menu a calendar will show up. On top of the screen there are sections for date. Whenever you change the date, the calendar will be updated according to the date. A square cursor will be used to locate the specific day. If you see a marked date in the calendar, it means that there is a schedule or memo on that day. This function helps to remind you of your schedule and memo. The phone will sound an alarm tone if you set this for the note.
To change the day, month, and year:

If you tap each day/month/ year area, you can change it.

If you select icon, you can view the menu as follows:

- **Delete past:** You can delete the past schedules.
- **Delete all:** You can delete all schedules.
- **Go to Date:** You can go the selected date directly.

MEMO (Menu 6)

If you select icon after entering the menu, you can view the submenu as follows:

- **New:** You can create new memo.
- **Send via BT/Email/SMS/MMS:** You can send the memo via Bluetooth, E-mail, SMS and MMS.
- **Multiple delete:** You can delete the selected memos at once.
- **Delete:** You can delete the memo.
- **Delete all:** You can delete all memos.

SETTINGS

You can configure the settings related to the phone.

DISPLAY (Menu 1)

Wallpaper (Menu 1.1)

You can select the background pictures in standby mode.
A few items of background such as the butterfly or the clock can move with a finger.

Backlight (Menu 1.2)

You can set the light-up duration of the display.

Clock (Menu 1.3)

You can select the various clock types to display.

Brightness (Menu 1.4)

You can set the brightness of the LCD: 100%, 80%, 60%, 40%

Theme (Menu 1.5)

You can set the theme of display: PRADA theme, Blue theme, Butterfly theme, and Fish theme.

The phone will display different top menus depending on the theme.

Network name (Menu 1.6)

If this function is activated, network name will be displayed on main LCD.

PROFILE (Menu 2)

In **Profile,** you can adjust and customise the phone tones for different events, environments, or caller groups.
There are five preset profiles: **General, Silent, Vibrate only, Outdoor**, and **Headset.** Each profile can be personalised.

Activate (Menu 2.X.1)

1. A list of profiles is displayed.
2. In the Profiles list, scroll to the profile you want to activate and tap **Activate.**

Personalise (Menu 2.X.2)

Scroll to the desired profile in the Profile list, and then tap **Personalise.**

- **Call alert type:** Set the alert type for incoming calls.
- **Ringtones:** Select the desired ring tone from the list.
- **Ring volume:** Set the volume of the ringing tone.
- **Message alert type:** Set the alert type for messages.
- **Message tones:** Select the alert tone for messages.
- **Touch tones:** Select the desired touch and keypad tone.
- **Touch volume:** Set the volume of touch and keypad tone.
- **Effect sound volume:** Set the volume of effect sound.
- **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.
- **Auto answer:** This function will be activated only when your phone is connected to the handsfree kit.
  - **Off:** The phone will not answer automatically.
  - **After 5 secs:** After 5 seconds, the phone will answer automatically.
  - **After 10 secs:** After 10 seconds, the phone will answer automatically.

SETTINGS (Menu 3)

Date & Time (Menu 3.1)

You can set the date and time.

Date (Menu 3.1.1)

You can enter the current date.

Date format (Menu 3.1.2)

You can set the date format such as YYYY/MM/DD, DD/MM/YYYY, MM/DD/YYYY. (D: Day / M: Month / Y: Year)

Time (Menu 3.1.3)

You can enter the current time.

Time format (Menu 3.1.4)

Your can set the time format between 24-hour and 12-hour.

Auto update (Menu 3.1.5)

(Network dependent)
If you select On, the date and time setting will be updated automatically.

Power saving (Menu 3.2)

If you set On, you can save the power when you don't use the phone.

Languages (Menu 3.3)

You can change the language for the display texts in your phone. This change will also affect the Language Input mode.

Call (Menu 3.4)

You can set the menu relevant to a call by tapping Setting menu.

Call divert (Menu 3.4.1)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For details, contact your service provider.

- **All voice calls**
  Diverts voice calls unconditionally.
- **If busy**
  Diverts voice calls when the phone is in use.
- **If no reply**
  Diverts voice calls which you do not answer.
- **If out of reach**
  Diverts voice calls when the phone is switched off or out of coverage.
- **All data calls**
  Diverts to a number with a PC connection unconditionally.
- **All fax calls**
  Diverts to a number with a fax connection unconditionally.
- **Cancel all**
  Cancels all call divert service.

The submenus

Call divert menus have the submenus shown below.

- **Activate**
  Activate the corresponding service.
  To voice mail centre
  Forwards to message centre. This function is not shown at All data calls and All fax calls menus.
  To other number
  Inputs the number for diverting.
  To favourite number
  You can check recent 5 diverted numbers.
- **Cancel**
  Deactivate the corresponding service.
- **View status**
  View the status of the corresponding service.

Send my number (Menu 3.4.2)
(network and subscription dependent)

- **Set by network**
  If you select this, you can send your phone number depending on two line service such as line 1 or line 2.
- **On**
  You can send your phone number to another party. Your phone number will be shown on the receiver's phone.
- **Off**
  Your phone number will not be shown.

Call waiting (Menu 3.4.3)
(network dependent)

- **Activate**
  If you select **Activate,** you can accept a waiting (receiving) call.
- **Cancel**
  If you select **Cancel,** you cannot recognize the waiting (receiving) call.
- **View status**
  Shows the status of Call waiting.

Minute minder (Menu3.4.4)

If you select **On**, you can check the call duration by a beep sound given every minute during a call.

Auto redial (Menu 3.4.5)

- **On**
  When this function is activated, the phone will automatically try to redial in the case of failure to connect a call.
- **Off**
  Your phone will not make any attempts to redial when the original call has not connected.

Send DTMF tones (Menu 3.4.6)

You can send touch tones during an active call to control your voice mailbox or other automated phone services.

Information
DTMF tone: Dual Tones Multiple Frequency.

Select line (Menu 3.4.7)
(SIM dependent)

This menu is shown only if the SIM supports two subscriber numbers, that is, two phone lines. Select which phone line (between Line 1 and Line 2) you want to use for making calls and sending short messages. Calls on both lines can be answered irrespective of the selected line.

Security (Menu 3.5)

Request PIN code (Menu 3.5.1)

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on.
If this function is activated, you'll be requested to enter the PIN code.

1. Select **Request PIN code** in the security settings menu.
2. Set **Enable/Disable**.
3. If you want to change the setting, you need to enter PIN1 code when you switch on the phone.
4. If you enter wrong PIN1 code more than 3 times, the phone will lock out. If the PIN1 is blocked, you will need to key in PUK code.
5. You can enter your PUK code up to 10 times. If you put wrong PUK code more than 10 times, you can not unlock your phone. You will need to contact your service provider.

Auto key lock (Menu 3.5.2)

If you activate this function, the key will be locked automatically in standby mode without requesting the action of key.

Handset lock (Menu 3.5.3)

You can use a security code to avoid unauthorized use of the phone. Whenever you switch on the phone, the phone will request security code if you set phone lock to When switch on.
If you set phone lock to When SIM changed, your phone will request security code only when you change your SIM card.

Call barring (Menu 3.5.4)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing calls**
  The barring service for all outgoing calls.
- **Outgoing international**
  The barring service for all outgoing international calls.
- **Outgoing international when roaming**
  The barring service for all international outgoing calls except home network.
- **All incoming**
  The barring service for all incoming calls.
- **Incoming when roaming**
  The barring service for all incoming calls when roaming.
- **Cancel all**
  You can cancel all barring services.
- **Change password**
  You can change the password for Call Barring Service.

The submenus:

- **Activate**
  Allows to request the network to set call restriction on.
- **Cancel**
  Set the selected call restriction off.
- **View status**
  View the status whether the calls are barred or not.

Fixed dial number (Menu 3.5.5)

(SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

- **On**
  You can restrict your outgoing calls to selected phone numbers.
- **Off**
  You can cancel fixed dialling function.
- **Number list**
  You can view the number list saved as fixed dial number.

The default security code for this phone is 0000. The PIN 1 and PIN 2 and related to the SIM card and your service provider.

Change codes (Menu 3.5.6)

PIN is an abbreviation of Personal Identification Number to prevent use by unauthorized person. You can change the access codes: **Security code, PIN1 code, PIN2 code.**

1. If you want to change the Security code/PIN1/ PIN2 code input your original code, and then tap [OK].
2. Input new Security code/PIN/PIN2 code and verify them.

Connectivity (Menu 3.6)

Network selection (Menu 3.6.1)

You can select a network type.

- **Automatic:** If you select **Automatic** mode, the phone will automatically search for and select a network for you. Once you have selected **"Automatic",** the phone will be set to **"Automatic"** even if you turn your phone off and on.
- **Manual:** The phone will find the list of available networks and show them on a list. Then you can select the network which you want to use if this network has a roaming agreement with your home network operator. The phone allows you select another network if the phone fails to access the selected network.
- **Preferred:** You can set a list of preferred networks and the phone attempts to register with first, before attempting to register to any other networks. This list is set from the phone's predefined list of known networks.

Network profile (Menu 3.6.2)

A profile is the network information used to connect to the Internet.
There are default profiles for some operators stored in phone memory. It's impossible to delete default profiles.

GPRS attach (Menu 3.6.3)

You can set GPRS service depending on various situations.

- **Switch on**
  If you select this menu, the phone is automatically registered to a GPRS network when you switch the phone on. Starting a WAP or PC dial-up application created the connection between phone and network and data transfer is possible. When you end the application, GPRS connection is ended but the registration to the GPRS network remains.
- **When needed**
  If you select this menu, the GPRS connection is established when you connect a WAP service and closed when you end the WAP connection.

USB connection (Menu 3.6.4)

You can use your phone with a variety of PC connectivity and data communications applications though USB.

Flight mode (Menu 3.7)

If you activate the Flight mode, you can use the phone without connecting to the GSM wireless network. You can still do tasks which do not require the use of wireless network. With Flight mode you cannot make any calls including of emergency calls or use other features that require network service.

Reset setting (Menu 3.8)

You can initialize all factory defaults. You need Security code to activate this function.

- **Restore default settings:** Allows you to restore default settings.
- **Clear multimedia memory:** Allows you to format the multimedia memory and create a default directory.
- **Clear external memory:** Allows you to format all data in the external memory.

Memory status (Menu 3.9)

You can check free space and memory usage of each repository, Internal memory, Multimedia memory and external memory. You can go to each repository menu.

BLUETOOTH (Menu 4)

Bluetooth enables compatible mobile devices, peripherals and computers that are in close proximity to communicate directly with each other without wires. This handset supports built-in Bluetooth connectivity, which makes it possible to connect them with compatible Bluetooth headsets, computer applications and so on.

- If you use a pcsync via Bluetooth, you can exchange the data within only the phonebook.
- When you receive data from another Bluetooth device, the phone requests a confirmation. After confirming the transfer, the file will be copied in your phone.
- Depending on the file type, it will be stored in the following folders:
  • MP3(.mp3, mp4, aac, wma): Music folder.
  • Video (.3GP): Video folder.
  • Phonebook contacts (.VCF): Phonebook.
  • Text(.txt): Text folder.
  • Other files (.*): File storage folder.
- Supported Bluetooth software (Bluetooth stacks) for DUN: Recommended drivers WidComm Bluetooth for Windows 1.4 and 3.0.

Bluetooth on/off (Menu 4.1)

You can activate or cancel the Bluetooth in this menu.

Device list (Menu 4.2)

You can view all devices which are compatible with Bluetooth on your phone.

Due to a compatibility problem, some devices may not support this function.

Bluetooth settings (Menu 4.3)

You can register a new device which is compatible with Bluetooth. If you already have added the device, you can search it after entering the password.

- **My visibility**
  You can set the function so that your phone is shown on the other peoples Bluetooth devices.
- **My name**
  You can set the name of your Bluetooth device. The default name is KE850.
- **My address**
  You can check the address of Bluetooth device you activated.

Supported services (Menu 4.4)

You can view the list of devices such as headsets and handsfree kits supported by this Bluetooth enabled phone.

Print via Bluetooth: It is available in printers which support Basic Printing Profile. You can print with "Send via Bluetooth" menu for the printers which support Object Push Profile. If the file size is the more than each of 500KB(Animated GIF file) 200KB(others), the popup message is displayed "Not supported".

SIM SERVICE (Menu 5)

This menu depends on SIM and the network services.

- In case the SIM card support SAT(i.e. SIM Application Toolkit) services, this menu will be the operator specific service name stored on the SIM card.
- In case the SIM card does not support SAT services, this menu will be Profiles.

ACCESSORIES

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter

This charger allows you to charge the battery while away from home or your office.

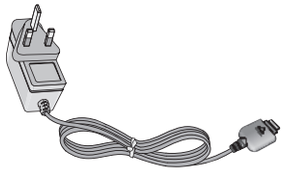

Standard Battery

Data cable/CD

You can connect your phone to PC to exchange the data between them.

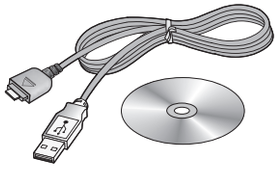

Hands free ear-microphone and music player controller combo

Stereo headset
Controller: Answer & End button, music player control, volume control, Hold button and microphone.

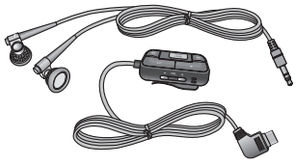

LCD cleaner

Leather case

Memory card

NETWORK SERVICE

The wireless phone described in this guide is approved for use on the GSM 900, DCS 1800, PCS1900 network.

- Dualband is a network dependent feature. Check with your local service provider if you can subscribe to and use this feature.
- A number of features included in this guide are called Network Services. These are special services that you arrange through your wireless service provider. Before you can take advantage of any of these Network Services, you must subscribe to them through your service provider and obtain instructions for their use from your service provider.

TROUBLESHOOTING

This chapter lists some problems that you might encounter while using your phone. Some problems require that you call your service provider, but most of problems you encounter are easy to correct yourself.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
SIM error	There is no SIM card in the phone or you may have inserted it incorrectly.	Make sure that the SIM card is correctly inserted.
No connection to the network	Signal weak Outside GSM network	Move higher to a window or open space. Check service provider coverage map.
Codes do not match	When you want to change a security code you have to confirm the new code by entering it again. The two codes that you have entered do not match.	Contact your Service Provider.
Function cannot be set	Not supported by Service Provider or registration required	Contact your Service Provider.
Calls not available	Dialling error New SIM card inserted Charge limit reached	New network not authorised. Check for new restrictions. Contact Service Provider or reset limit with PIN 2.
Phone cannot be switched on	On/Off key pressed too briefly Battery empty Battery contacts dirty	Press On/Off key for at least two seconds. Charge battery. Check charging indicator in the display. Clean contacts.

MESSAGE	POSSIBLE CAUSES	POSSIBLE CORRECTIVE MEASURES
Charging error	Battery totally empty	Charge battery.
	Temperature out of range	Make sure the ambient temperature is right, wait for a while, and then charge again.
	Contact problem	Check power supply and connection to the phone. Check the battery contacts, clean them if necessary.
	No mains voltage	Plug in to a different socket or check voltage.
	Charger defective	If the charger does not warm up, replace it.
	Wrong charger	Only use original LG accessories.
	Battery defective	Replace battery.
Phone loses network	Signal too weak	Reconnection to another service provider is automatic.
Number not permitted	The Fixed dial number function is on.	Check settings.

TECHNICAL DATA

General

Product name : KE850
System : GSM 900 / DCS 1800 / PCS 1900

Ambient Temperatures

Max. : +55°C (discharging)
+45°C (charging)
Min : -10°C

Declaration of Conformity

LG Electronics

Suppliers Details

Name

LG Electronics Inc

Address

: LG Twin Tower 20, Yeuido-dong, Yeoungdeungpo-gu Seoul, Korea 150-721

Product Details

Product Name

E-GSM 900 / DCS 1800 / PCS 1900 / Tri Band Terminal Equipment

Model Name

KE850

Trade Name

LG

CE 0168

Applicable Standards Details

R&TTE Directive 1999/5/EC

EN 301 489-01 v1.6.1 / EN 301 489-07 v1.3.1 / EN 301 489-17 v1.2.1
EN 300 328 V 1.6.1
EN 60950-1 : 2001
EN 50360VEN 50361 : 2001
EN 301 511 V9.0.2

Supplementary Information

The conformity to above standards is verified by BABT.

Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name	Issued Date
Jin Seog, Kim / Director	11. September. 2006

Signature of representative

LG Electronics Logitics and Services B.V
Veluwezoom 15, 1327 AE Almere, The Netherlands
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

LG

Life's Good

Warranty Card
產品保用證

Mobile Phone
手提電話

HK_WC_0426 2007.4.26 6:6 PM Page 2

Warranty Card
產品保用證

Life's Good

LG Customer Care Centre
客戶維修服務中心

Welcome to contact for detailed information & Customer Care Centre address
歡迎致電查詢詳細資料及維修服務中心地址

Customer Service Hotline 客戶服務熱線 : (852) 3543 7777
E-mail Us 客戶查詢電郵 : cshelpdesk@lge.com
LG Website 瀏覽網站 : hk.lge.com

Thank you for your purchase of LG Electronics product under the terms and conditions listed on this warranty card.
多謝閣下購買及使用本公司之產品，請參閱保用證所列之產品保用條款。

IMPORTANT : Please keep and present this warranty card and purchase invoice when services are rendered. Otherwise, this warranty will be voided.
重要事項：顧客請保留此保用證和購貨發票，並需在檢查／維修時出示，否則保用無效。

HK_WC_0426 2007.4.26 6:6 PM Page 3

HK Area
香港地區

Mobile Phone Warranty Policy

手提電話保用條款

(1) LG Electronics Hong Kong Limited (hereafter LGEHK) provides warranty period from the date of purchase are as follows and only valid for mobile purchase in Hong Kong only (any promotion gift item is not included) :
(i) Handset :12 months (ii) Charger :6 months
(iii)Battery :6 months (iv) Hand free earphone :3 months.
(2) Warranty is valid only for authorized product; parallel import and counterfeit product are invalid.
(3) Product is under warranty against manufacturing defects by reason of faulty workmanship or internal electronic parts materials. This warranty does not cover defects arising from natural wear of the product (including casing, key pad, display, antenna, and accessories. etc.)
(4) If check-up or repairing are required, customer must present the original invoice and warranty card on which the relevant IMEI number was printed. Upon any failure to present the above documentation, customer must pay for the costs of the services provided.
(5) All parts replaced within the warranty period are the property of LGEHK. We have rights to handle those parts as necessary.
(6) Data stored in handsets may be lost after the repair and thus should be properly stored by customer beforehand.
(7) Warranty will be voided under the following conditions, and LGEHK reserves the right to refuse providing service and/or shall demand charges for any costs of servicing from customer :
(i) Product has been tampered with or undergone unauthorized repair by third parties, improper installation, alternation or modification to this product, or damage, tearing, removal of the warranty sticker that is affixed to this product.
(ii) Defects arising from misuse, mishandling, abuse, accident, negligence and damage caused directly or indirectly by fire, flood, liquid water, corrosion, convulsion of nature, war, riot or civil commotion.
(iii) The IMEI number sticker on this product has been erased or modified.
(iv) The content of warranty policy has been modified without authorization.
(8) LGEHK is not responsible for any loss of data or system corruption during the process of transportation or repair to and from the Service Centre and due to the forces of nature.
(9) LGEHK reserves the right to terminate or modify the terms of this warranty card. For exceptional cases, subject to report of our investigation, we reserve the right to terminate this warranty card or modify terms of warranty policy.
(10) Our company will not be liable for any loss directly or indirectly caused by the breakdown of the product.
(11) This warranty card is restricted within Hong Kong SAR only.

(1) 本公司爲客戶提供保修期如下，只適用於香港購買之手機，並不包括各促銷活動之贈品(由購買日起計)
(i) 機身：12個月 (ii)充 電 器：6個月
(iii)電池：6個月 (iv)免提耳機：3個月

(2) 保修服務只適用於原裝行貨，水貨及冒牌貨均屬無效。

(3) 此保修只適用於生產上的瑕疵，如電子零件偶然出現毛病，並不包括手機的自然磨損包括外殼、鍵盤、顯示屏、天線、附件等。

(4) 用戶要求維修服務時，須同時攜同手機、保用證及印有IMEI號碼之有效發票正本到本公司指定之維修中心進行維修，否則保修服務無效，客戶須繳付維修費用。

(5) 在保修期內維修更換后的所有零件、配置及附件，均屬本公司所有，本公司有權作出任何處理。

(6) 手機內存資料有可能因維修后遺失，請顧客要自行保存。

(7) 在下列情況下本保用證將自動失效，本公司有權拒絶維修該手機或向客人徵收所有的維修費用。
(i) 手機曾作未許可之維修、不適當的安裝、更改、或貼於其上的維修貼紙遭受損毀、撕破、除去、保修服務即無效。
(ii) 手機曾被錯誤使用、錯誤處理、疏忽使用、直接或間接意外由火、液體、火災、腐蝕、地震、戰争、暴亂或天災所造成的損壞。
(iii)手機上的IMEI號碼貼紙一經修改或除去，保修服務即無效。
(iv) 擅自修改本保用證的內容。

(8) 本公司將對任何於使用、維修或運送時引致之系統錯誤及資料流失、或因天然災害、意外事件造成之損失概不負責。

(9) 本保用證的發出及終止權均屬本公司所有。就不明的情況或個案，經審查後，本公司有權發出或終止本保用證。

(10)本公司將不負責由於產品損壞而直接或間接引致之任何損失。

(11)此保用證只適用於香港特別行政區範圍內。

HK_WC_0426 2007.4.26 6:6 PM Page 4

服務承諾

- 服務員親切熱情的服務態度
- 多用途互動訊息系統
- 完善售後服務，提供專業的保養服務
- 爲客戶介紹及推薦最新產品
- 有效率和快捷的服務
- 不斷創新產品，給客戶無限驚喜

HK_WC_0426 2007.4.26 6:6 PM Page 5

Stamp

To:

LG Electronics HK Ltd.
North Point Post Office Box No.54509
香港北角郵政信箱54509號

Limited Warranty
限期保用證

To provide our best after-sales service,
please complete and return this warranty card to us.
您的寶貴意見能使我們的服務更加完善，
請填妥及寄回此保用證以享受閣下尊有的售後服務。

Customer Information
客戶資料

Purchaser's Name:
客戶姓名

Address:
地址

E-mail:
電郵

Mobile:
手提電話

Home:
家居電話

Model No.:
型號

IMEI No.:
機身IMEI編號

Date of Purchase:
購買日期

Invoice/Sales Docket No.:
購買單據編號

HK_WC_0426 2007.4.26 6:6 PM Page 7

Retailer Information
零售商資料

Retailer's Name:
零售商名稱

Address:
地址

Comments
意見要求

HK_WC_0426 2007.4.26 6:6 PM Page 8